

Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).

2.  NOTICE: Make sure that all openings are sealed.

1. Torque: 15 Nm

2. Torque: 17 Nm

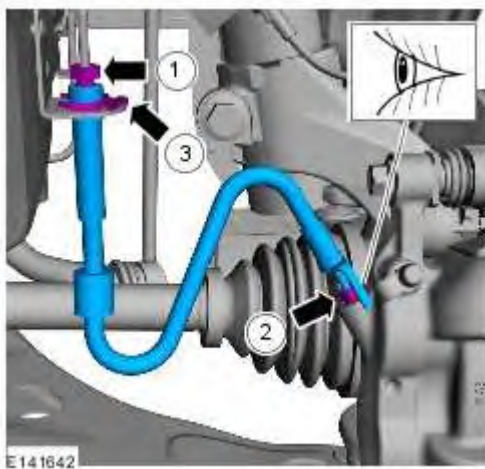

Installation

1. To install, reverse the removal procedure.
2. Refer to: [Component Bleeding](#) (206-00 Brake System - General Information, General Procedures).