


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. If equipped.

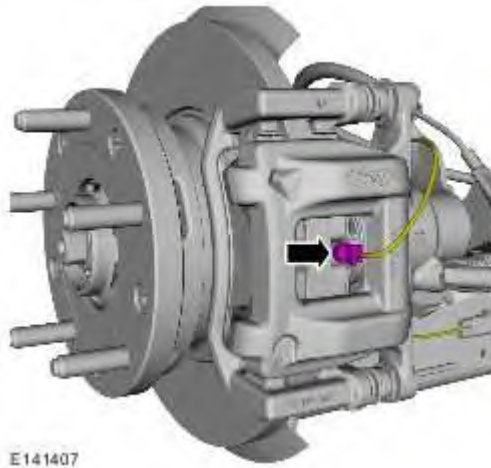

3. Loosen: 90°

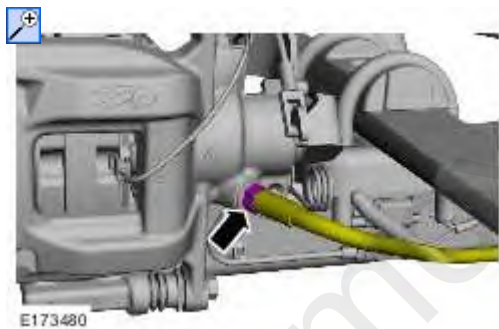


- 4.

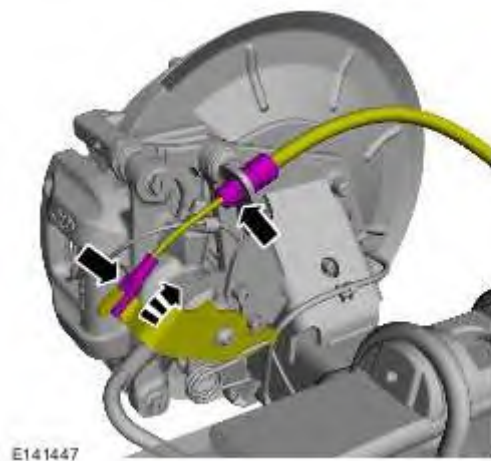

5.  NOTICE: Make sure that no load is placed on the brake hose.

Torque: 31 Nm

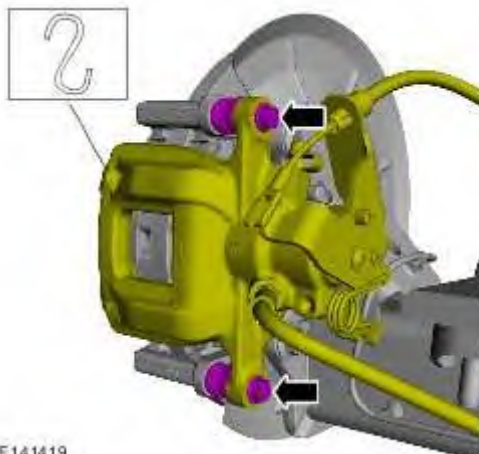

6.  **NOTICE:** Make sure that all openings are sealed.

Torque: 18 Nm



Installation

1. To install, reverse the removal procedure.
2. Refer to: [Component Bleeding](#) (206-00 Brake System - General Information, General Procedures).