

Removal and Installation


Special Tool(s)

	206-085 Retractor, Rear Brake Caliper Piston
---	---

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. If equipped.

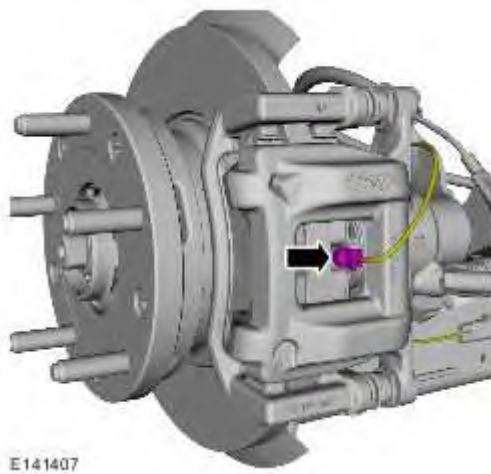


3.  **NOTICE:** Make sure that no load is placed on the brake hose.

Torque: 31 Nm

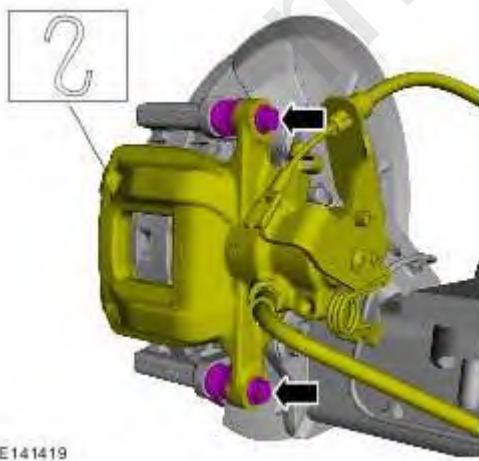


4. **NOTE:** Note the position of the components before removal.
NOTE: Make sure that the mating faces are clean and free of foreign material.

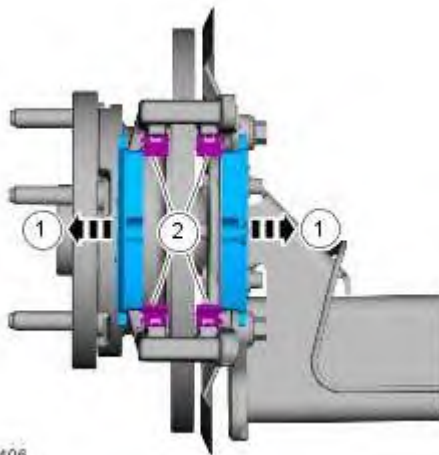

E141406


Installation

1. **NOTE:** Make sure that the components are installed to the position noted before removal.
To install, reverse the removal procedure.
- 2.

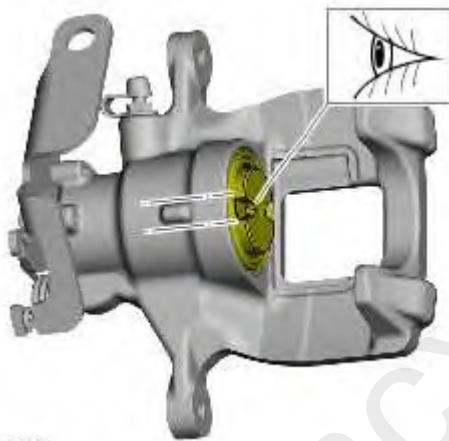

E170379

- 3.

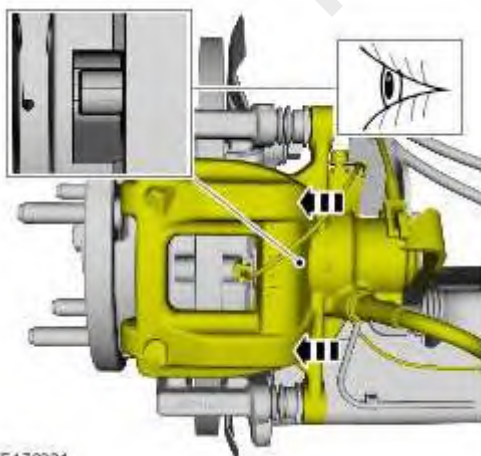


E170381

4. Depress the brake pedal, check the brake fluid level in the brake fluid reservoir and top up as necessary with brake fluid

Refer to: [Specifications](#) (206-00 Brake System - General Information, Specifications).

Vehicles with single rear wheels

5. *Install Special Service Tool: 206-085.*

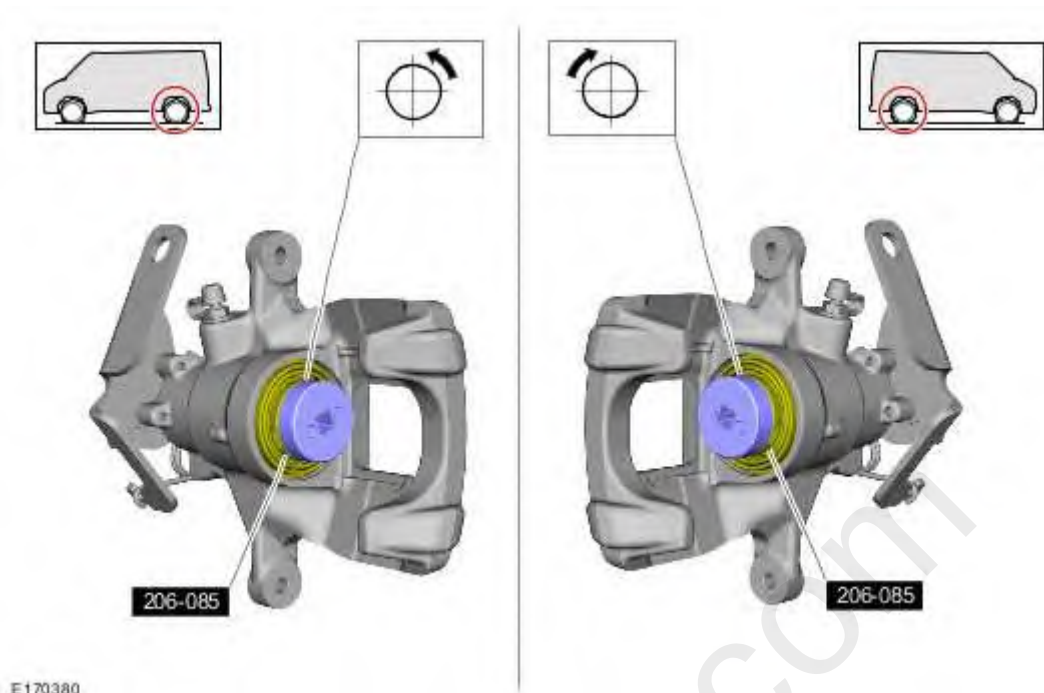

Vehicles with twin rear wheels

6. *Install Special Service Tool: 206-085.*

