

Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).



NOTICE: Make sure that all openings are sealed.


2. Torque: 15 Nm

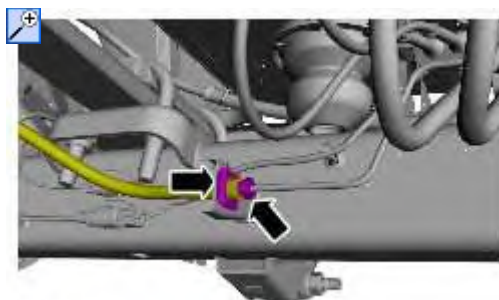

E141436

Vehicles with twin rear wheels


3. Torque: 18 Nm

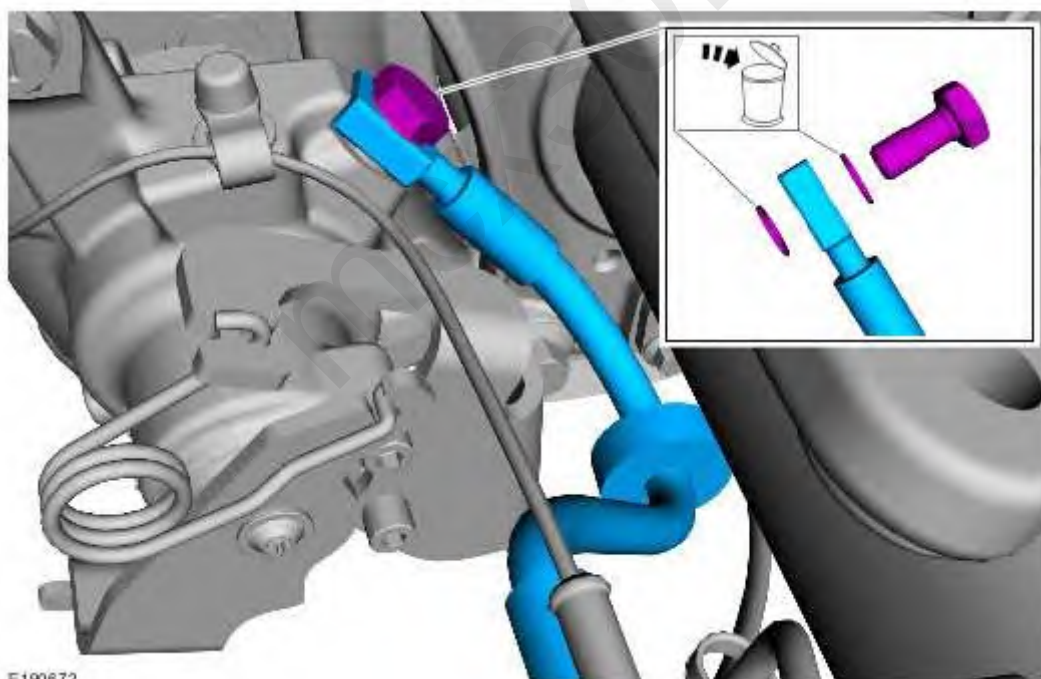

E190672

Vehicles with single rear wheels

4. Torque: 18 Nm

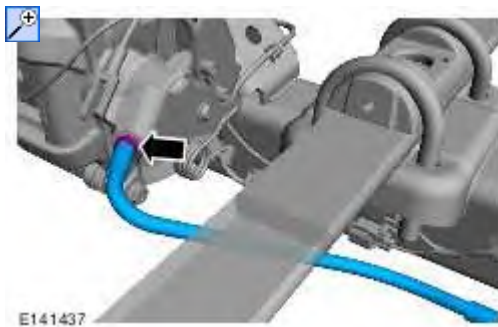

Installation

1. To install, reverse the removal procedure.
2. Refer to: [Component Bleeding](#) (206-00 Brake System - General Information, General Procedures).

mcx30.com