


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Battery](#) (414-01 Battery, Mounting and Cables, Removal and Installation).
- 2.

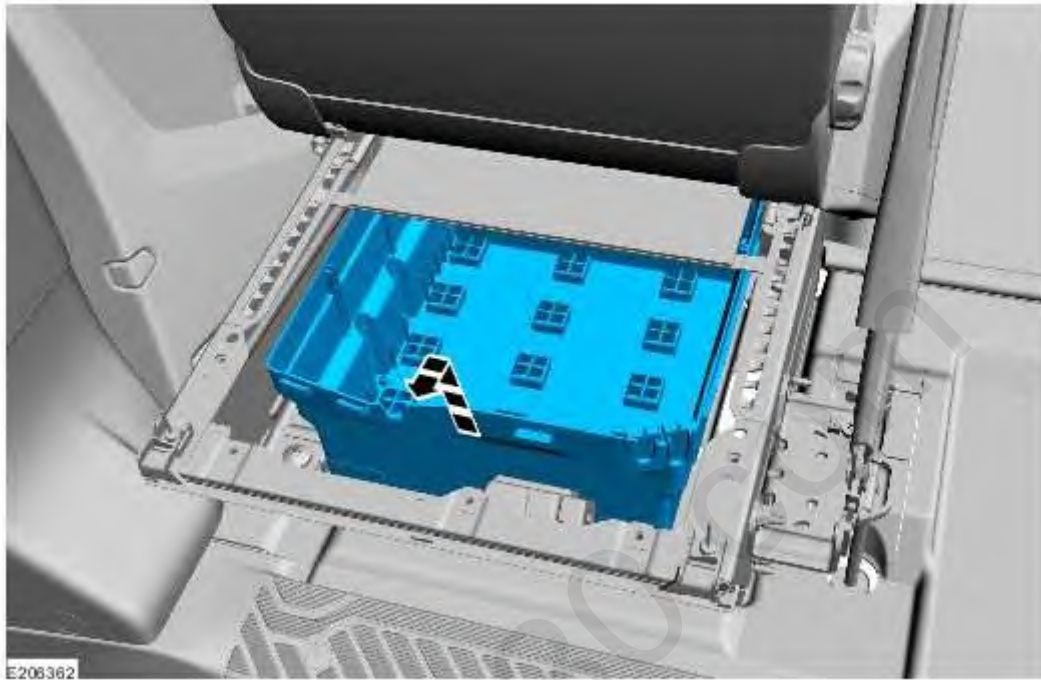

- 3.

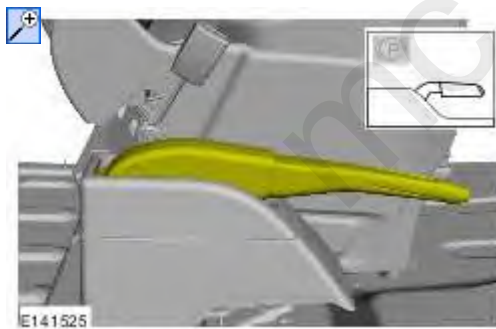


4. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
5. *Loosen: 5 turn(s)*

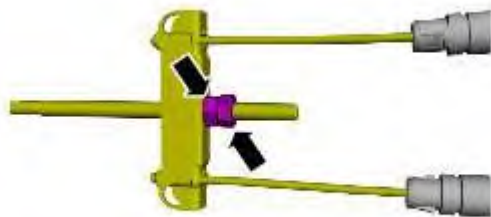

E72945


6. Refer to: [Floor Console](#) (501-12 Instrument Panel and Console, Removal and Installation).

7.

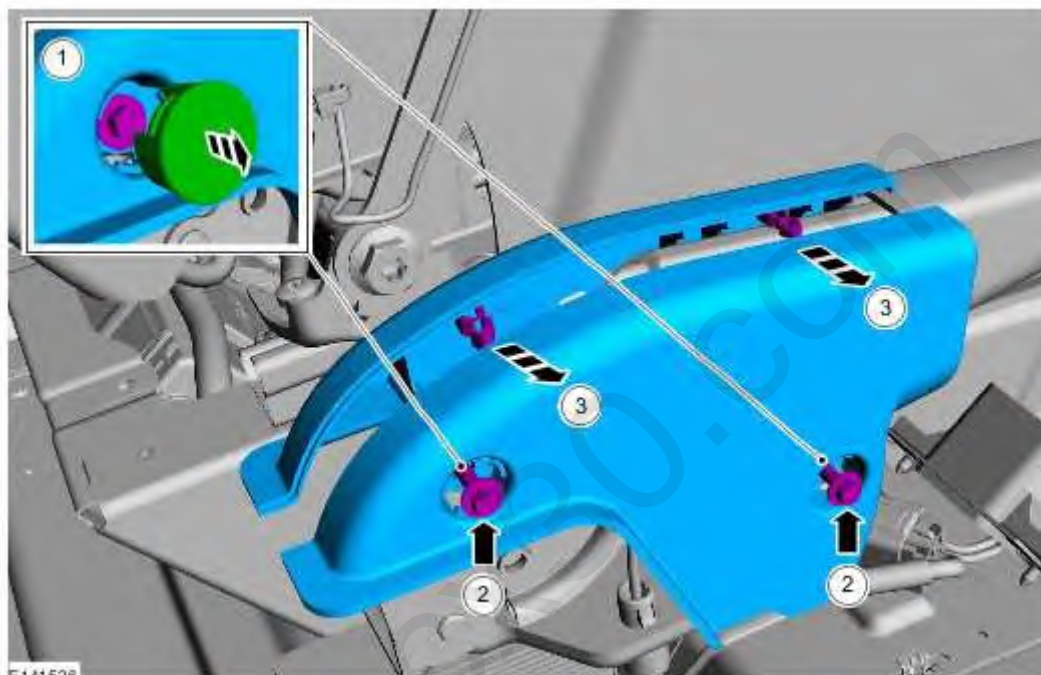

E141526

8.

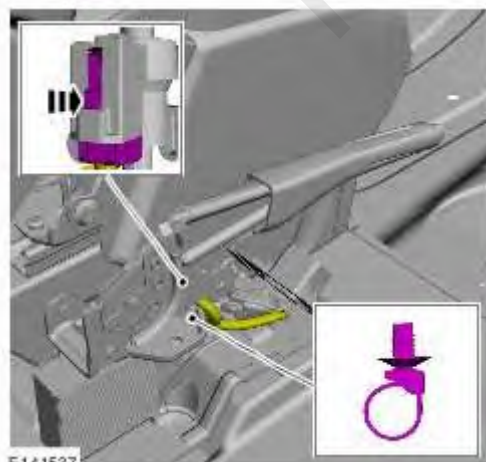


E141537


9.



10.

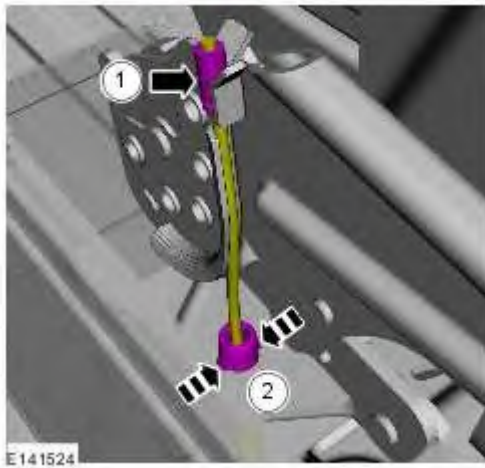

11. *Torque: 22 Nm*

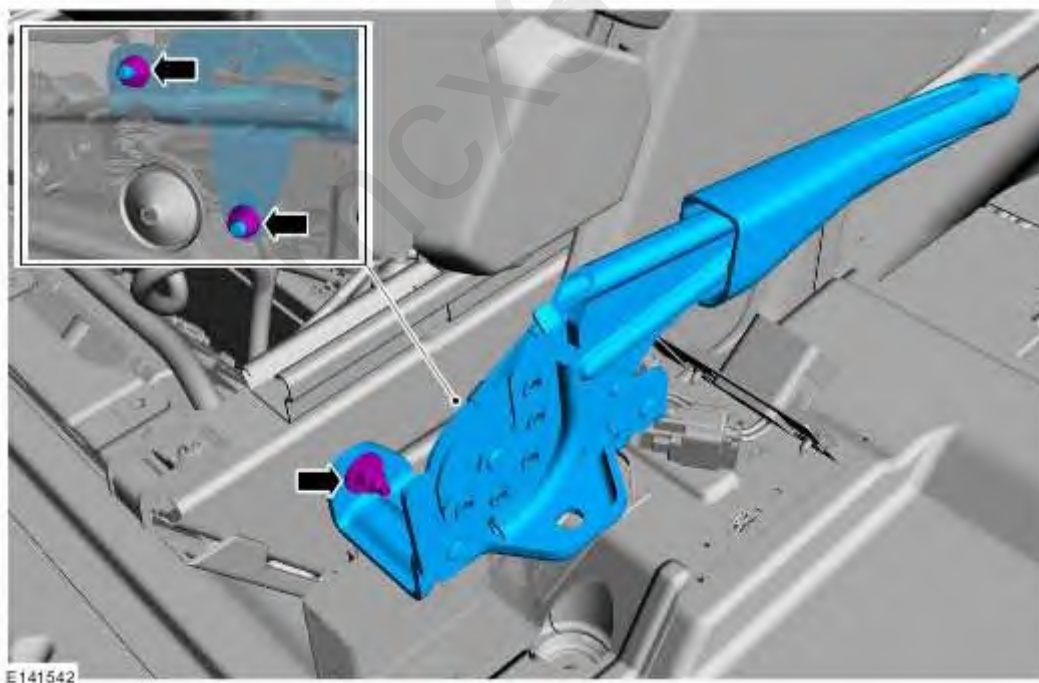

Installation

1. To install, reverse the removal procedure.
2. Refer to: [Parking Brake Cable Adjustment](#) (206-05 Parking Brake and Actuation, General Procedures).

