


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Loosen: 5 turn(s)

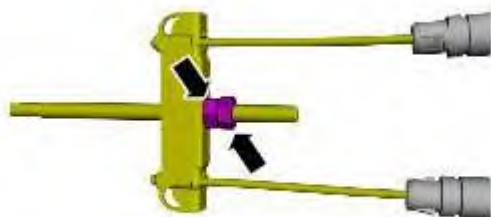


E72945

3.

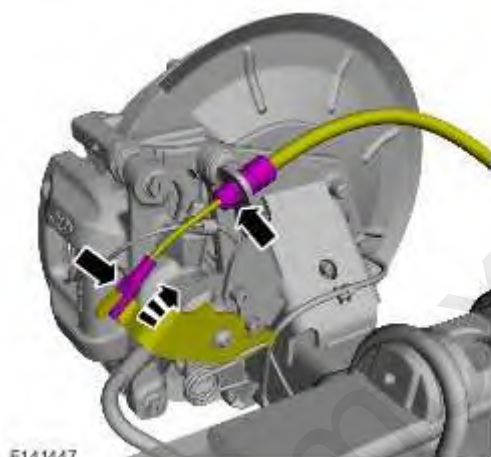


E141447

4. NOTE: Note the position of the components before removal.
NOTE: Make sure that the components are installed to the position noted before removal.

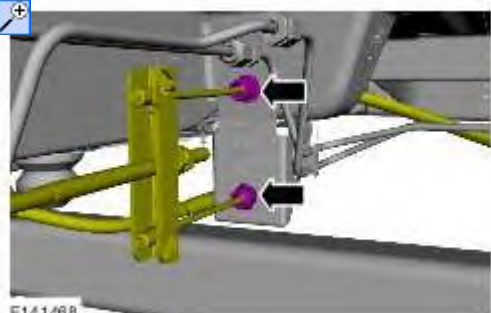


E141488

5.

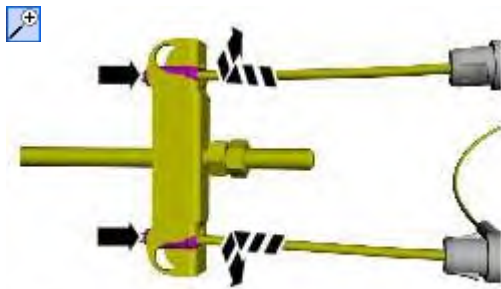

E141469

6. Torque: 22 Nm

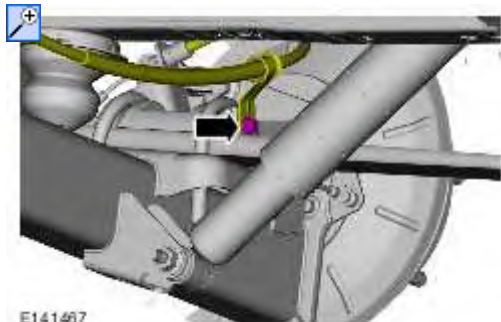


E141467

Vehicles with front wheel drive (FWD)

7. NOTE: Note the position of the components before removal.
NOTE: Make sure that the components are installed to the position noted before removal.

Torque: 22 Nm

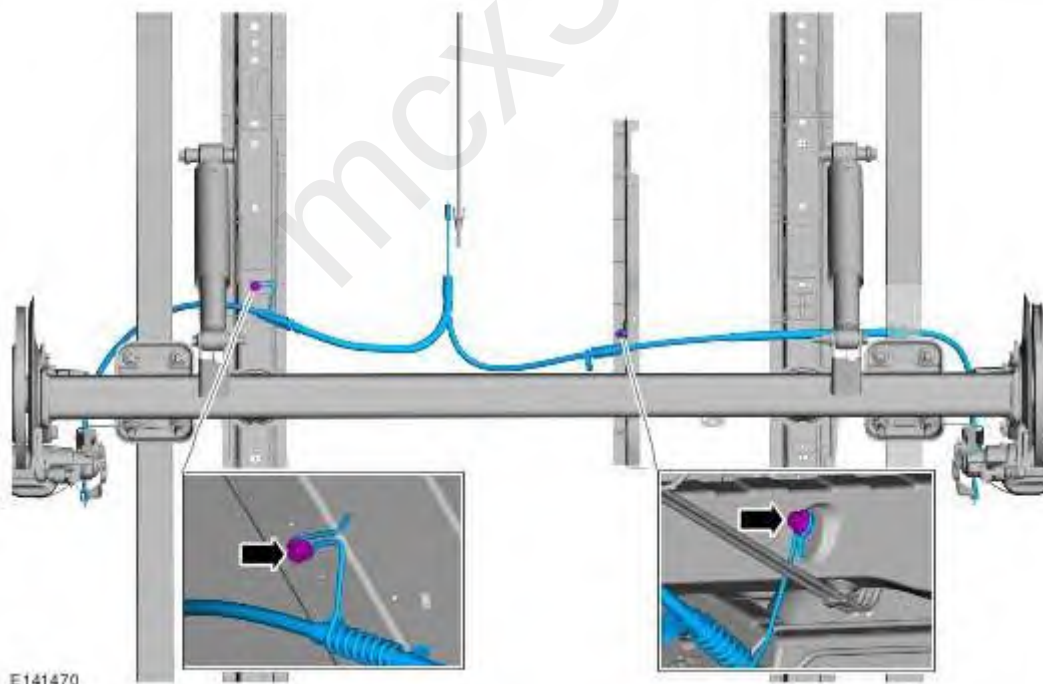


E141470

Vehicles with rear wheel drive (RWD)

8. NOTE: Note the position of the components before removal.
NOTE: Make sure that the components are installed to the position noted before removal.

Torque: 22 Nm

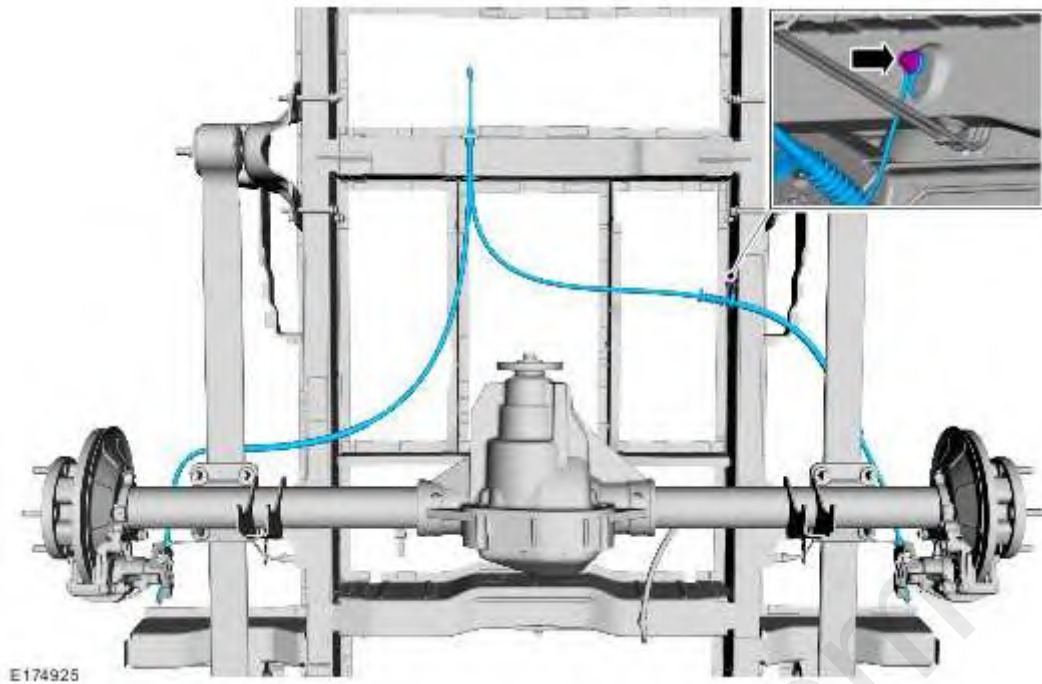

Installation

1. To install, reverse the removal procedure.
2. Refer to: [Parking Brake Cable Adjustment](#) (206-05 Parking Brake and Actuation, General Procedures).