

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1.




2.

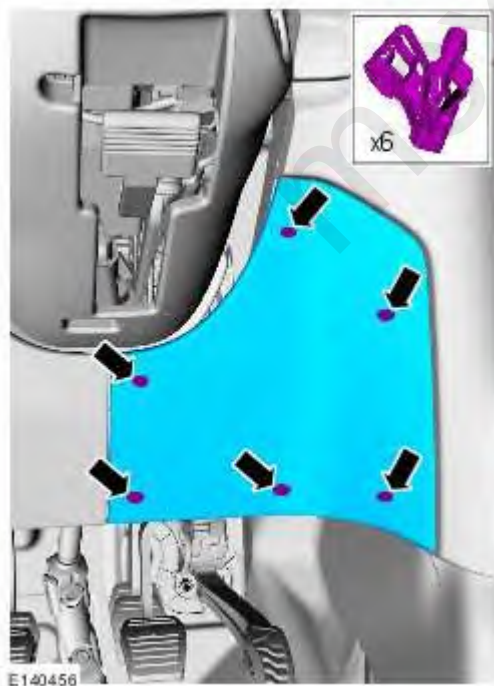


3. Refer to: [Steering Column](#) (211-04 Steering Column, Removal and Installation).

4. NOTICE:


- ⚠ Make sure that the clutch pedal remains in the rest position.
- ⚠ Make sure that the brake pedal remains in the rest position.

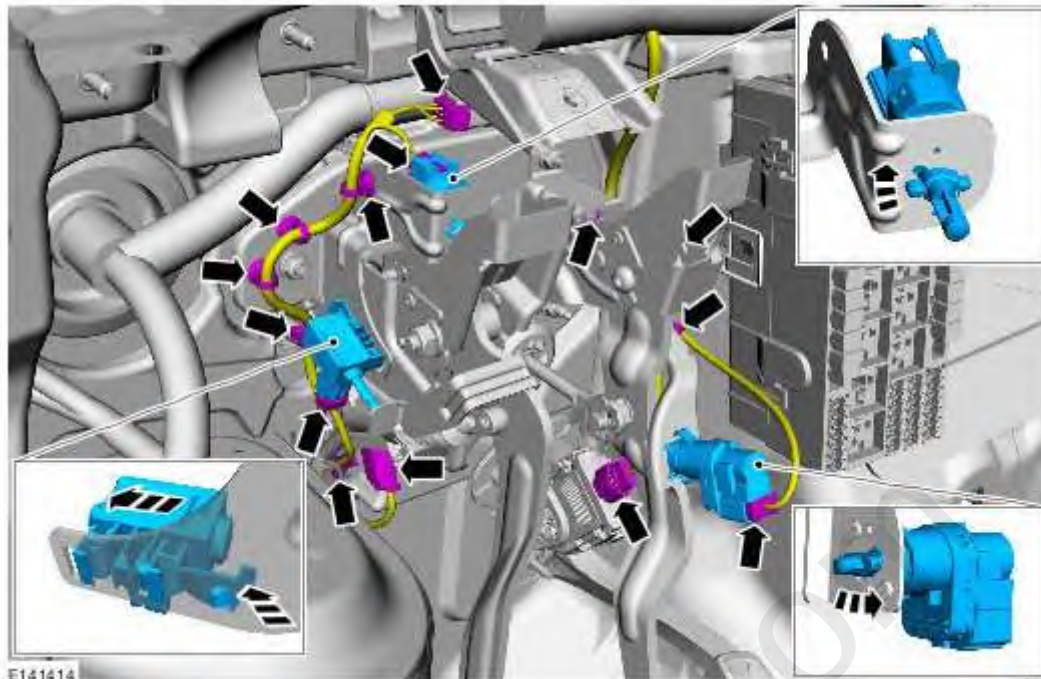

5. Refer to: [Clutch Master Cylinder](#) (308-02 Clutch Controls, Removal and Installation).
- 6.

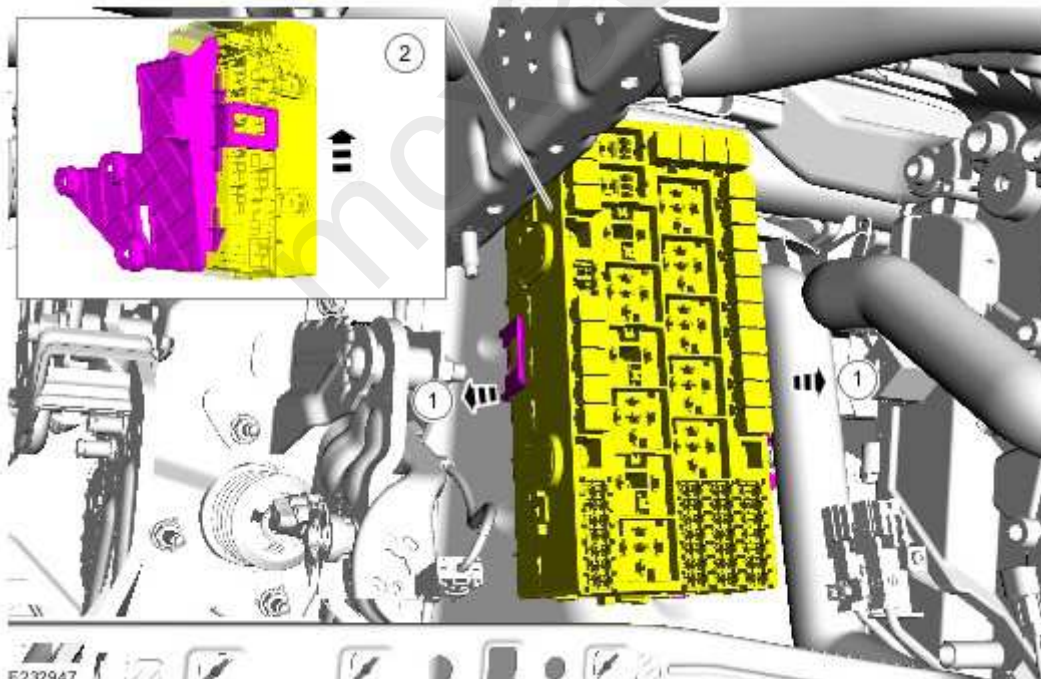


7. Refer to: [Stoplamp Switch](#) (417-01 Exterior Lighting, Removal and Installation).
8. ⚠ NOTICE: Make sure that the brake booster vacuum is released.

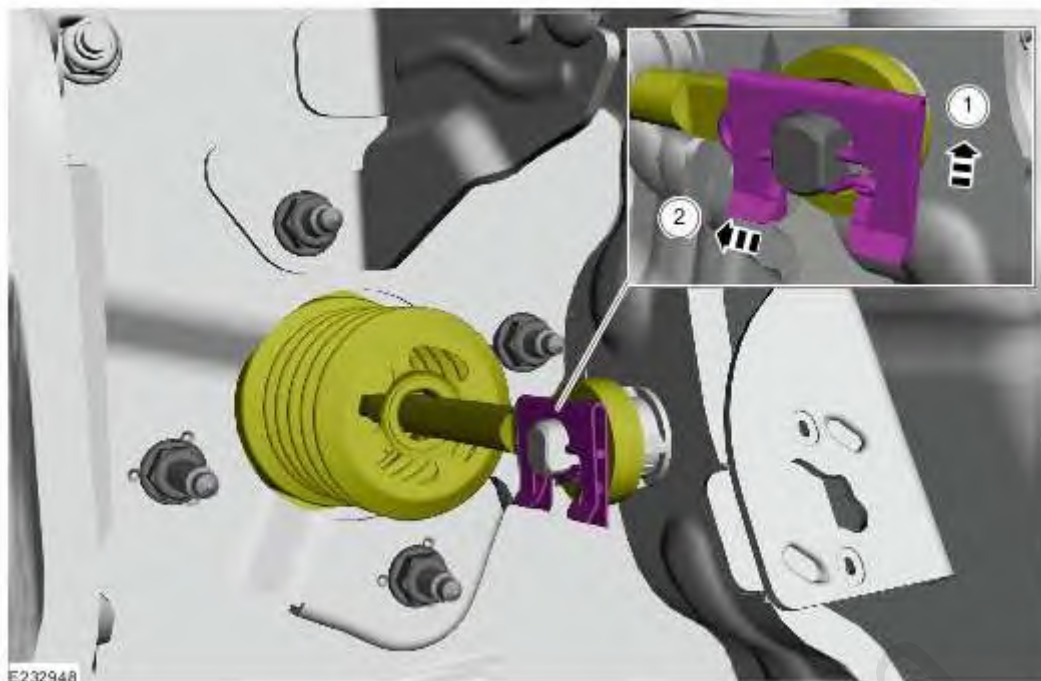

9. Support the brake booster.

Torque: 20 Nm

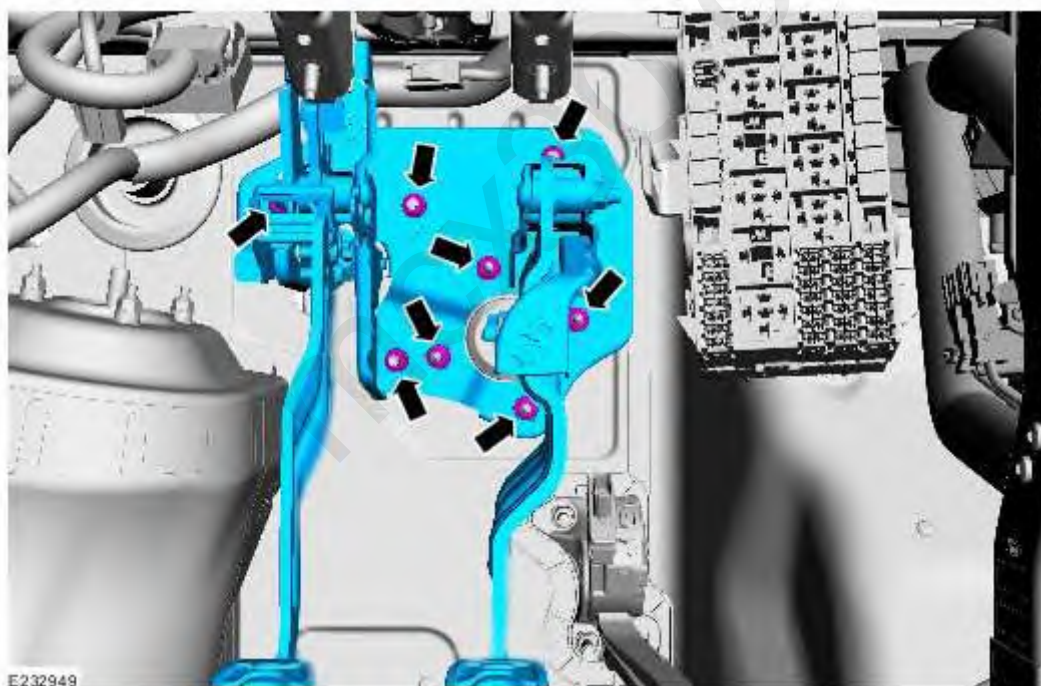

Installation

1. **NOTICE:**



Make sure that the clutch pedal remains in the rest position.



Make sure that the brake pedal remains in the rest position.
To install, reverse the removal procedure.