


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1.

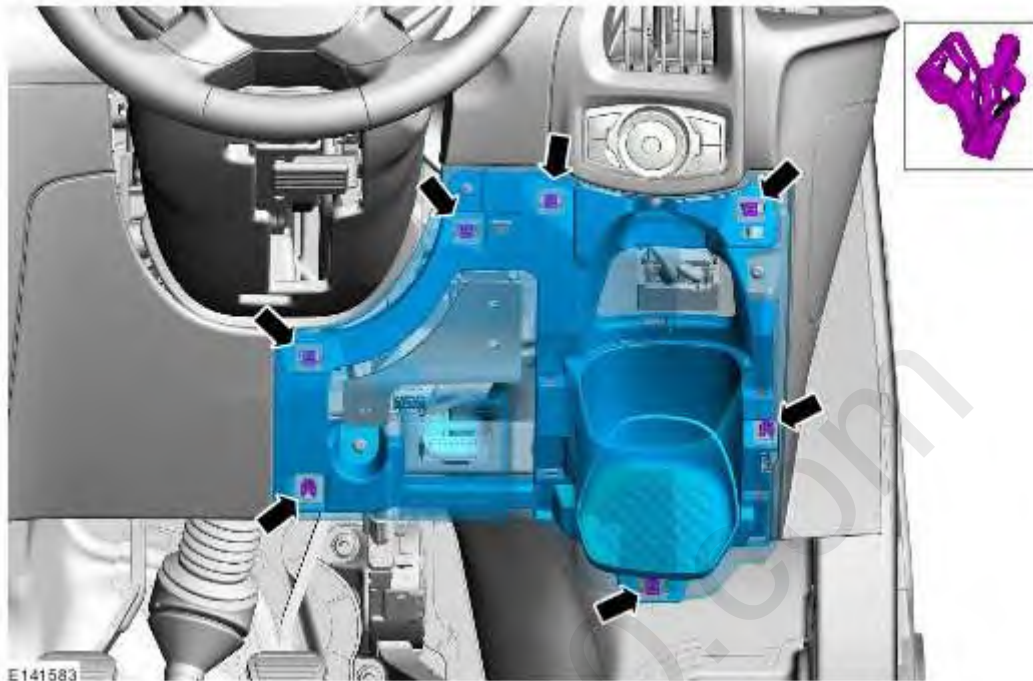


2.

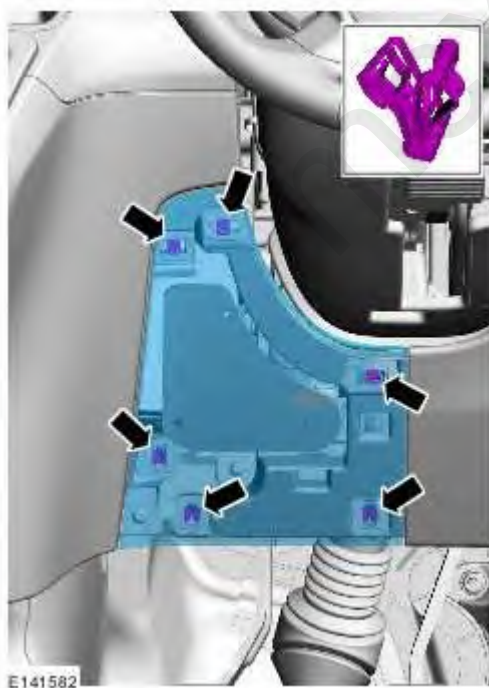


3. Refer to: [Accelerator Pedal](#) (310-02 Acceleration Control, Removal and Installation).

4. Refer to: [Clutch Master Cylinder](#) (308-02 Clutch Controls, Removal and Installation).

5. Refer to: [Steering Column](#) (211-04 Steering Column, Removal and Installation).
- 6.

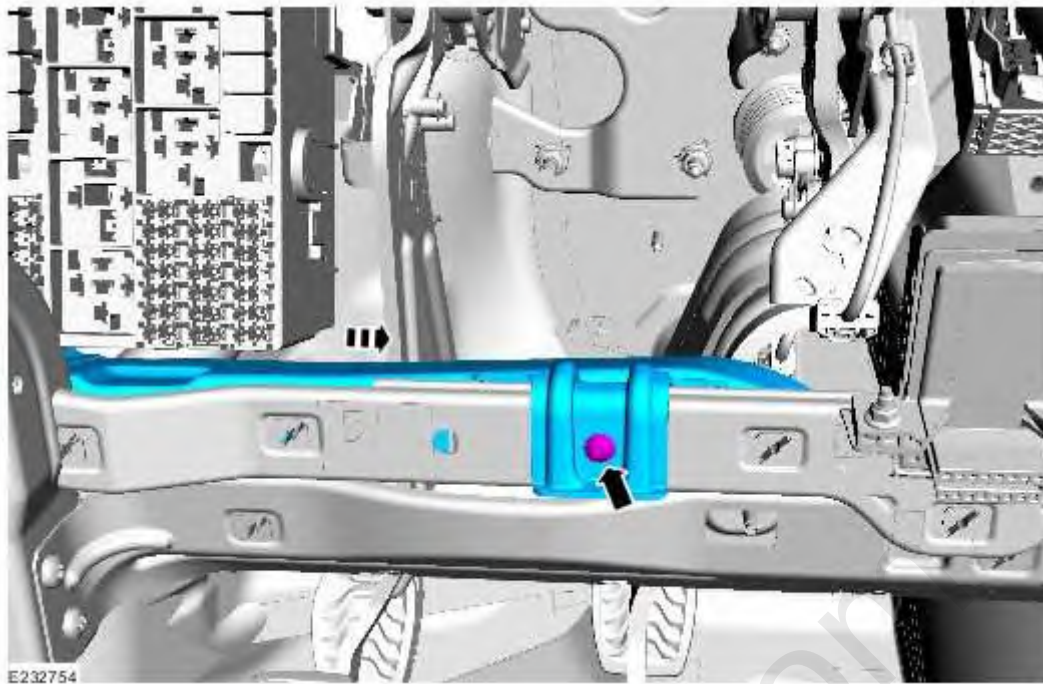

- 7.

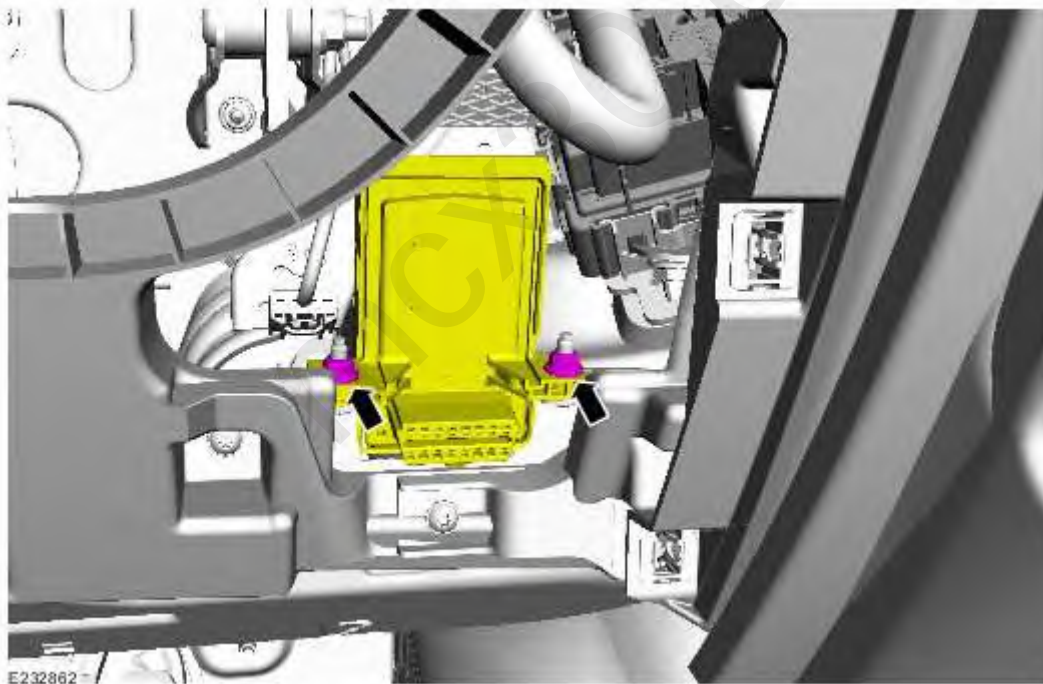


8. **NOTICE:**




Make sure that the clutch pedal remains in the rest position.




Make sure that the brake pedal remains in the rest position.

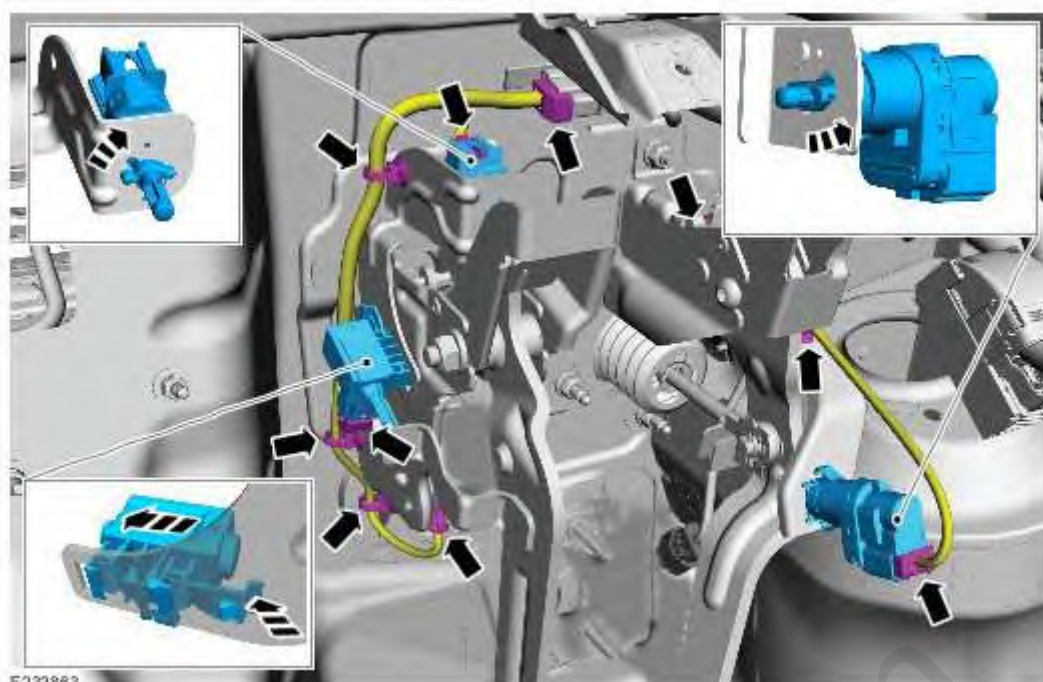

9.

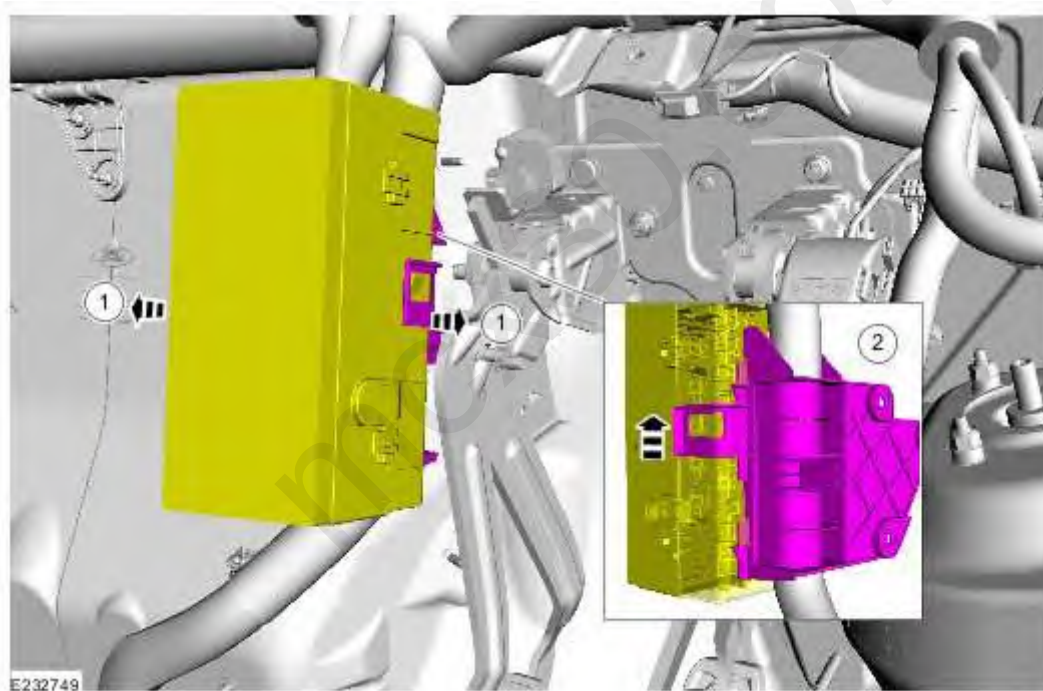


10. Torque: 10 Nm

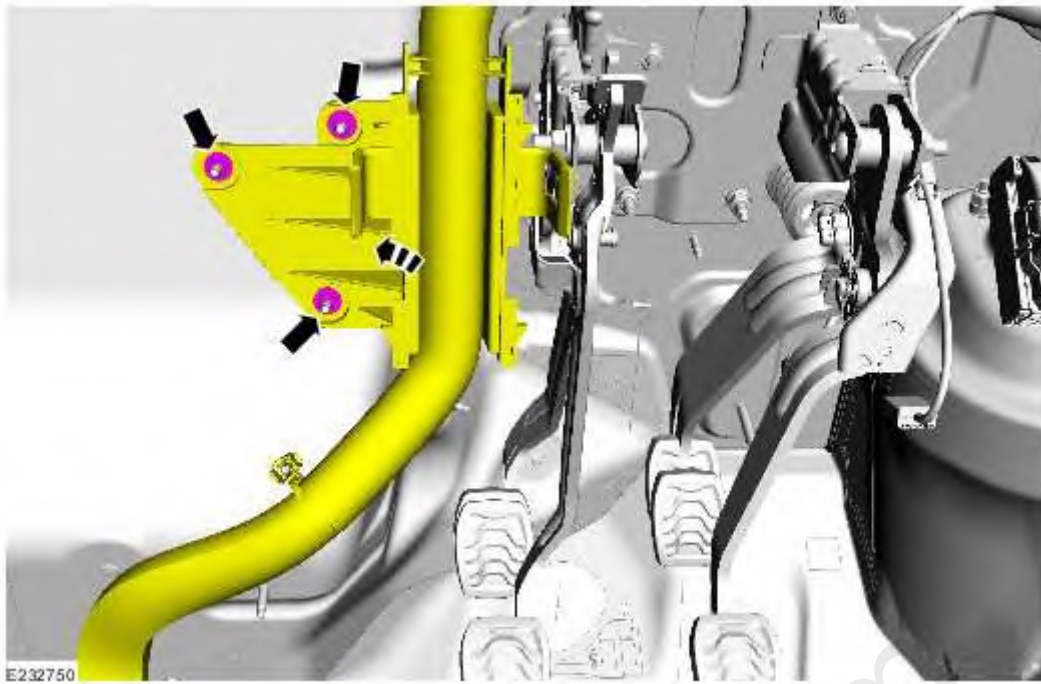

11. Refer to: [Stoplamp Switch](#) (417-01 Exterior Lighting, Removal and Installation).

12.  **NOTICE:** Make sure that the brake booster vacuum is released.

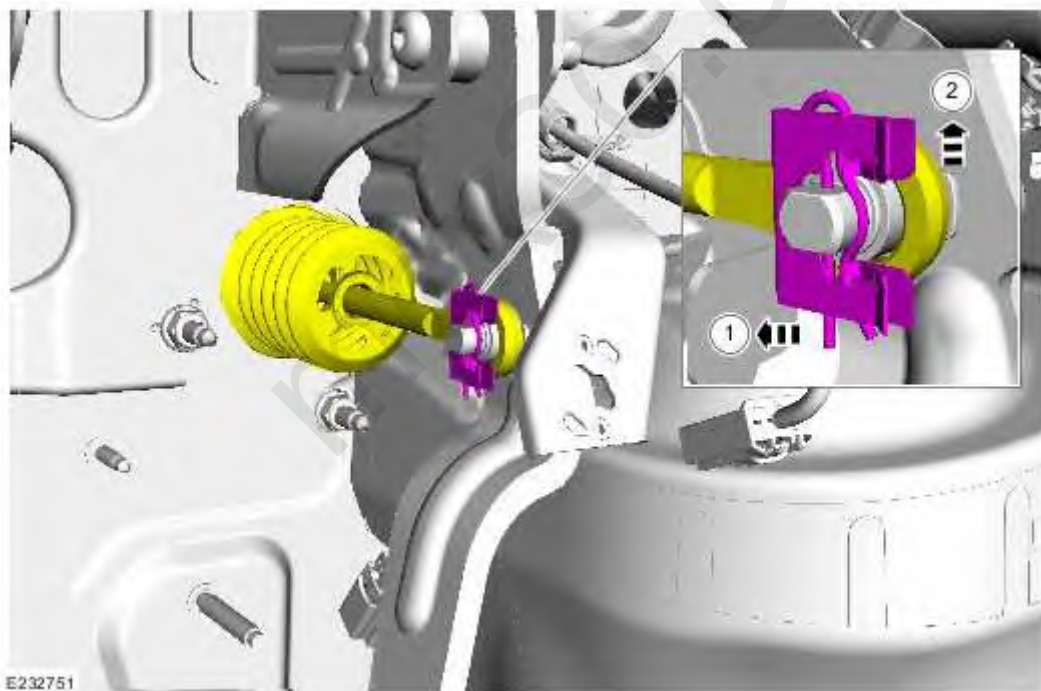

13. Torque: 20 Nm



14. Support the brake booster.

Torque: 20 Nm



Installation

1. NOTICE:



Make sure that the clutch pedal remains in the rest position.



Make sure that the brake pedal remains in the rest position.
To install, reverse the removal procedure.