

Removal and Installation

General Equipment

Brake/Clutch System Pressure Bleeder/Filler


Removal



NOTICE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.


NOTE: Removal steps in this procedure may contain installation details.

1. Use the General Equipment: [Brake/Clutch System Pressure Bleeder/Filler](#)

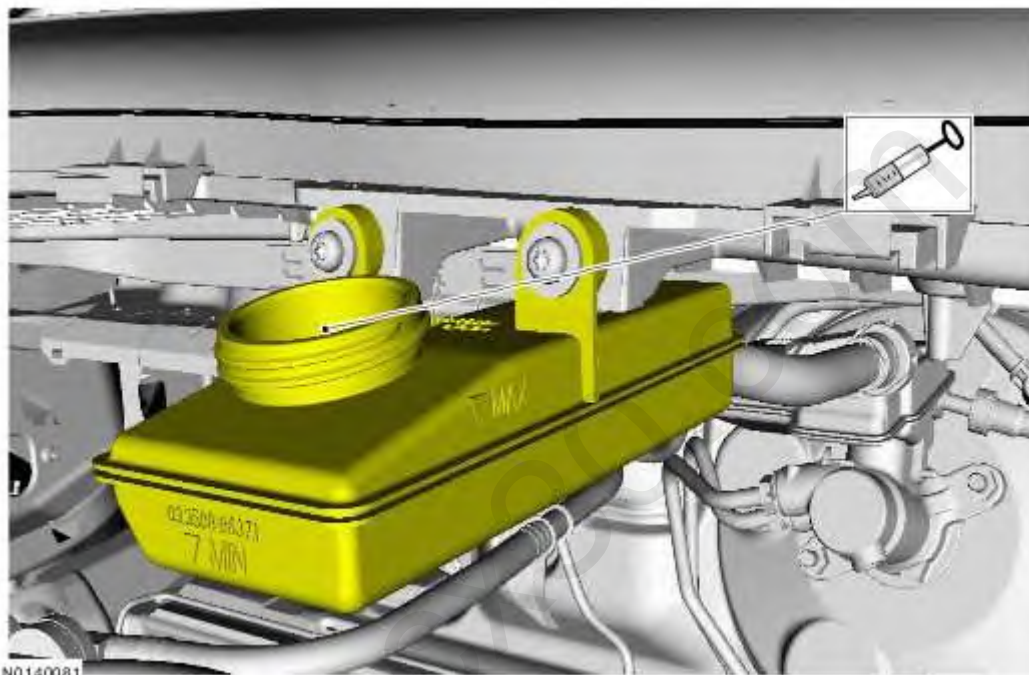


All vehicles

- 2.

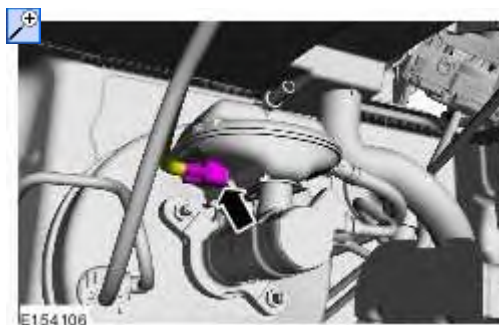

3.  **NOTICE:** Make sure that all openings are sealed.

- 1.
2. Torque: 18 Nm
3. Torque: 25 Nm

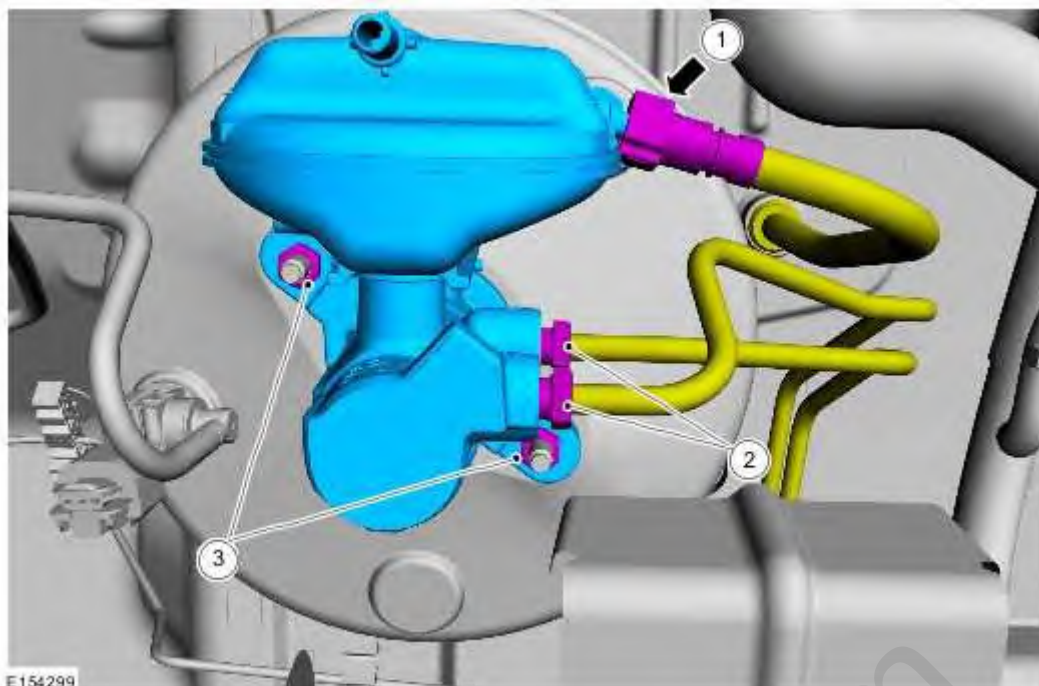

Installation

1. To install, reverse the removal procedure.
2.  **NOTICE:** An incorrectly set Stop Lamp Switch causes either over-heating brakes in the case of the pedal being pushed down or ABS faults in the case of it being lifted during Stop Lamp Switch installation. To avoid damages to the brake system, remove the Stop Lamp Switch and install with the brake pedal in neutral position.
Refer to: [Stoplamp Switch](#) (417-01 Exterior Lighting, Removal and Installation).
3. Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).