


### Removal and Installation

#### Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. NOTE: Make sure that the sensor housing is clean and free of foreign material.

*Torque: 11 Nm*

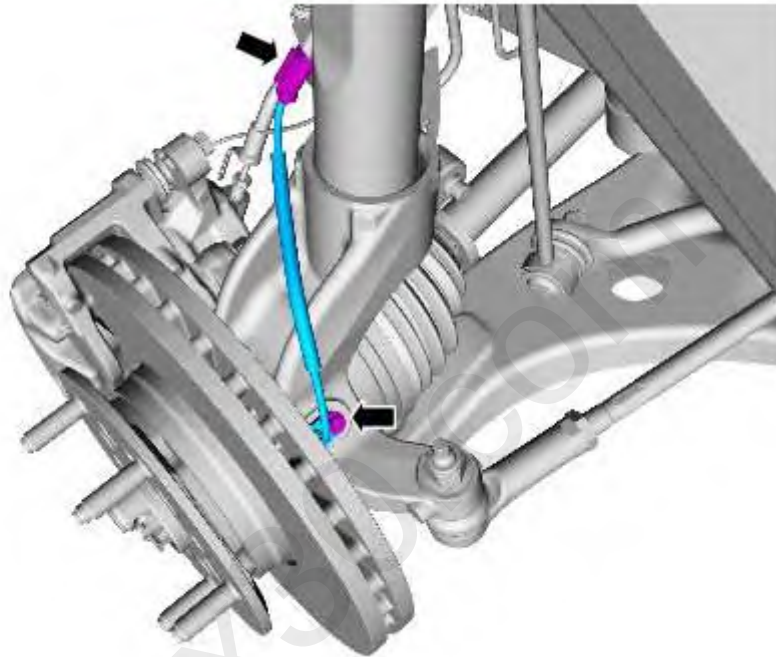

E146701

#### Installation

1. To install, reverse the removal procedure.