


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
- 2.

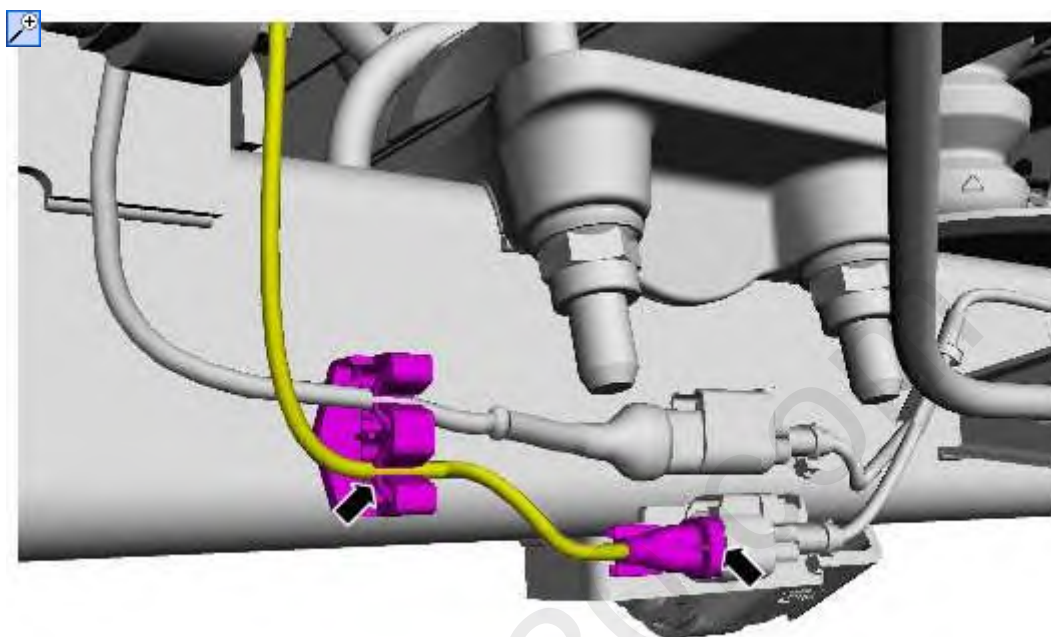

E146748

3. NOTE: Make sure that the sensor housing is clean and free of foreign material.

Torque: 11 Nm

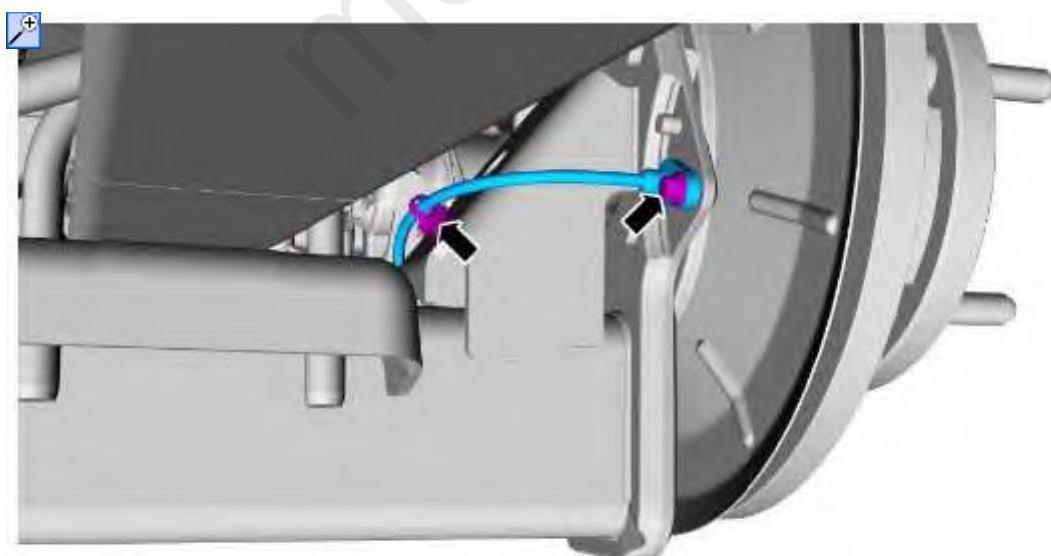

E146749

Installation

1. To install, reverse the removal procedure.

mcx30.com