

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the left-hand headlamp.


Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).

2. Wear an anti-static bracelet, connected to a suitable earthing point, to prevent electrostatic discharge (ESD) damage to internal components and integrated circuits.

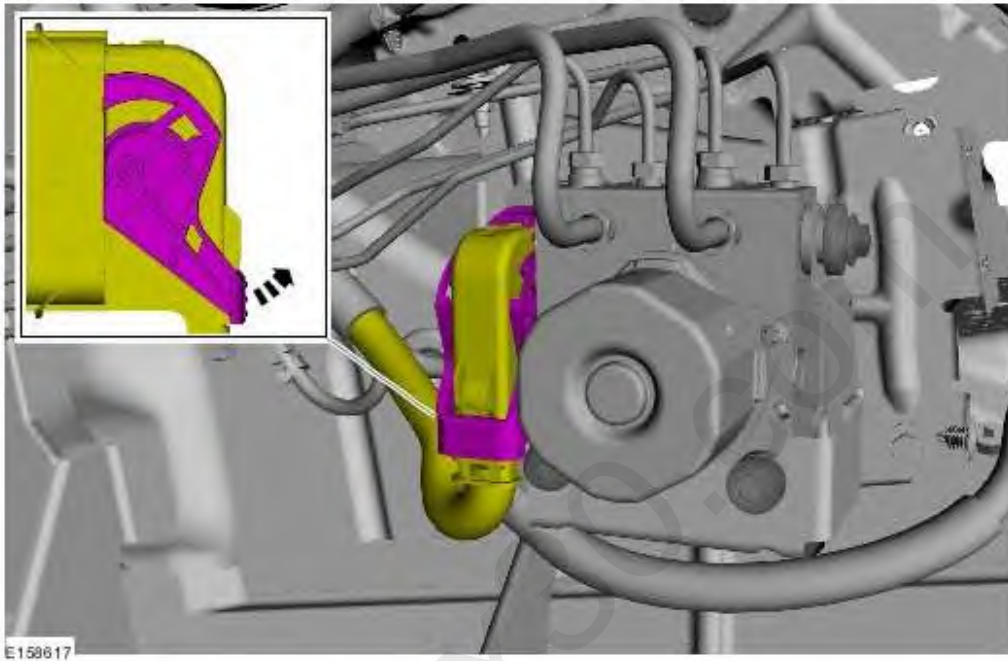

3.  **NOTICE:** Make sure that all openings are sealed.
NOTE: Note the position of the brake tubes to aid installation.

Torque: 18 Nm

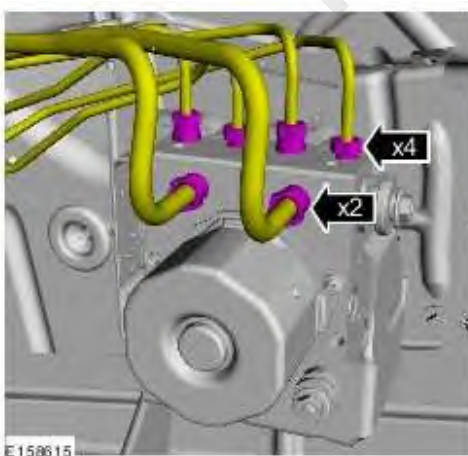

4. *Torque:* 20 Nm



Installation

1. NOTICE:



If accidentally dropped or knocked install a new hydraulic control unit (HCU) and module assembly.



The blanking caps/plugs must not be removed until the brake tubes are ready to be connected.

To install, reverse the removal procedure.

2. Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).