

### Removal and Installation


#### General Equipment

|                              |
|------------------------------|
| Flat Headed Screw Driver     |
| Hose Clamp Remover/Installer |


#### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Refer to: [Steering System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Use the General Equipment: [Flat Headed Screw Driver](#)

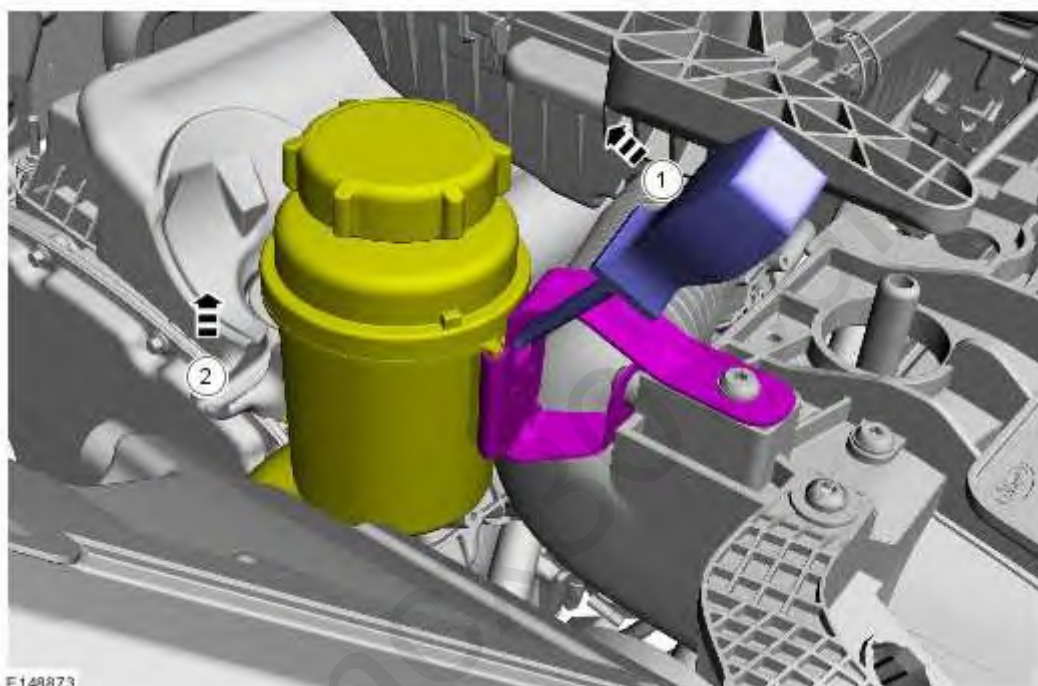

3. Use the General Equipment: [Hose Clamp Remover/Installer](#)

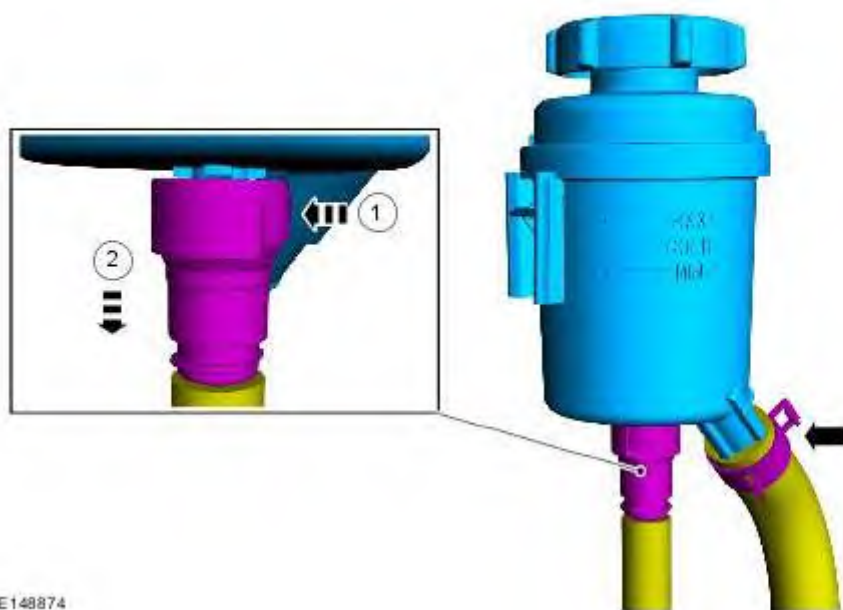

E148874

### Installation

1. To install, reverse the removal procedure.
2. Refer to: [Power Steering System Bleeding](#) (211-00 Steering System - General Information, General Procedures).