

Removal and Installation

General Equipment

Hose Clamp Remover/Installer

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Steering System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Use the General Equipment: [Hose Clamp Remover/Installer](#)



3. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
4. Use the General Equipment: [Hose Clamp Remover/Installer](#)



Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary when installing a new component.
Refer to: [Power Steering System Flushing](#) (211-00 Steering System - General Information, General Procedures).
3. **NOTE:** This step is not necessary when installing a new component.
Refer to: [Power Steering System Bleeding](#) (211-00 Steering System - General Information, General Procedures).