

Removal and Installation

General Equipment

6 mm Drill Bit

Removal

NOTE: Removal steps in this procedure may contain installation details.

1.




2.




3. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

4. Torque: 10 Nm

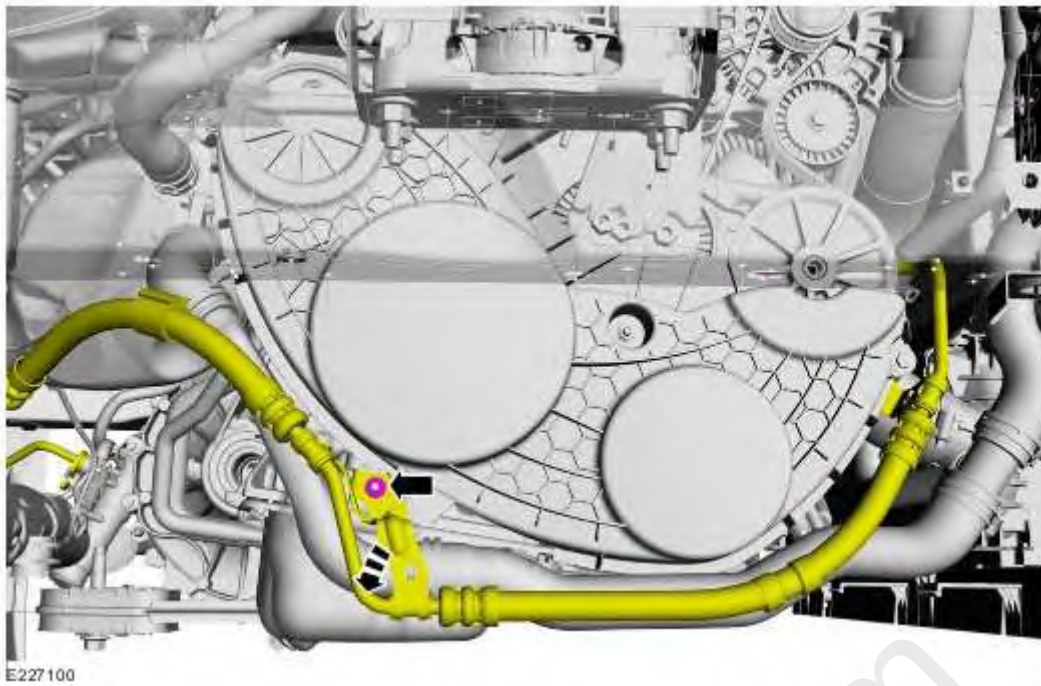


5. *Torque:*


- 1 10 Nm
- 2 10 Nm
- 3 9 Nm

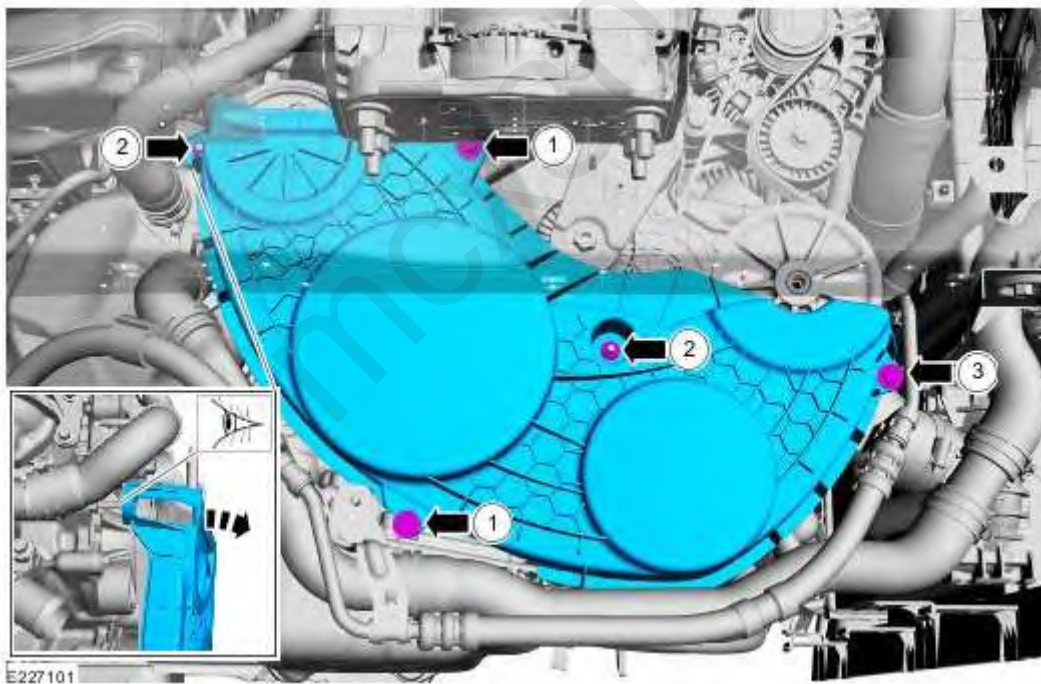


6. *Use the General Equipment: 6 mm Drill Bit*

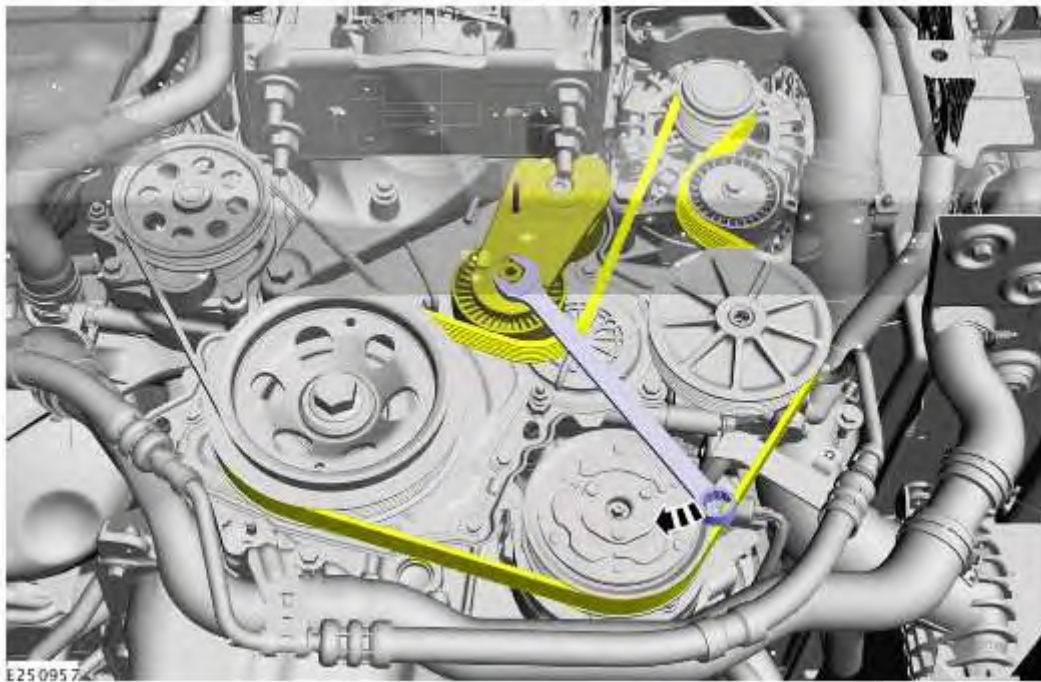

7. Torque: 25 Nm

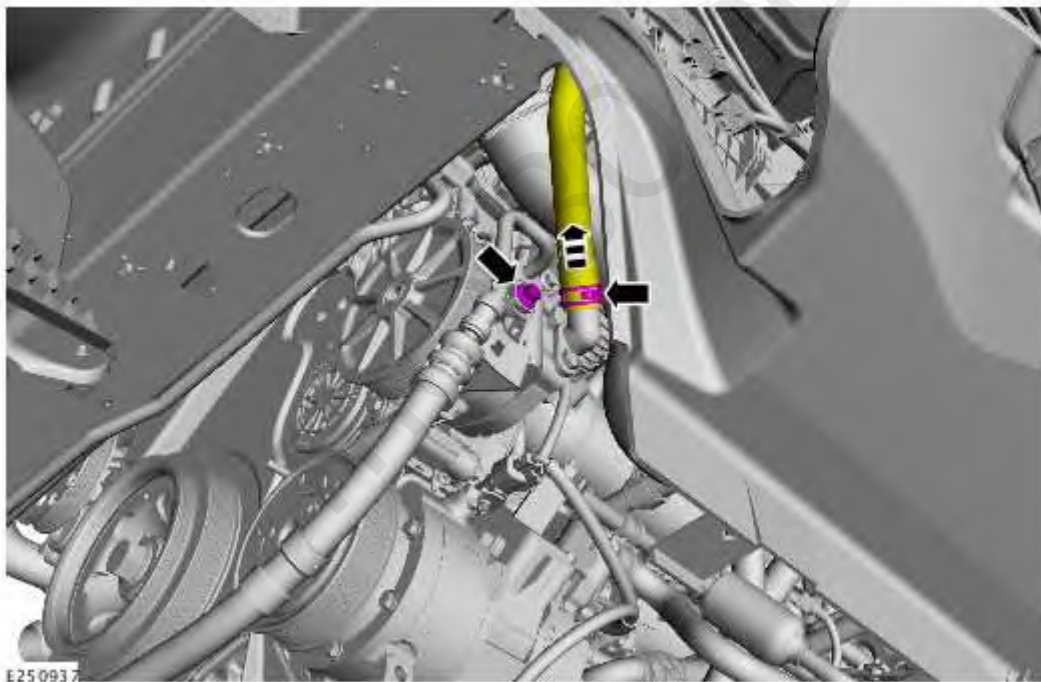


8. Torque: 24 Nm

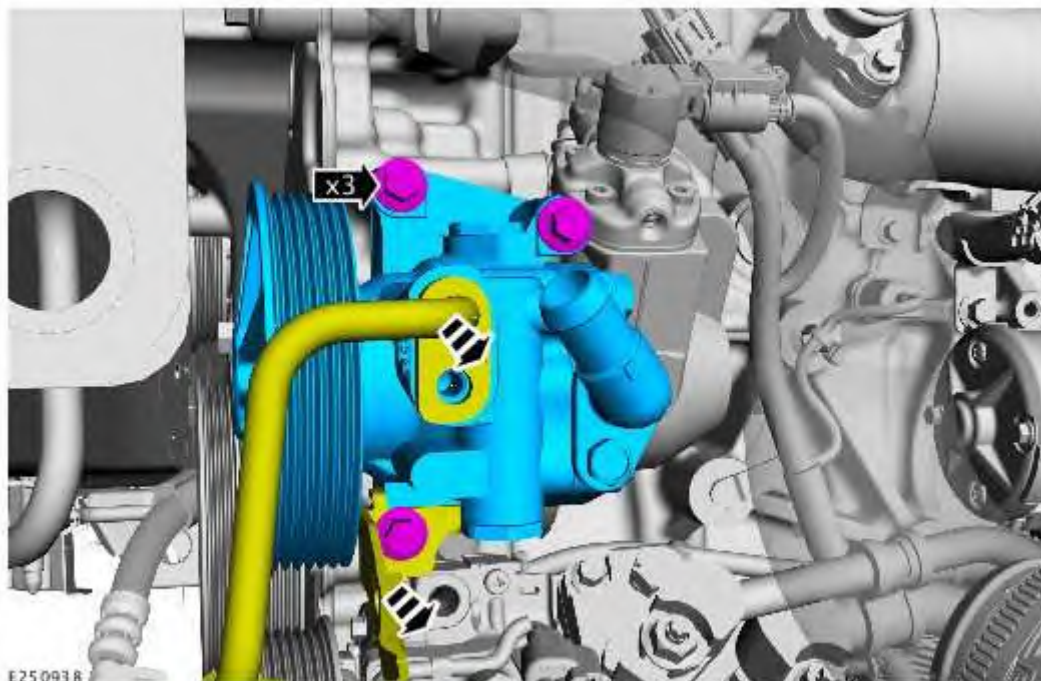

Installation

1. To install, reverse the removal procedure.
- 2.

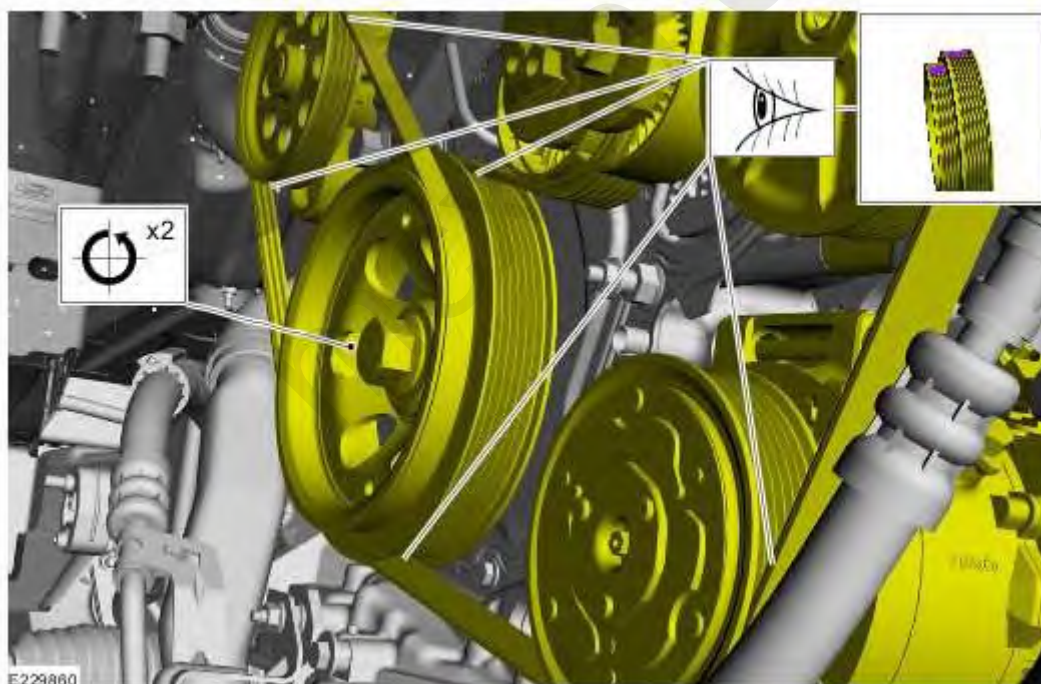

3. Refer to: [Power Steering System Bleeding](#) (211-00 Steering System - General Information, General Procedures).