

Removal and Installation


Special Tool(s) / General Equipment

	204-015 Remover, Drop Arm
Transmission Jack	
Two Leg Puller	

Removal

NOTE: Removal steps in this procedure may contain installation details.

-  **NOTICE:** Make sure that the steering column lock is engaged.
NOTE: Make sure that the road wheels are in the straight ahead position.

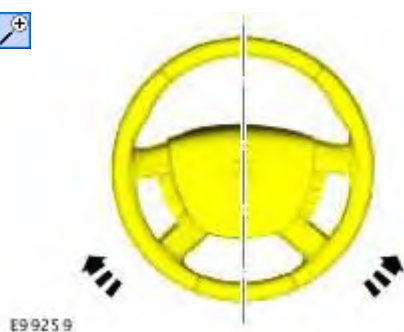


-  **NOTICE:** The steering column is designed to absorb energy in a crash and must be handled carefully. The energy-absorbing steering column shaft cannot be subjected to force or impact shocks. Follow the removal procedure instructions carefully to avoid damage.
NOTE: Make sure a new bolt is installed.

Torque: 28 Nm



-
-
-

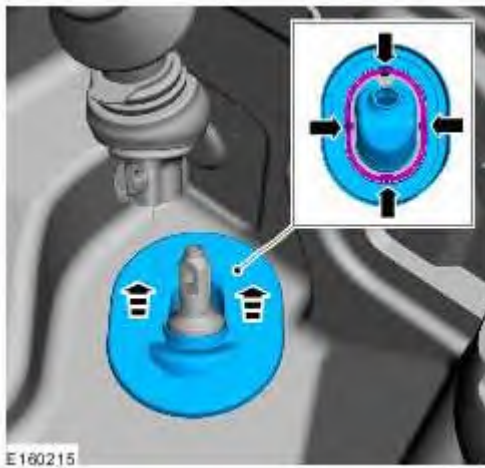


4. On both sides.

Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).

5.  **NOTICE:** Make sure that the ball joint ball does not rotate.


On both sides.

Torque: 48 Nm

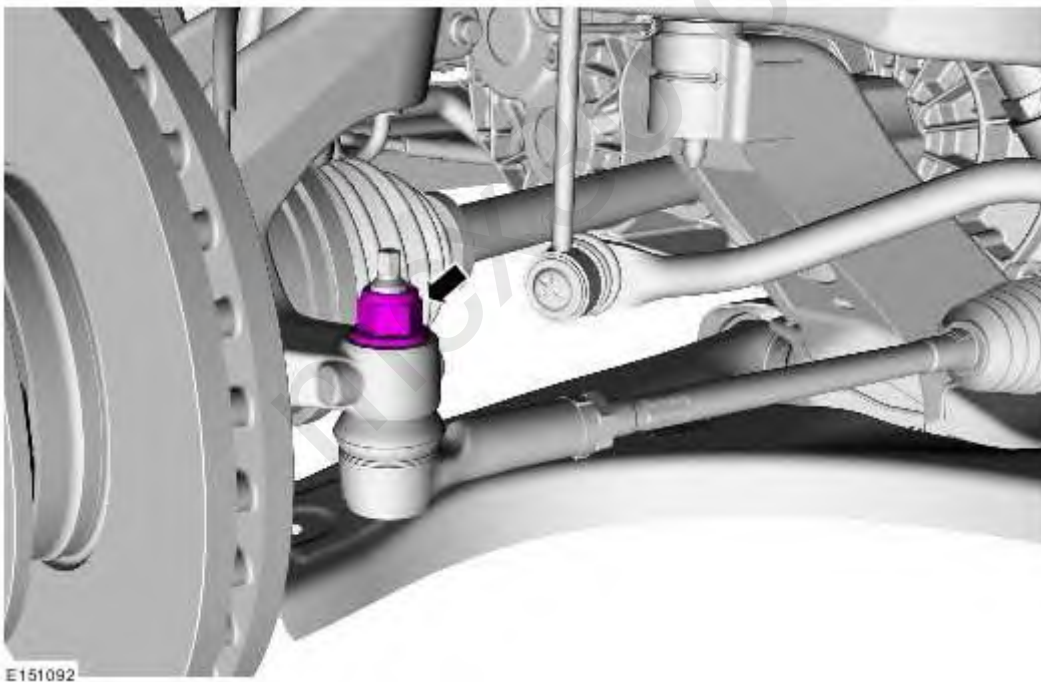


6. On both sides.

Use Special Service Tool: [204-015](#).

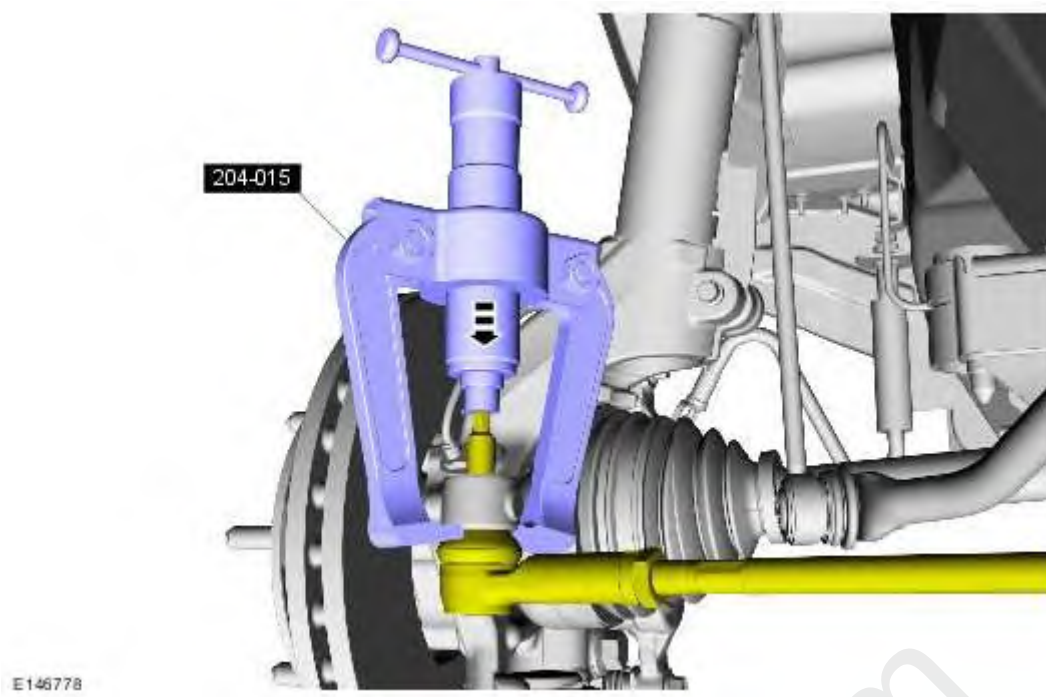

7. On both sides.

Loosen: 3 turn(s)

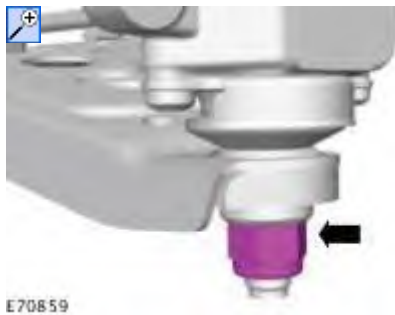


8.


1. On both sides.

Use the General Equipment: [Two Leg Puller](#)


2. On both sides.

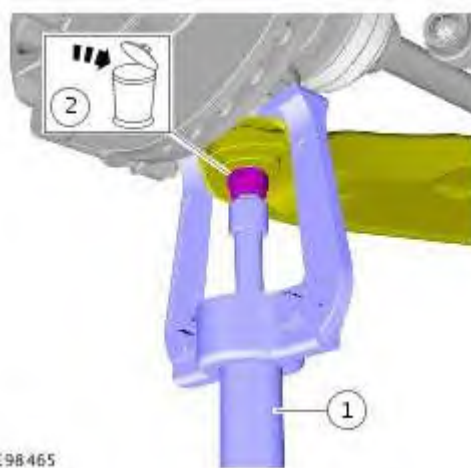


9.

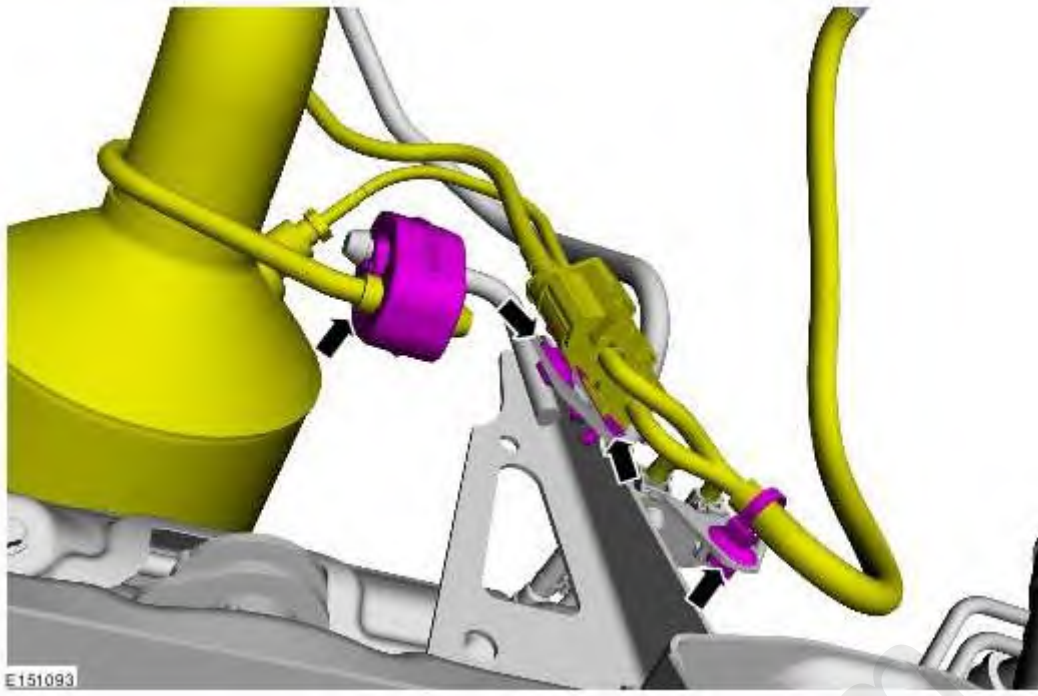

10.

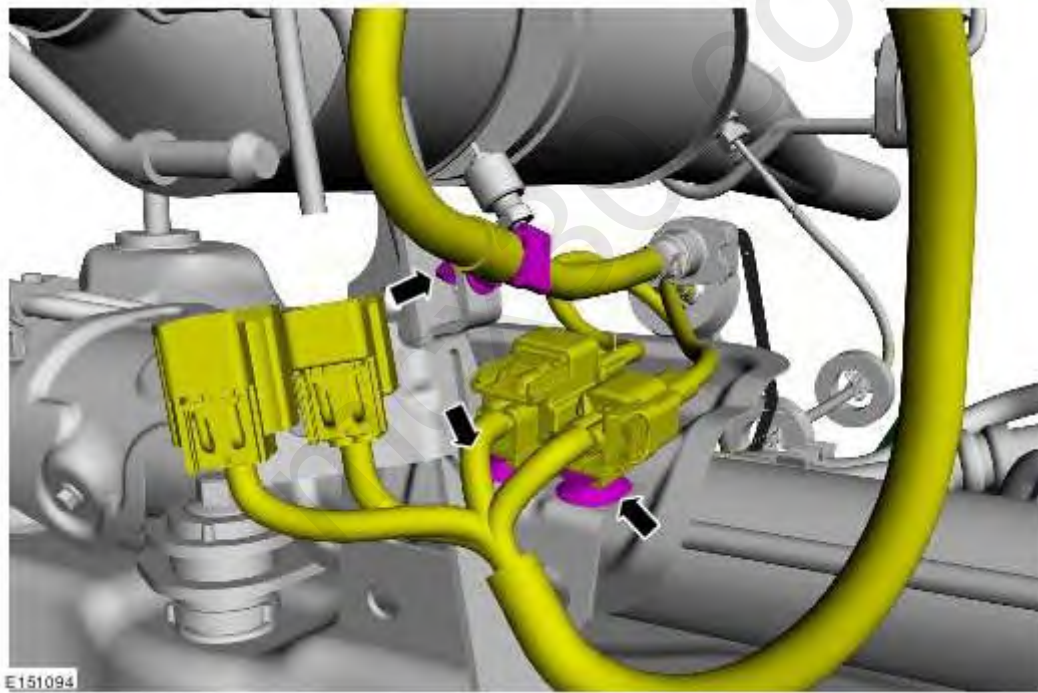

11. Torque: 10 Nm

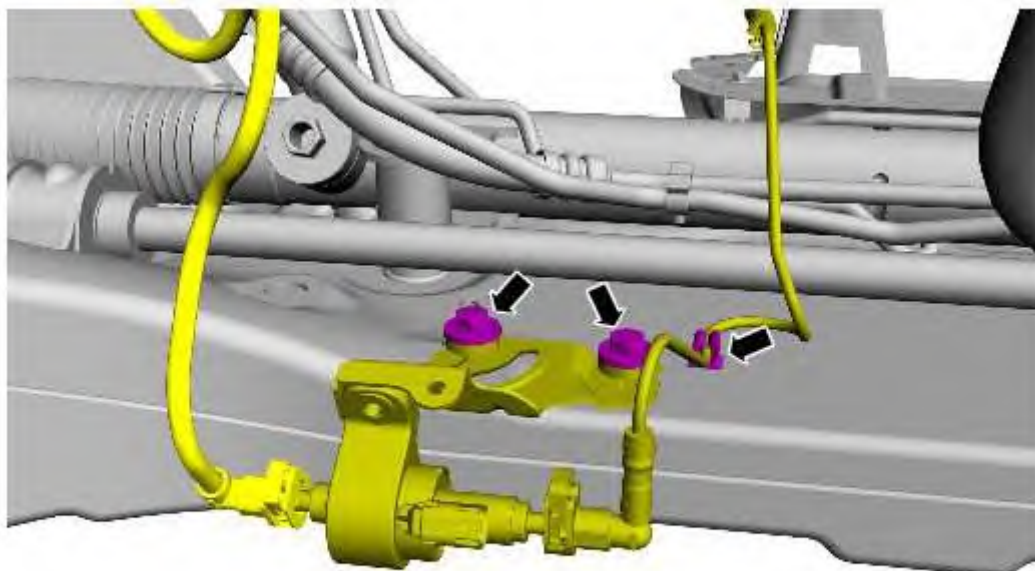

E151095

All vehicles

12.

1.  **NOTICE:** Make sure a new bolt is installed.

Torque: 133 Nm

2.  **NOTICE:** Make sure a new bolt is installed.


If equipped. W706661-S442 / M14x1,5

Torque: 150 Nm


3.  **NOTICE:** Make sure a new bolt is installed.

If equipped. W718556-S439 / M14x2,0


Torque: 175 Nm

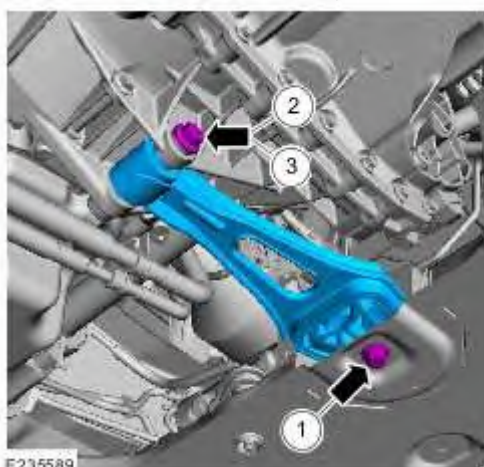


E235589

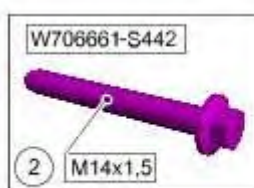


13. *Torque:* 30 Nm

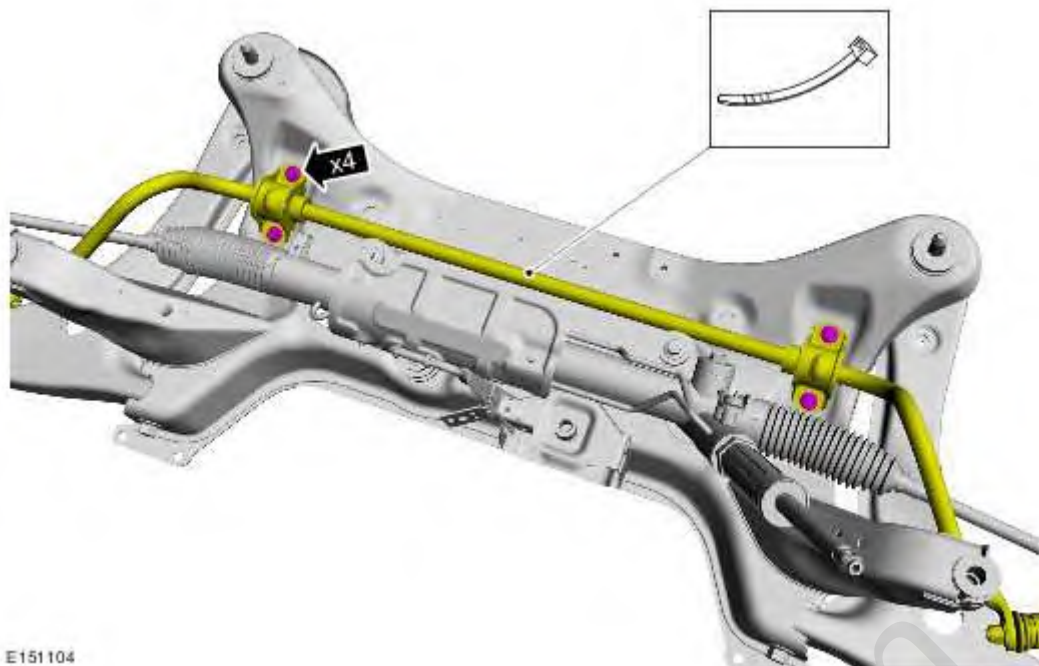


14. Use the General Equipment: [Transmission Jack](#)

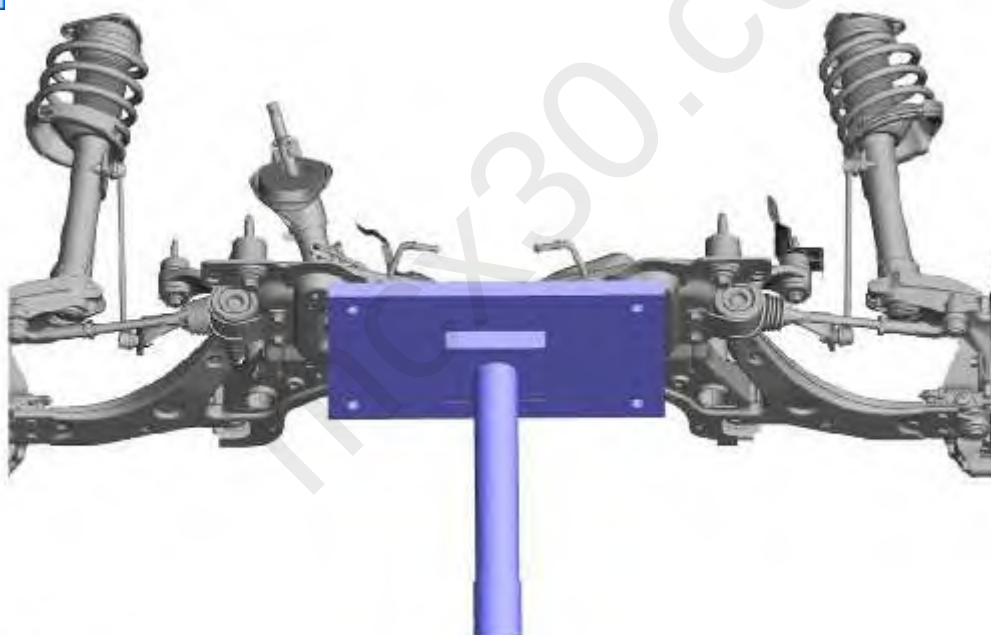


15.
 1. Torque: 175 Nm
 2. Torque: 275 Nm

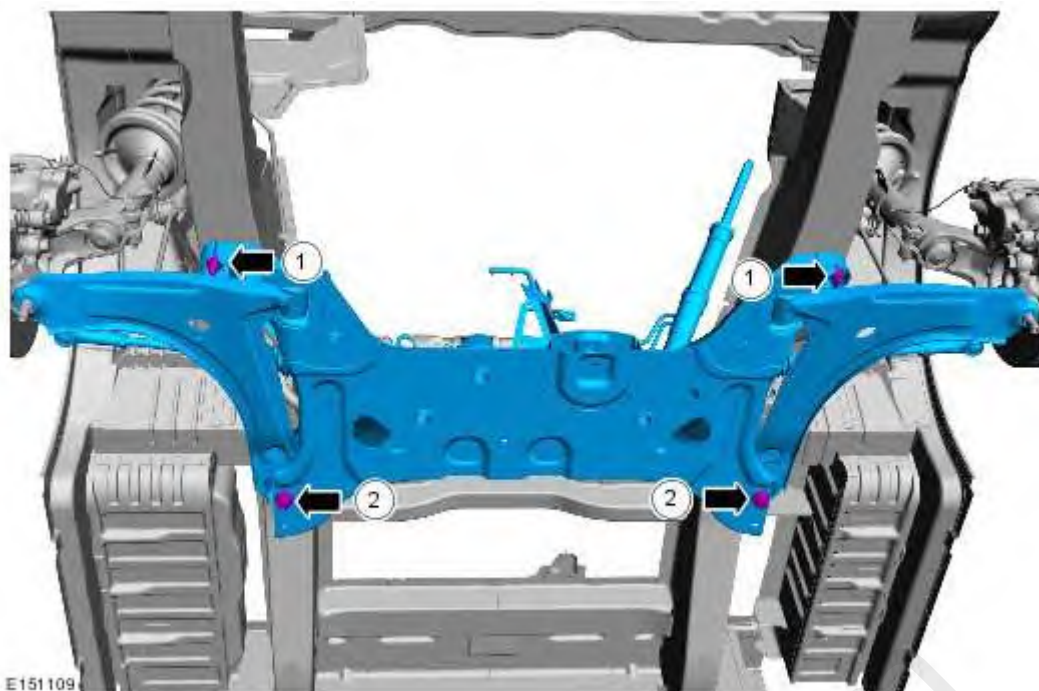

16. Torque: 7 Nm

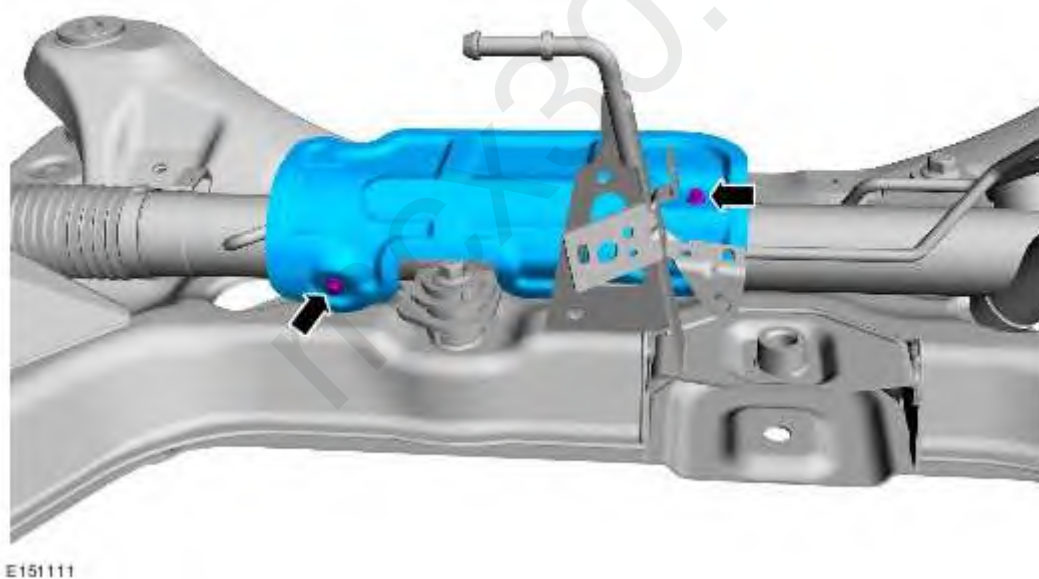


17. Torque: 115 Nm

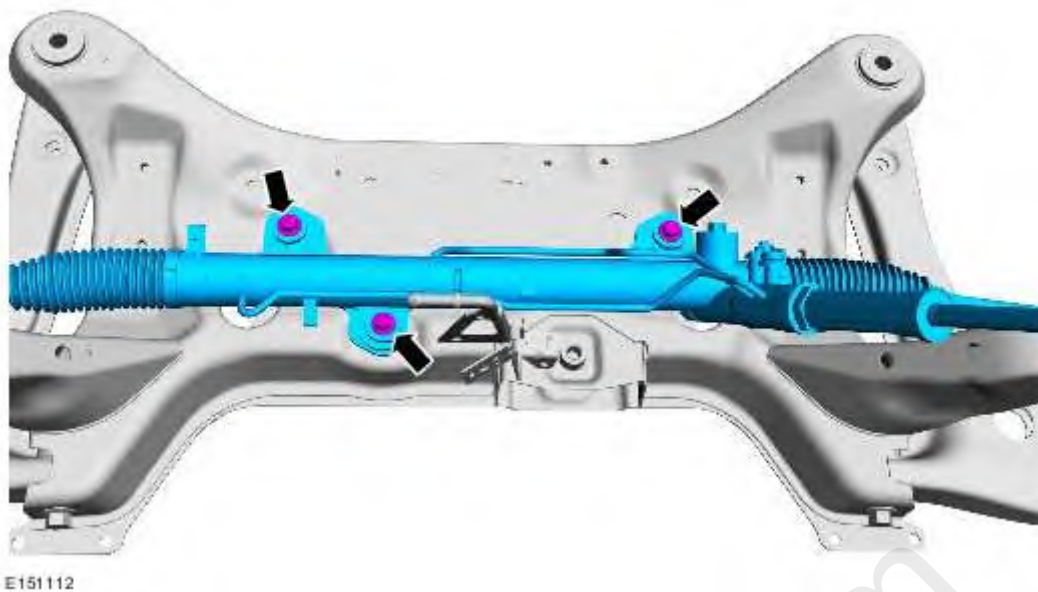

Installation

1. To install, reverse the removal procedure.
2. On both sides.

Torque: 150 Nm

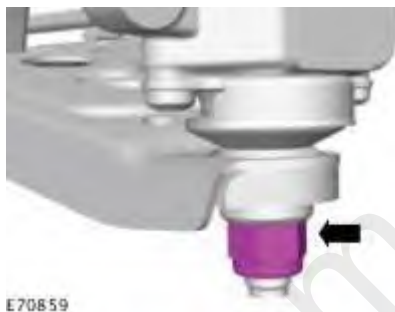

3. **NOTE:** This step is only necessary when installing a new component..
Refer to: [Power Steering System Flushing](#) (211-00 Steering System - General Information, General Procedures).
4. Refer to: [Power Steering System Bleeding](#) (211-00 Steering System - General Information, General Procedures).
5. Refer to: [Front Toe Adjustment](#) (204-00 Suspension System - General Information, General Procedures).