


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Torque:
 - 1 25 Nm
 - 2 24 Nm
 - 3 9 Nm

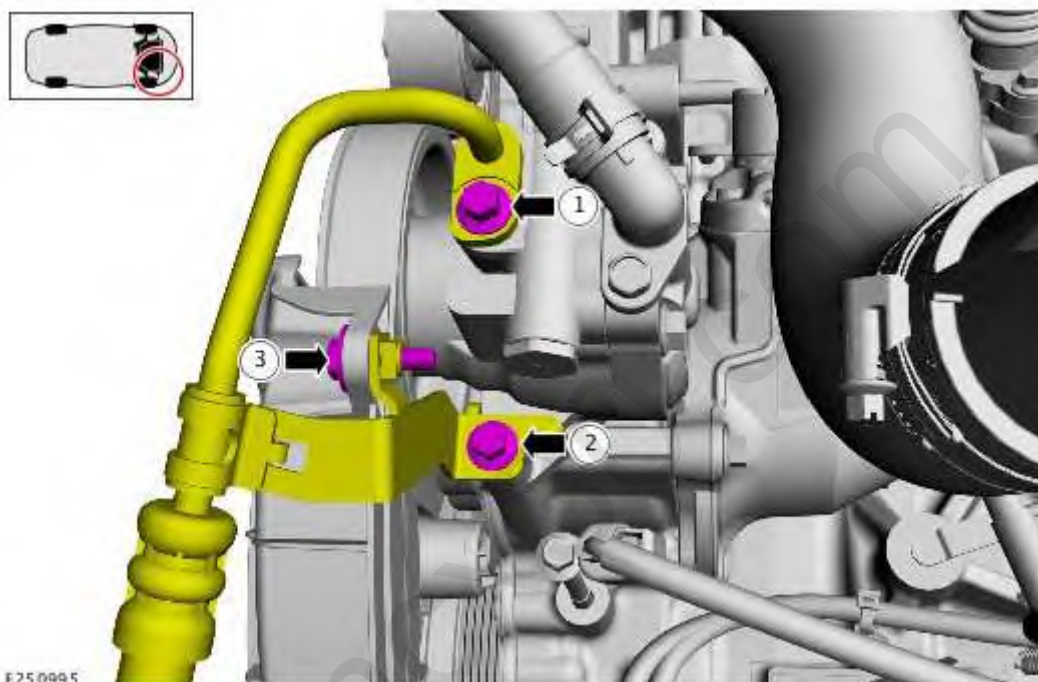

3. Torque: 10 Nm

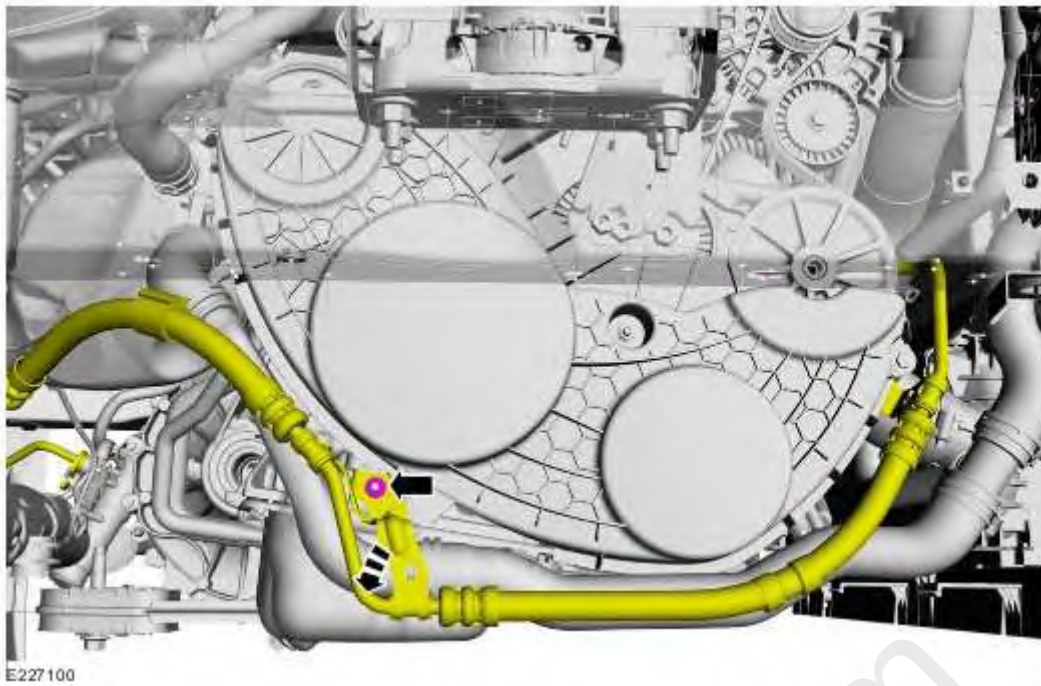

Installation

1. To install, reverse the removal procedure.
2. Refer to: [Power Steering System Bleeding](#) (211-00 Steering System - General Information, General Procedures).