


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Steering System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).
- 3.

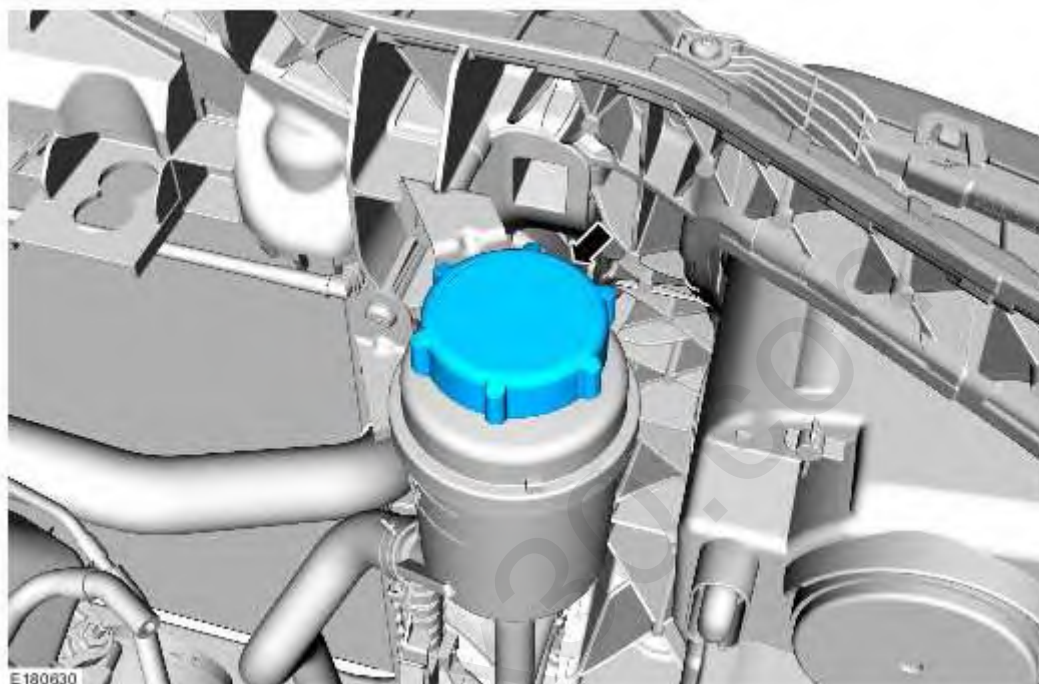

- 4.

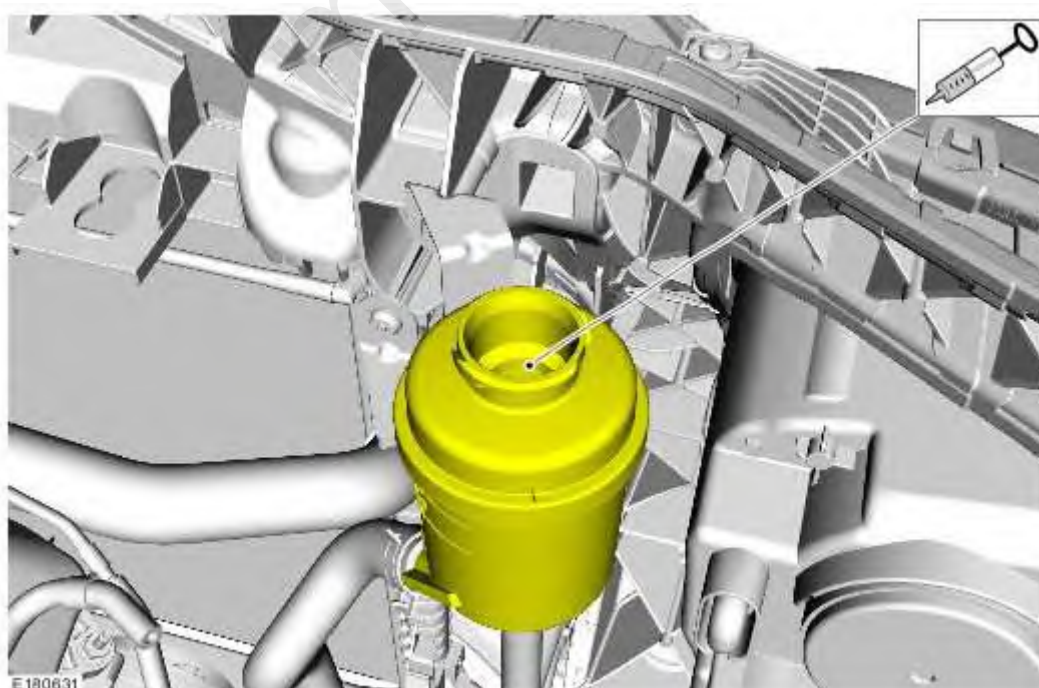

5. Torque: 11 Nm

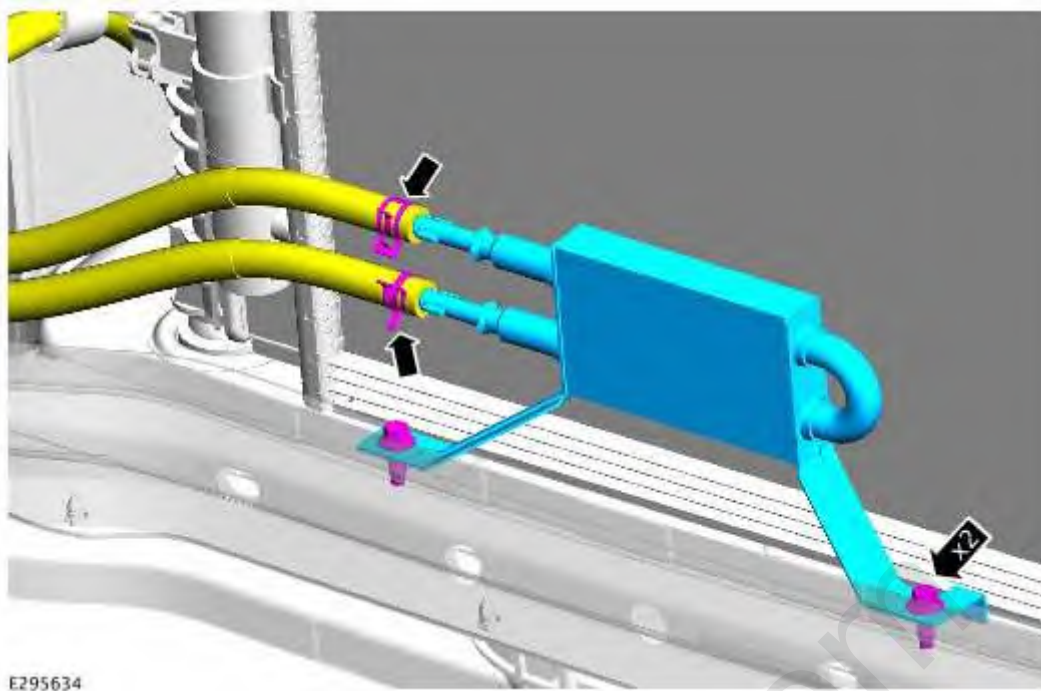

Installation

1. To install, reverse the removal procedure.
2. Refer to: [Power Steering System Bleeding](#) (211-00 Steering System - General Information, General Procedures).