

### Removal and Installation


#### Special Tool(s)

|                                                                                   |                              |
|-----------------------------------------------------------------------------------|------------------------------|
|  | 204-015<br>Remover, Drop Arm |
|-----------------------------------------------------------------------------------|------------------------------|


#### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Refer to: [Steering System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
3.  **NOTICE:** Make sure that the ball joint ball does not rotate.
  1. Torque: 90 Nm
  2. Torque: 48 Nm

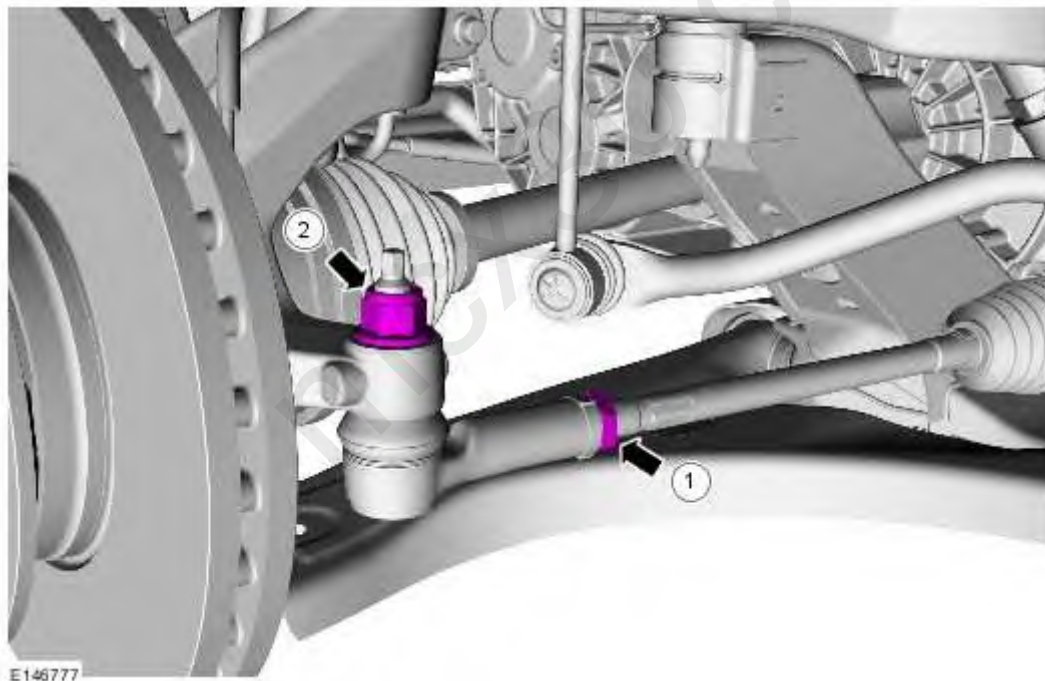

4. Use Special Service Tool: [204-015](#).

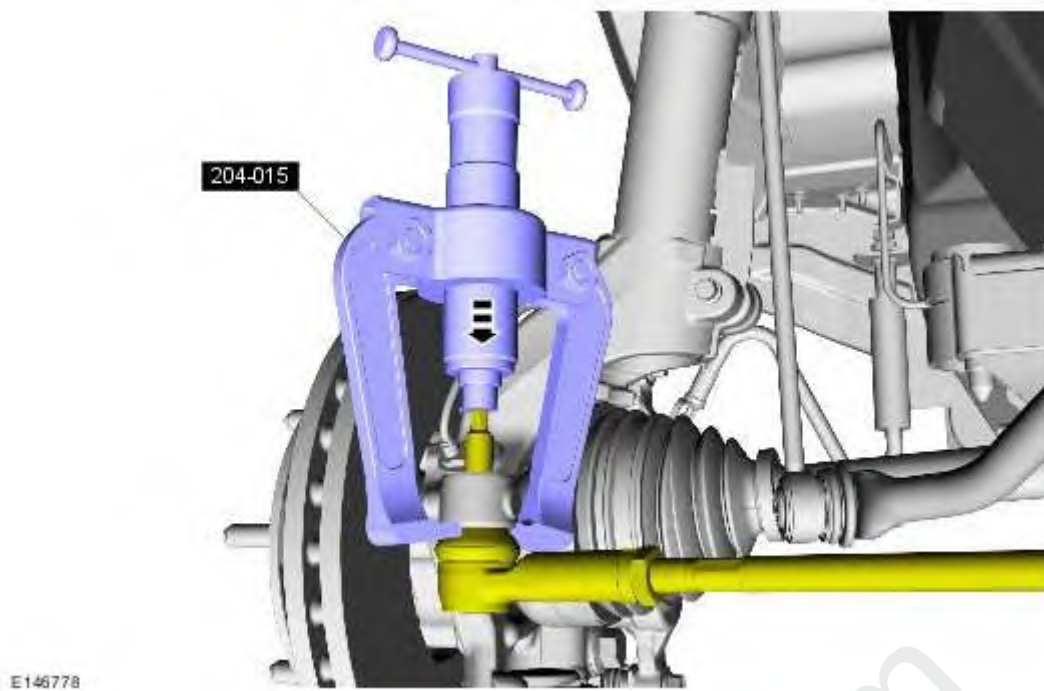

5. **NOTE:** Make sure that the tie rod end is installed with the same number of turns as when removed.



### Installation

1. To install, reverse the removal procedure.
2. Refer to: [Front Toe Adjustment](#) (204-00 Suspension System - General Information, General Procedures).