

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. NOTE: This step is only necessary when installing a new component.


Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).

2.  NOTICE: Make sure that the steering column lock is engaged.
NOTE: Make sure that the road wheels are in the straight ahead position.
NOTE: This step is not necessary when installing a new component.

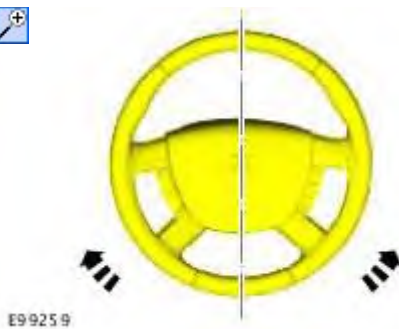


3.  NOTICE: The steering column is designed to absorb energy in a crash and must be handled carefully. The energy-absorbing steering column shaft cannot be subjected to force or impact shocks. Follow the removal procedure instructions carefully to avoid damage.


Torque: 28 Nm

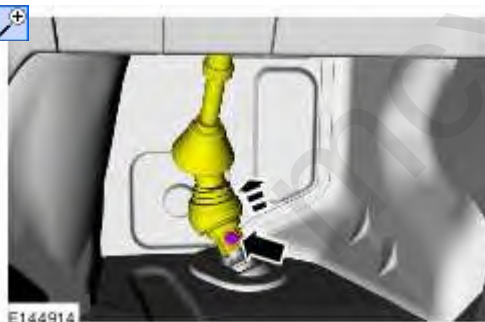


4. NOTE: This step is not necessary when installing a new component.

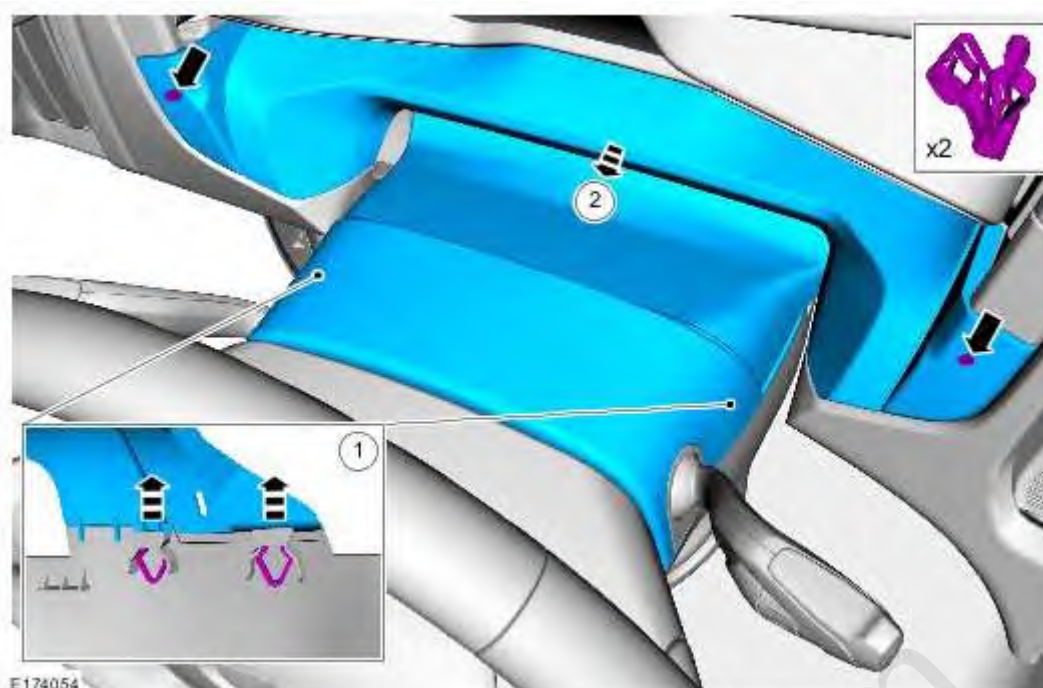

5. NOTE: This step is not necessary when installing a new component.

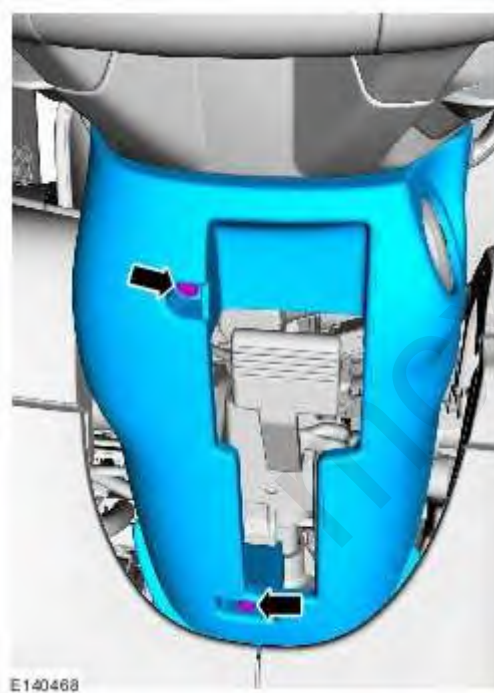


6.

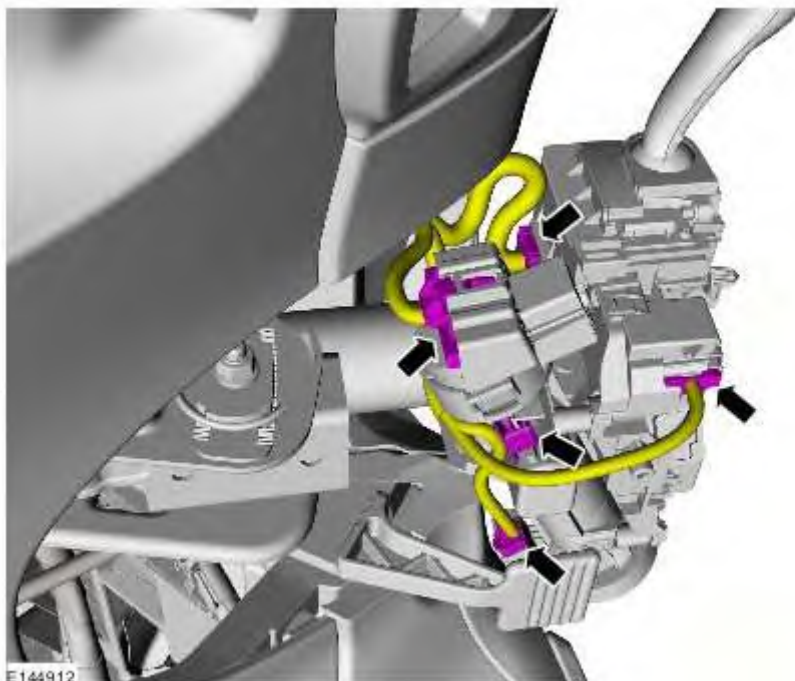

7.  **NOTICE:** The steering column is designed to absorb energy in a crash and must be handled carefully. The energy-absorbing steering column shaft cannot be subjected to force or impact shocks. Follow the removal procedure instructions carefully to avoid damage.

Torque: 20 Nm

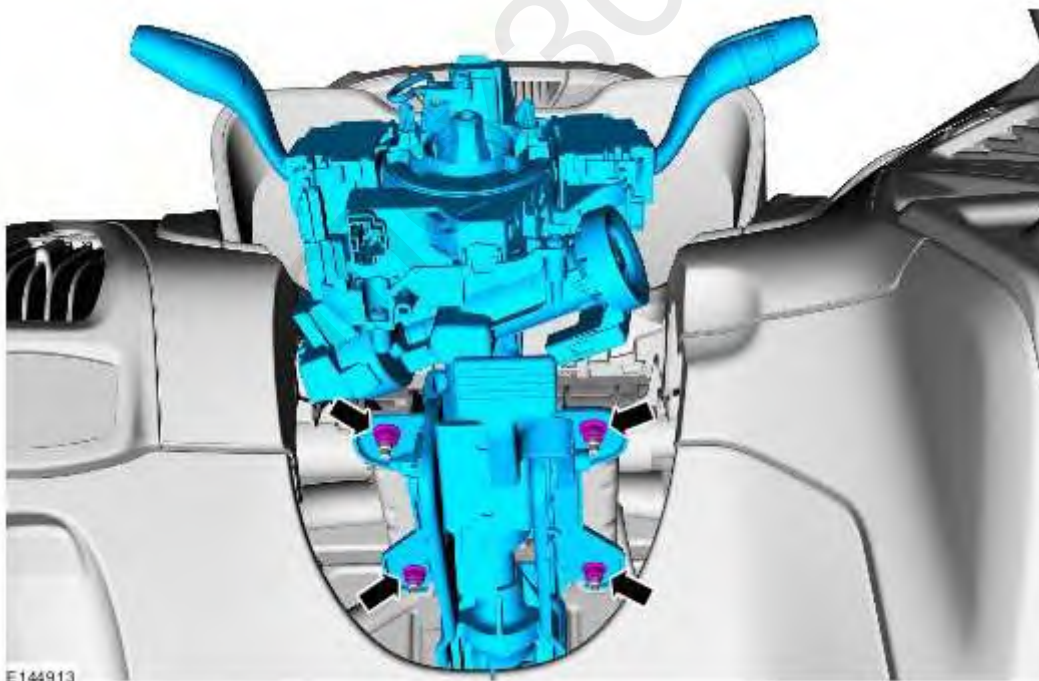

Installation

1. To install, reverse the removal procedure.