


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Driver Airbag](#) (501-20B Supplemental Restraint System, Removal and Installation).
2.  NOTICE: Make sure that the steering column lock is engaged.
NOTE: Make sure that the road wheels are in the straight ahead position.

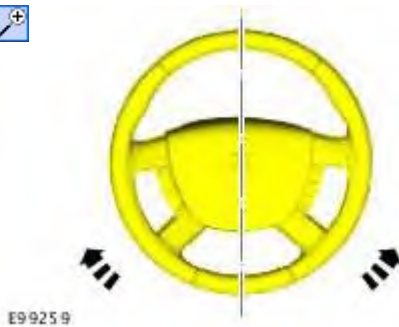

3. Torque: 48 Nm



4.  NOTICE: Make sure that the clockspring rotor does not rotate.

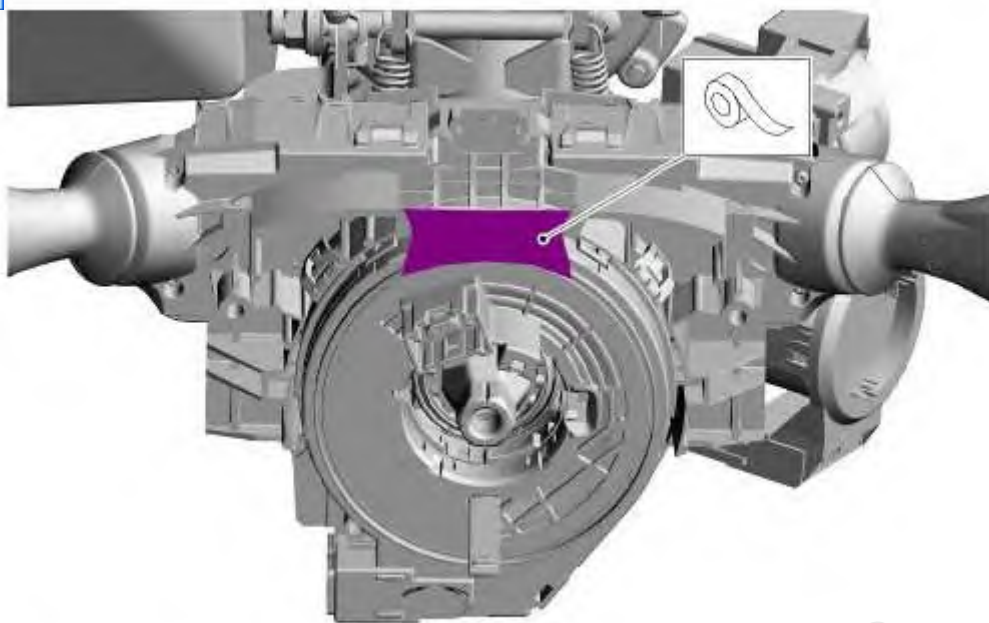

E102968

Installation

1. To install, reverse the removal procedure.