

Removal and Installation


General Equipment

Punch


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).
- 2.

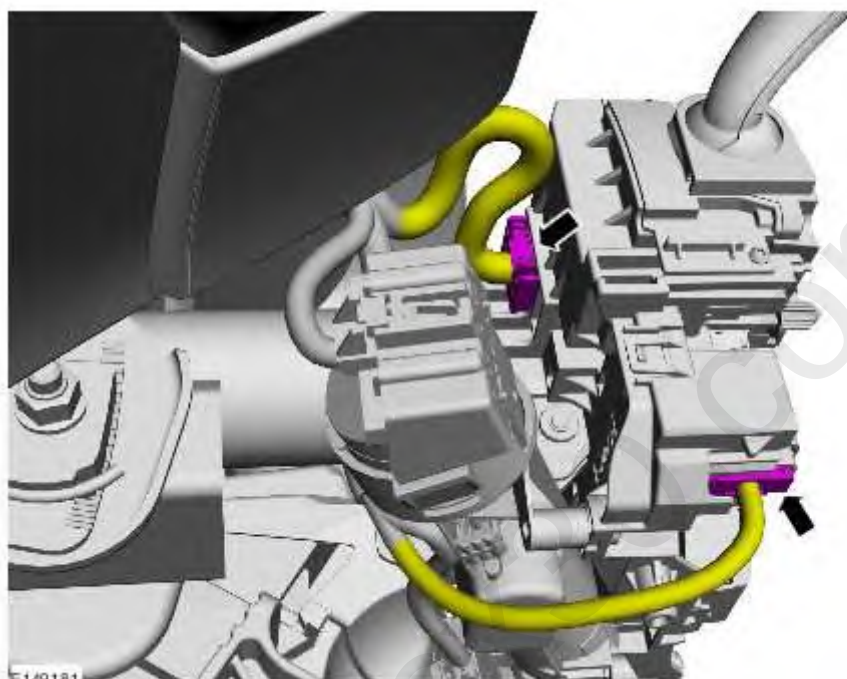


- 3.

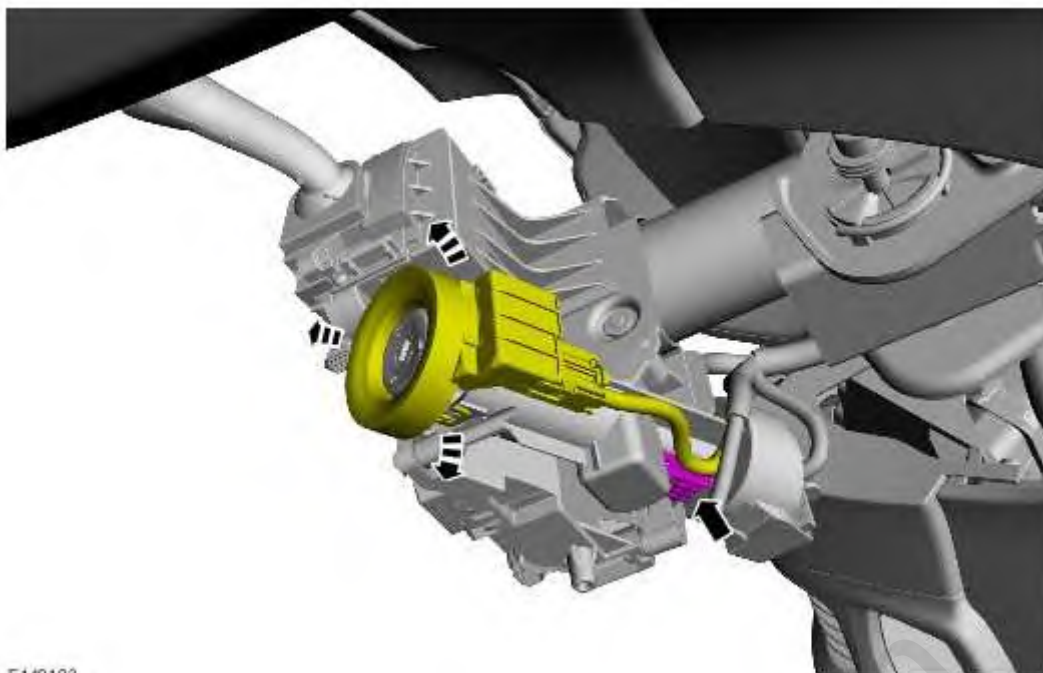


E149193

4.

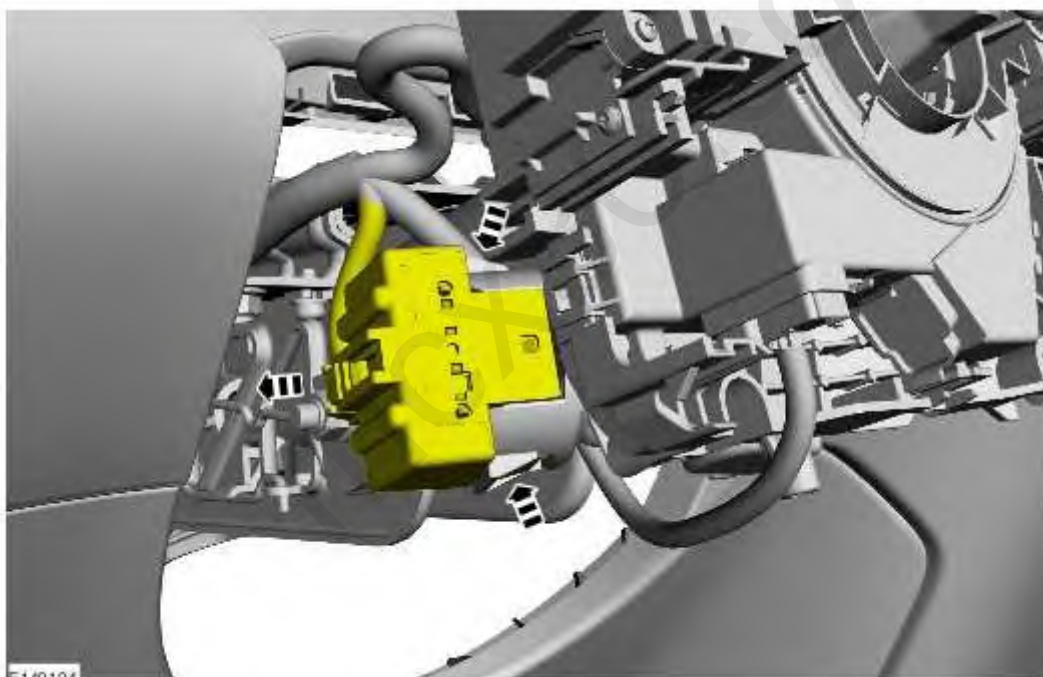


E149194

5. Torque: 3 Nm

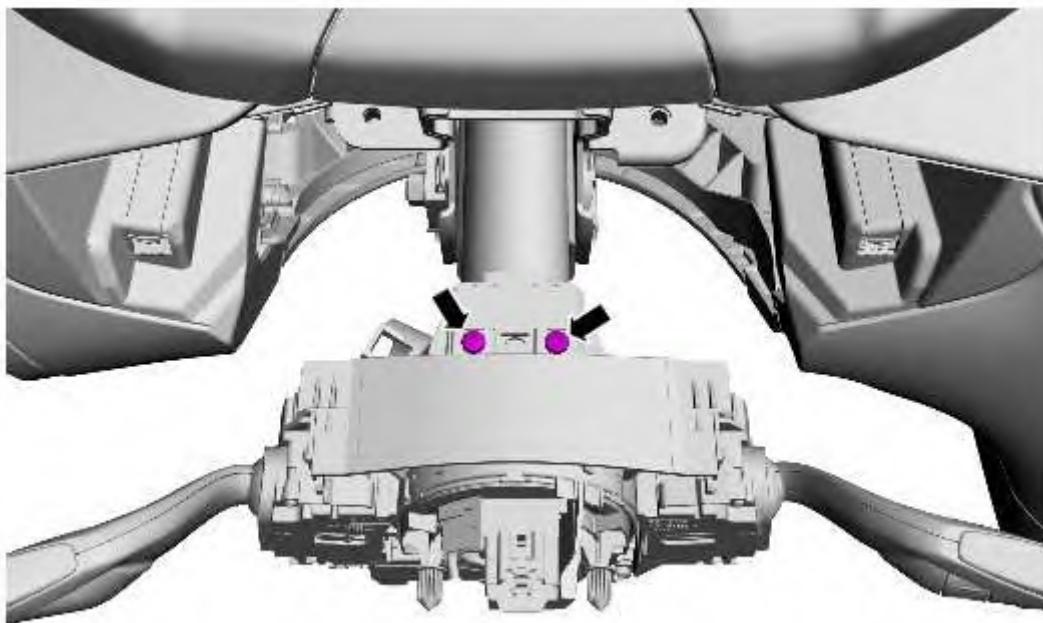


E149195

6. Torque: 3 Nm

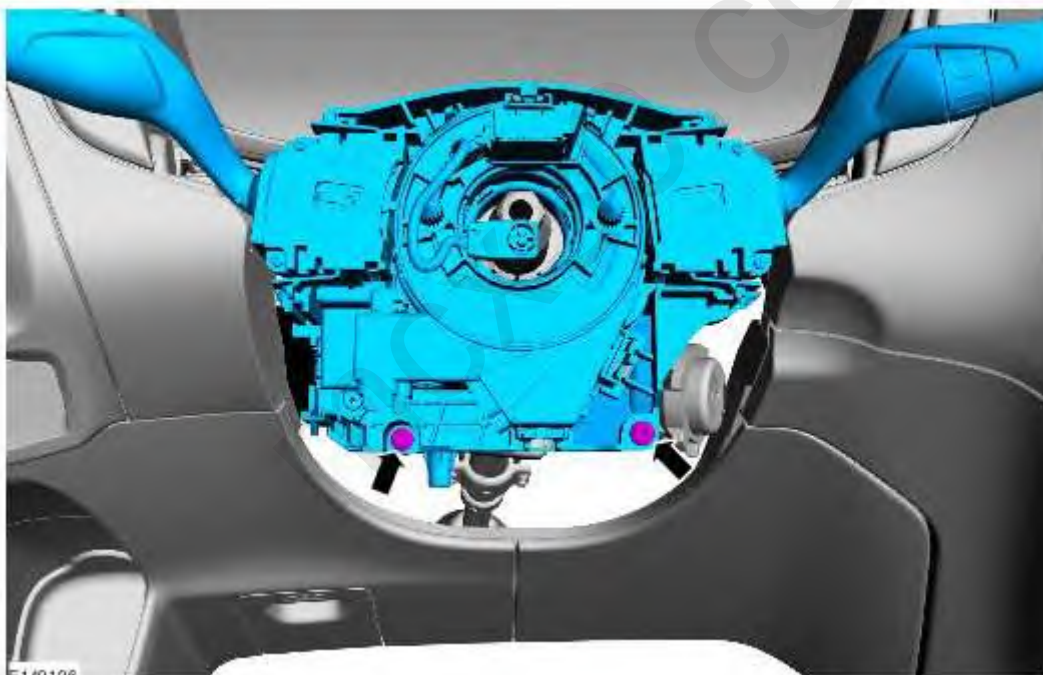

E149196

7.

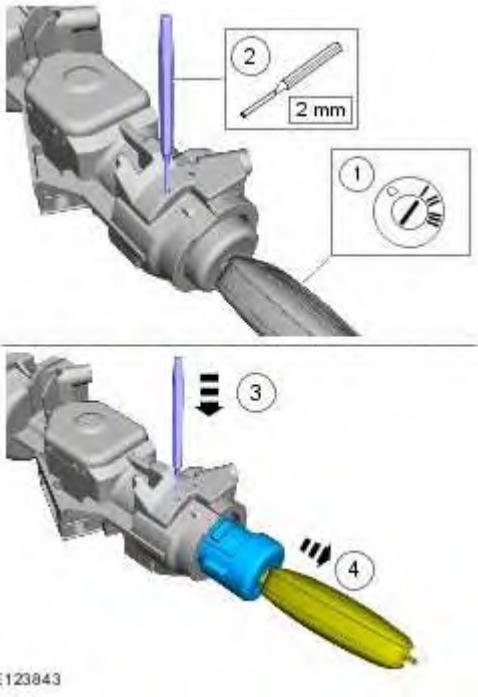


8. On both sides.

Use the General Equipment: [Punch](#)



9. On both sides.

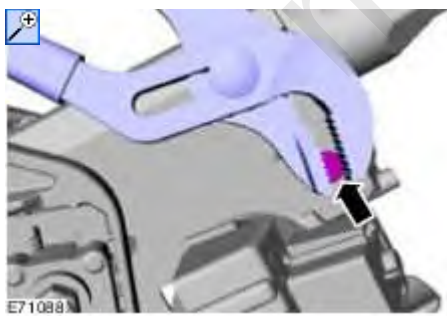

10.



Installation

1. To install, reverse the removal procedure.

mcx30.com