


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1.

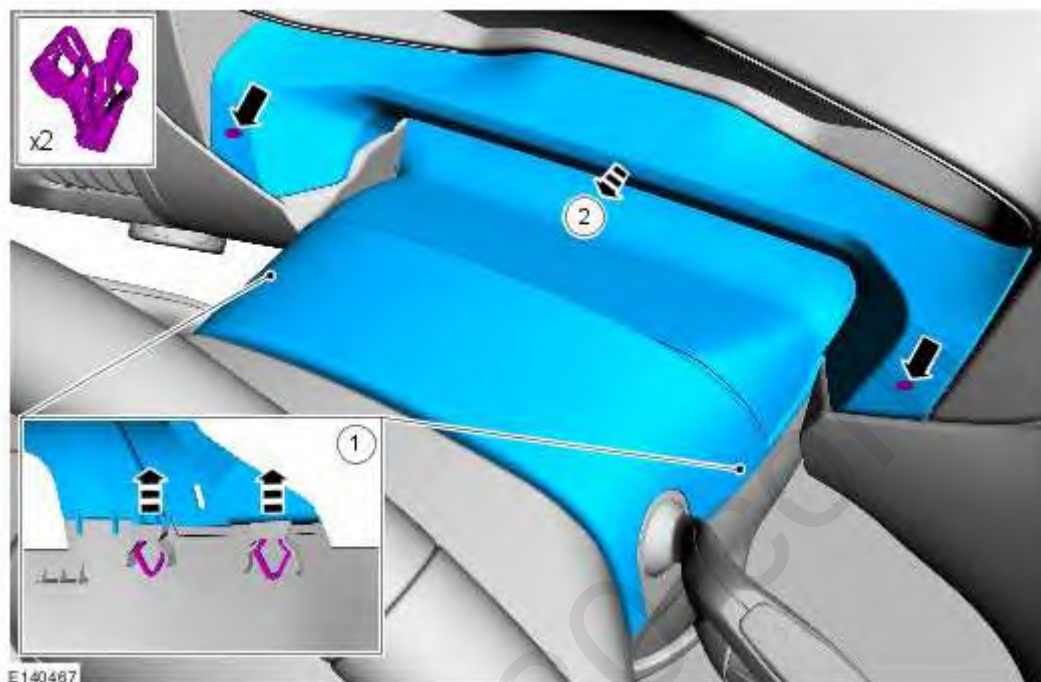

2.

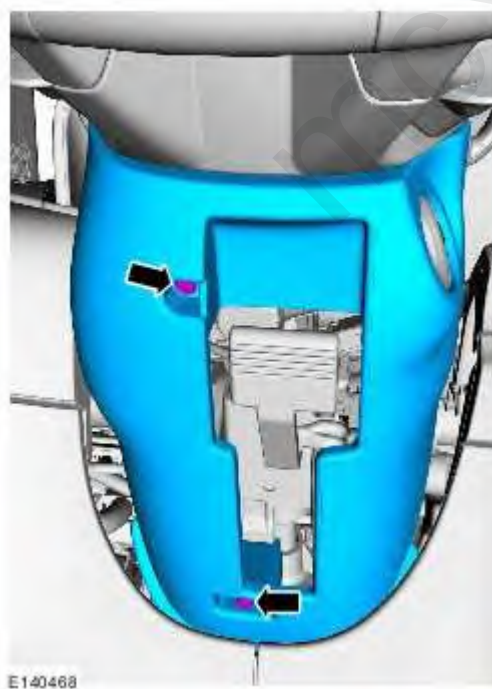

3. Torque: 1 Nm

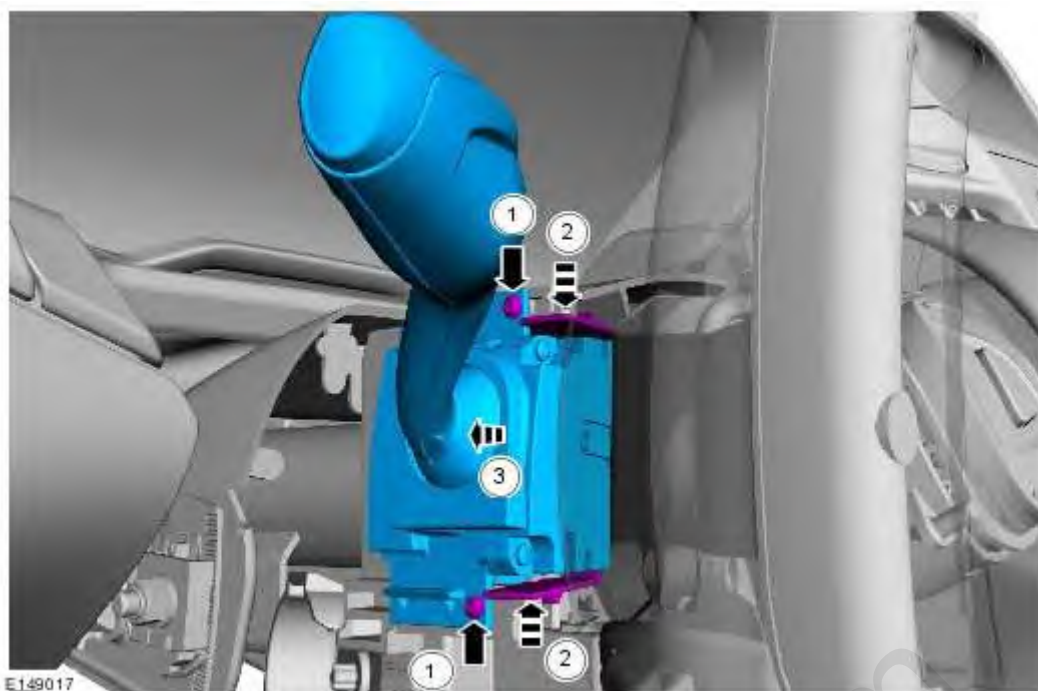

Installation

1. To install, reverse the removal procedure.