


Removal and Installation

Special Tool(s)

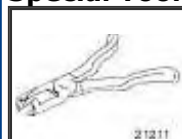


303-508
Pliers, Valve Stem Seal

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Valve Springs](#) (303-01A Engine, Removal and Installation).
2. Use Special Service Tool: [303-508](#).

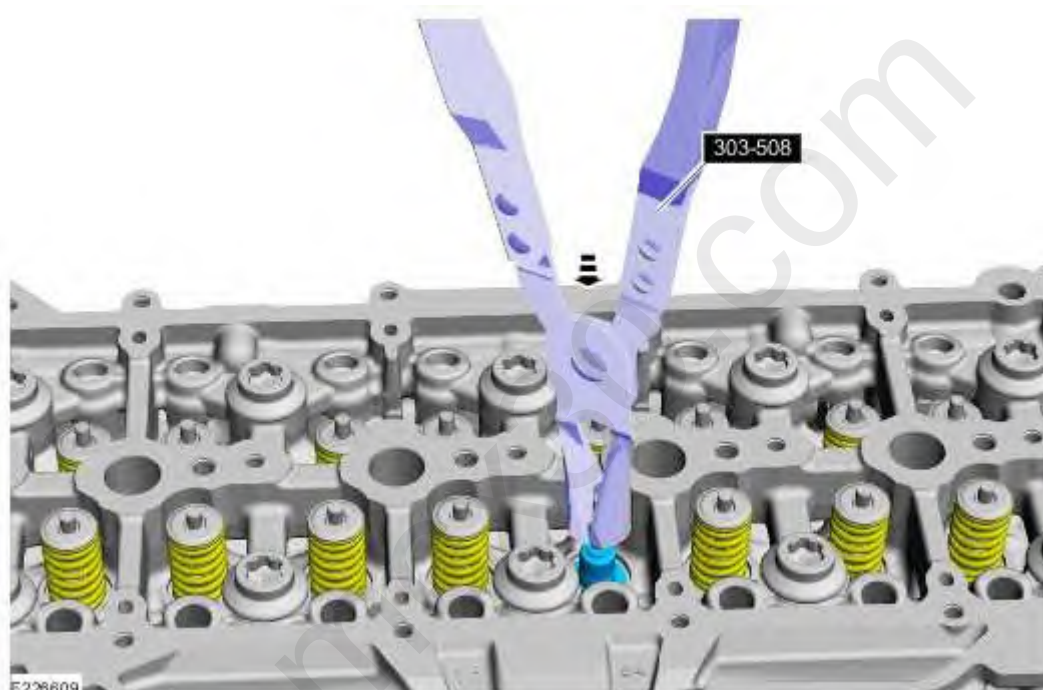

Installation

1. To install, reverse the removal procedure.