


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
2. *Torque: 10 Nm*

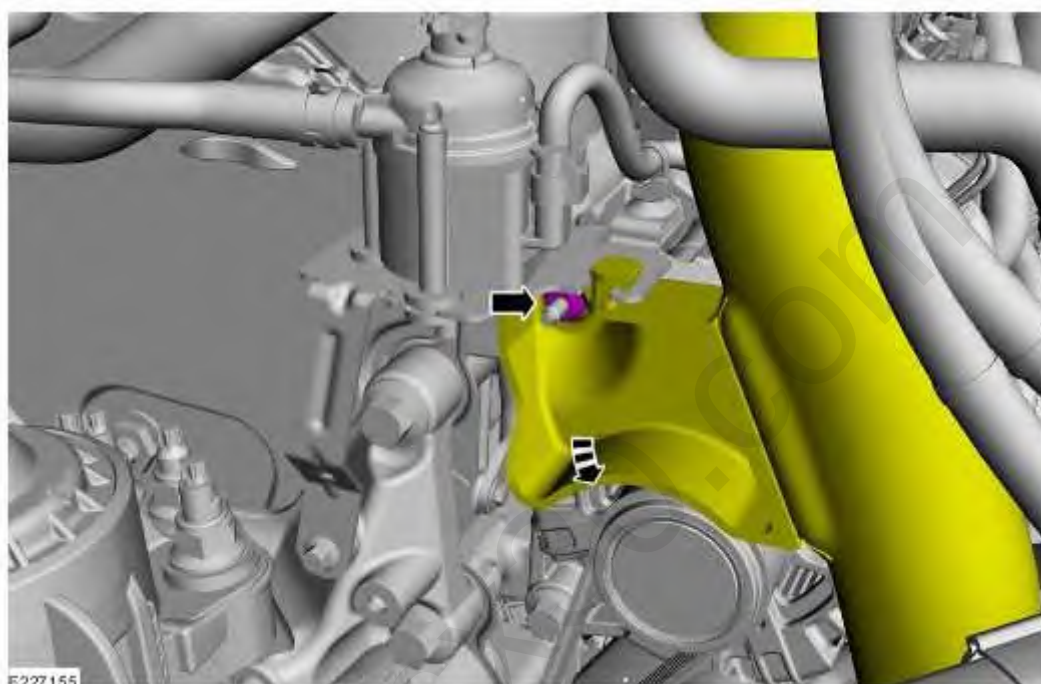


3. NOTE: Be prepared to collect escaping fluid.

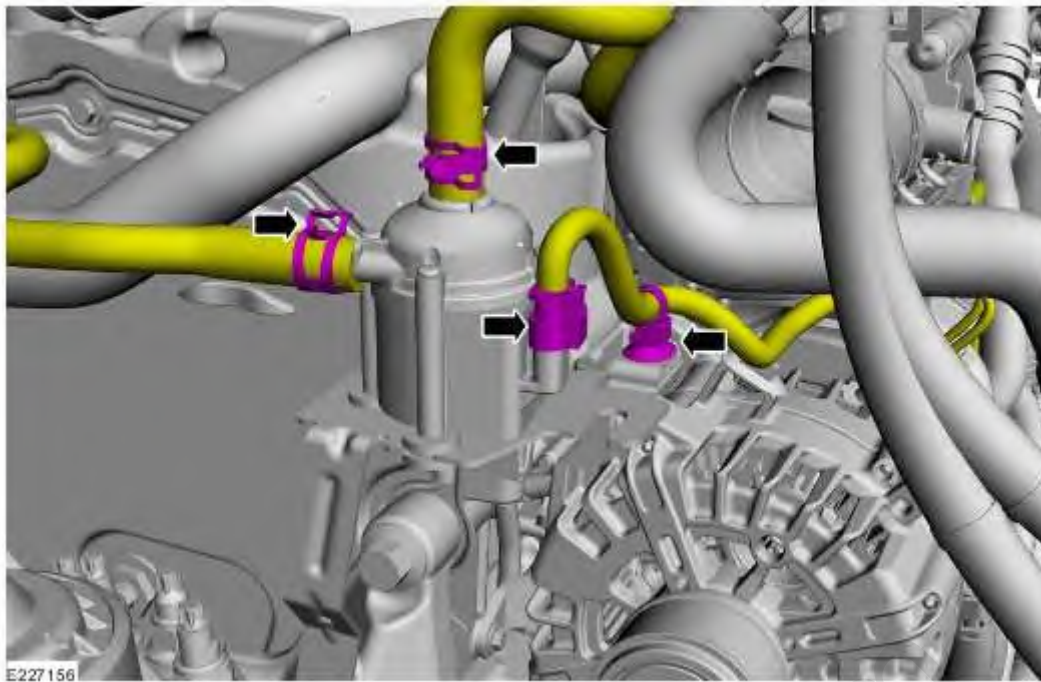

4. Torque: 10 Nm

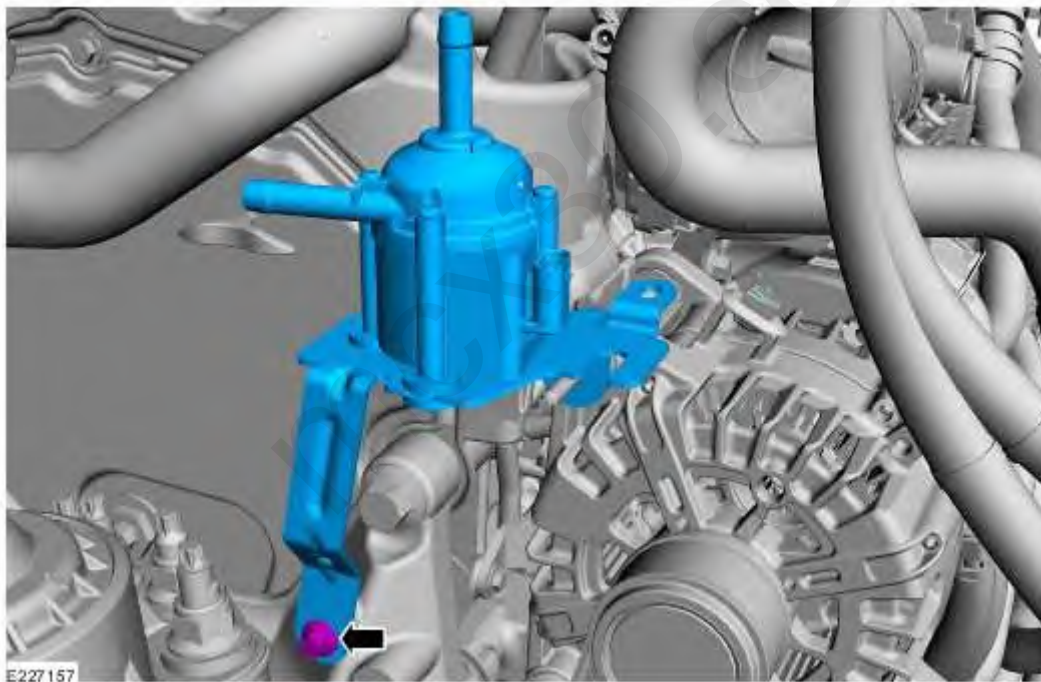

5. Torque: 8 Nm

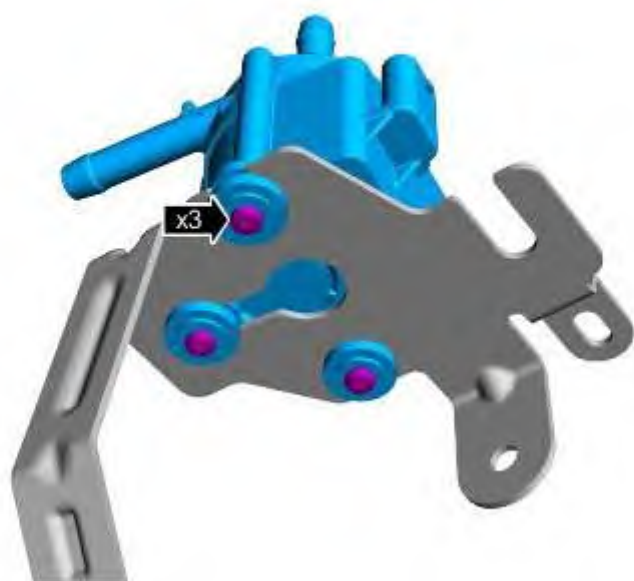

E227158

Installation

1. To install, reverse the removal procedure.