


Removal and Installation


Removal

1. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
2. Refer to: [Cooling System Draining, Vacuum Filling and Bleeding](#) (303-03A Engine Cooling, General Procedures).
3. *Torque:*
 - 1: 10 Nm
 - 2: 10 Nm

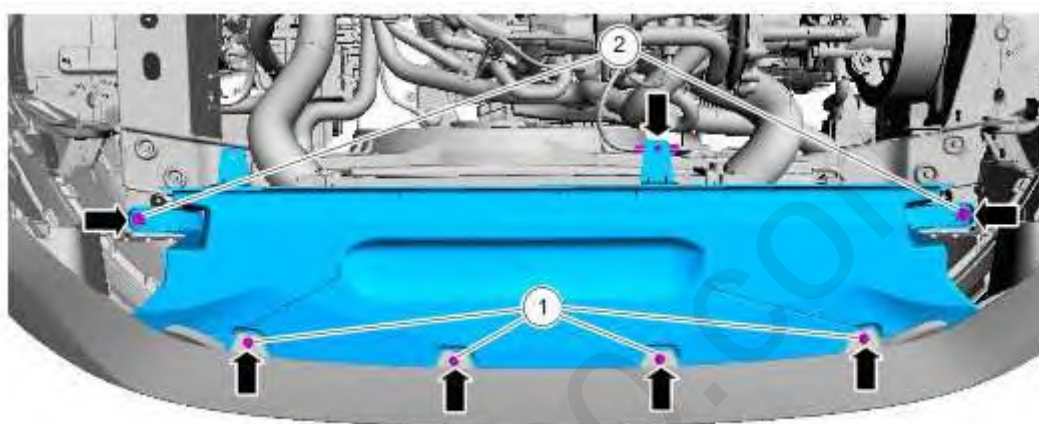


E154501

4. *Torque:* 10 Nm

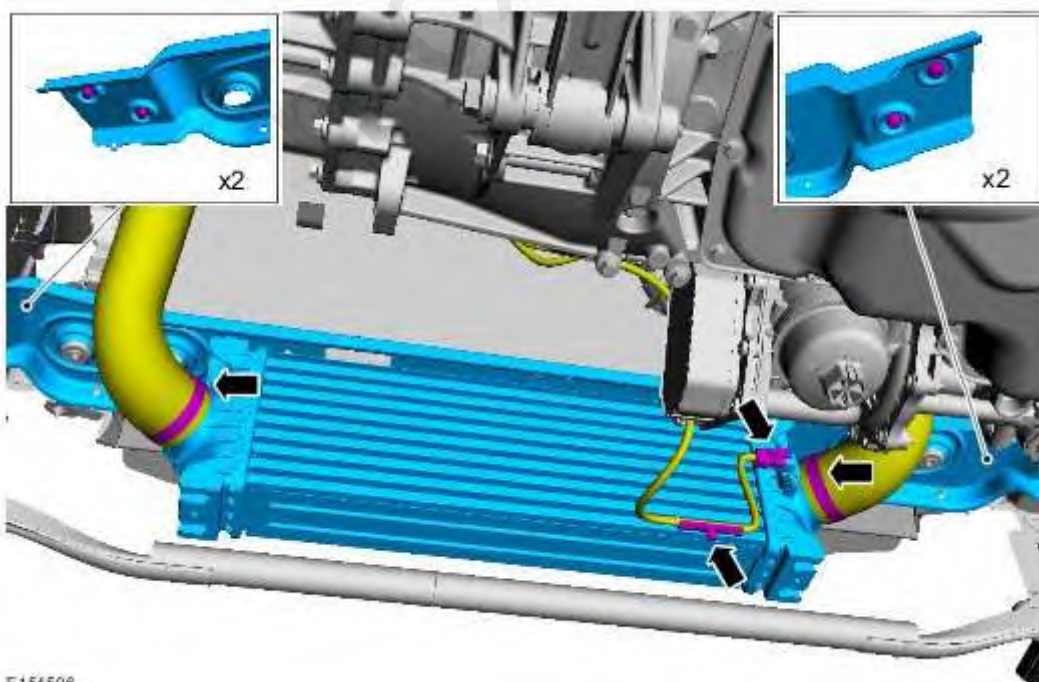


E154506


- 5.

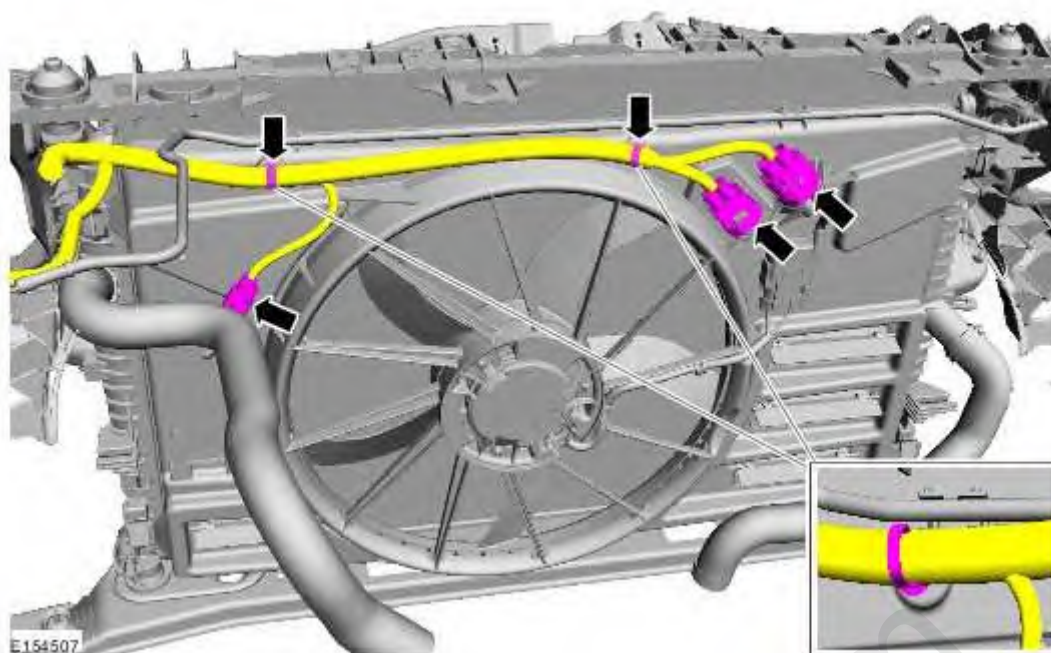


6. NOTE: Be prepared to collect escaping fluid.

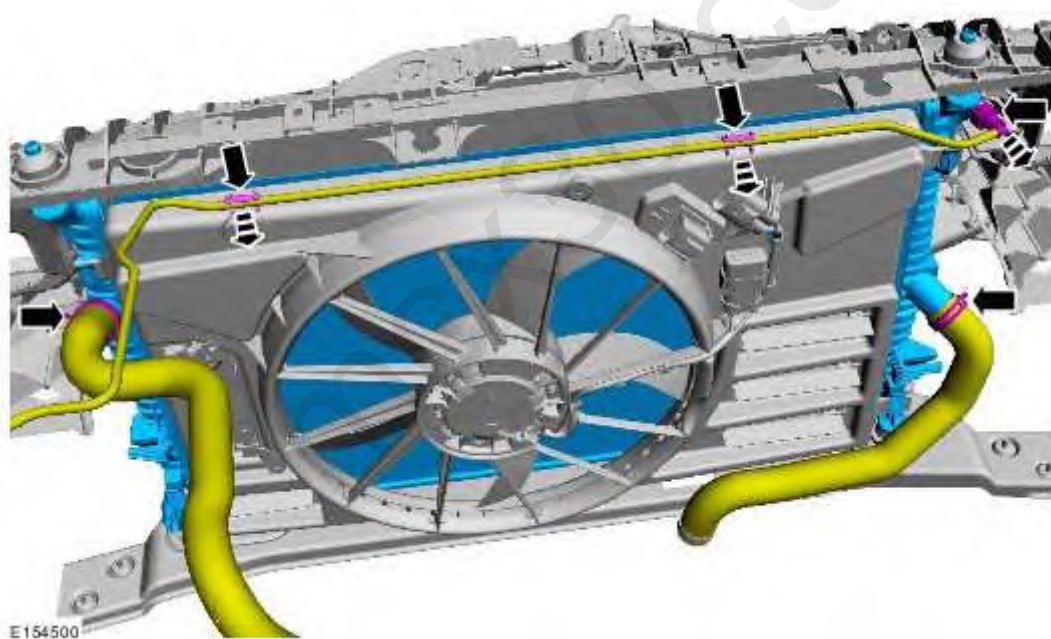


7.

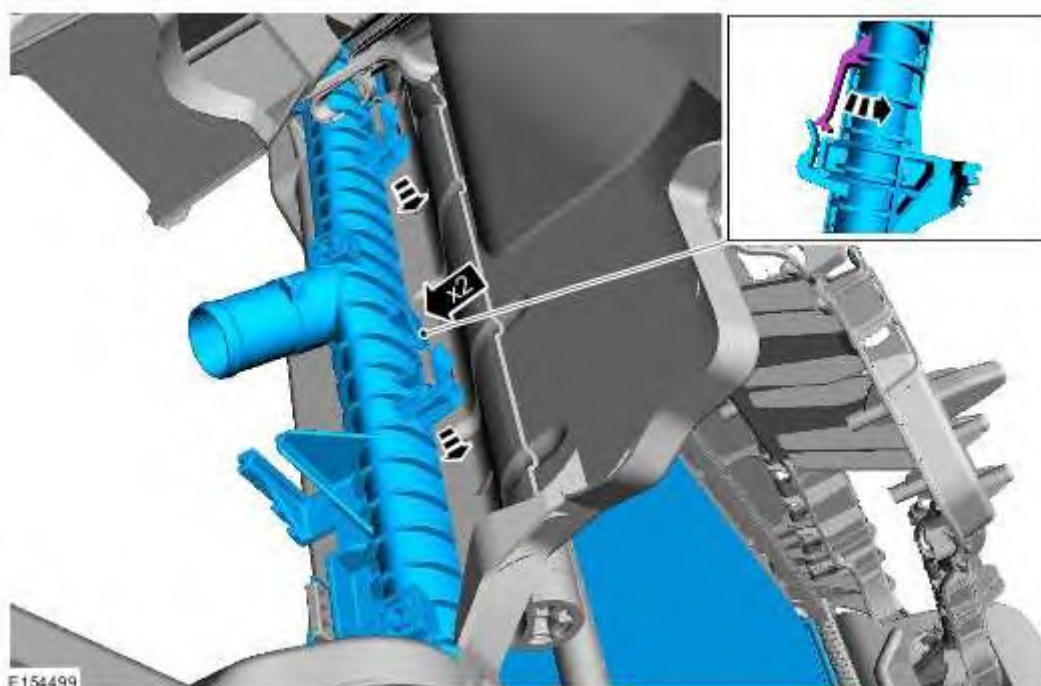

8.

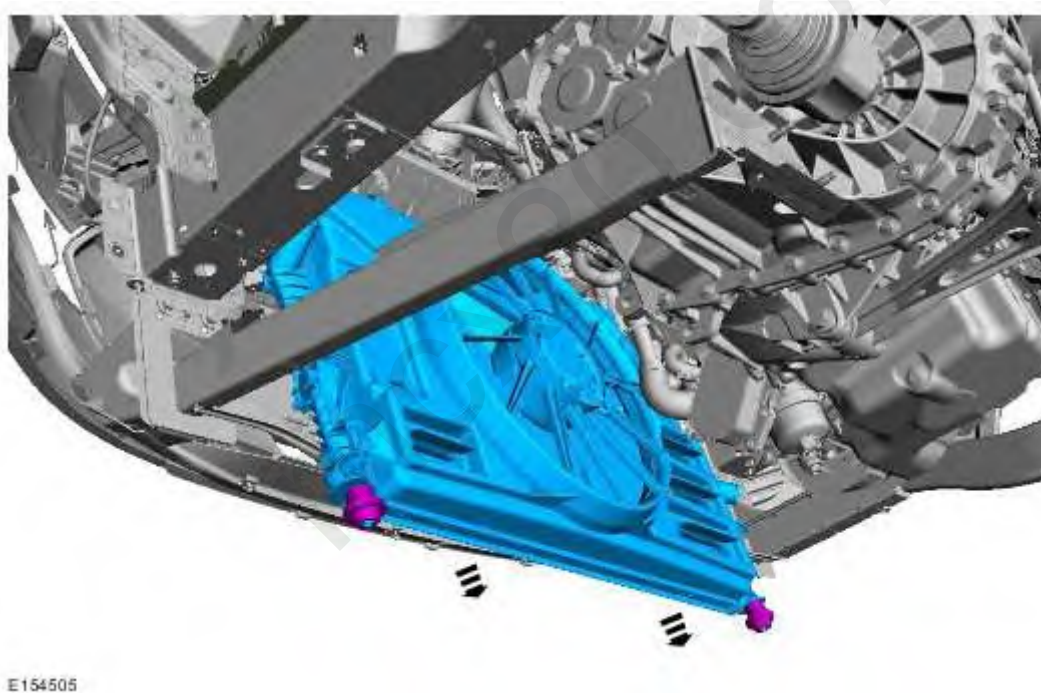

9.

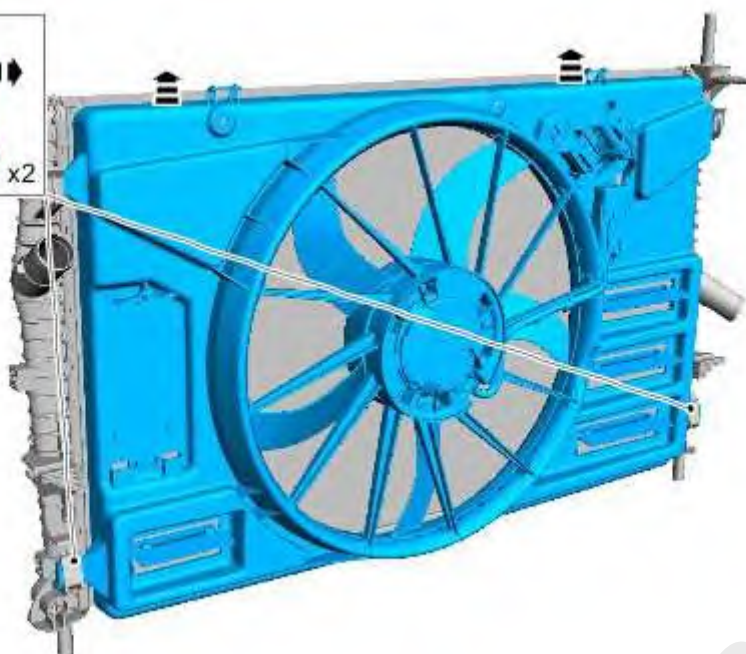

E154504

10.

x2



E154508



Installation

1. To install, reverse the removal procedure.