

Removal and Installation


Materials

Name	Specification
Grease	WSD-M1C227-A


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Cooling System Draining, Vacuum Filling and Bleeding](#) (303-03A Engine Cooling, General Procedures).
2. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
3. *Torque: 10 Nm*

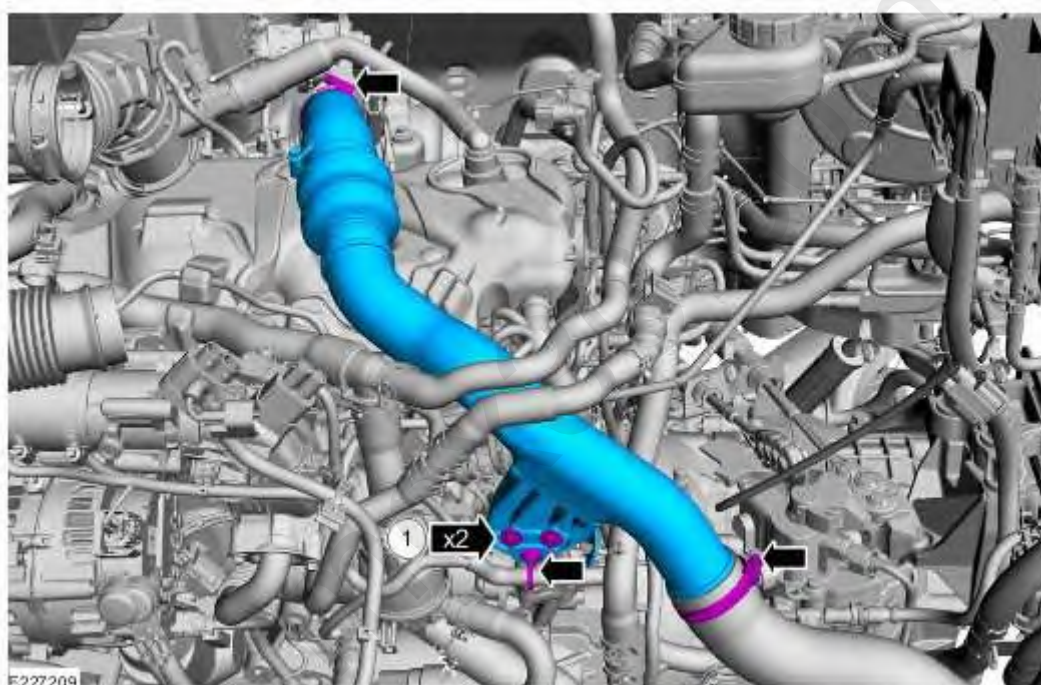


4.

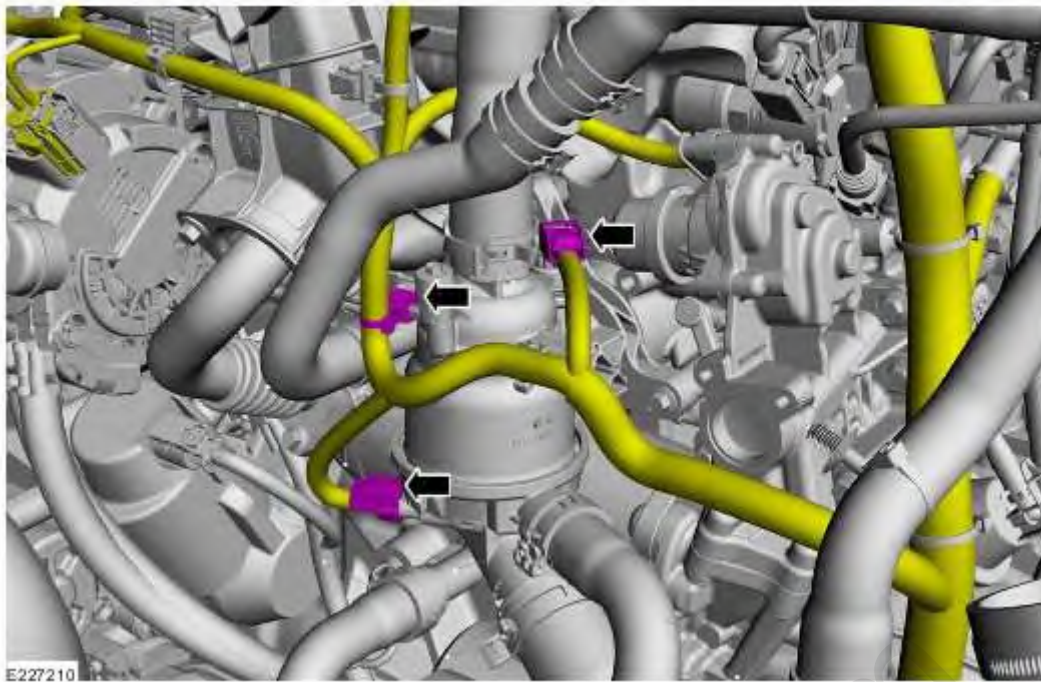


5. NOTE: Be prepared to collect escaping fluid.

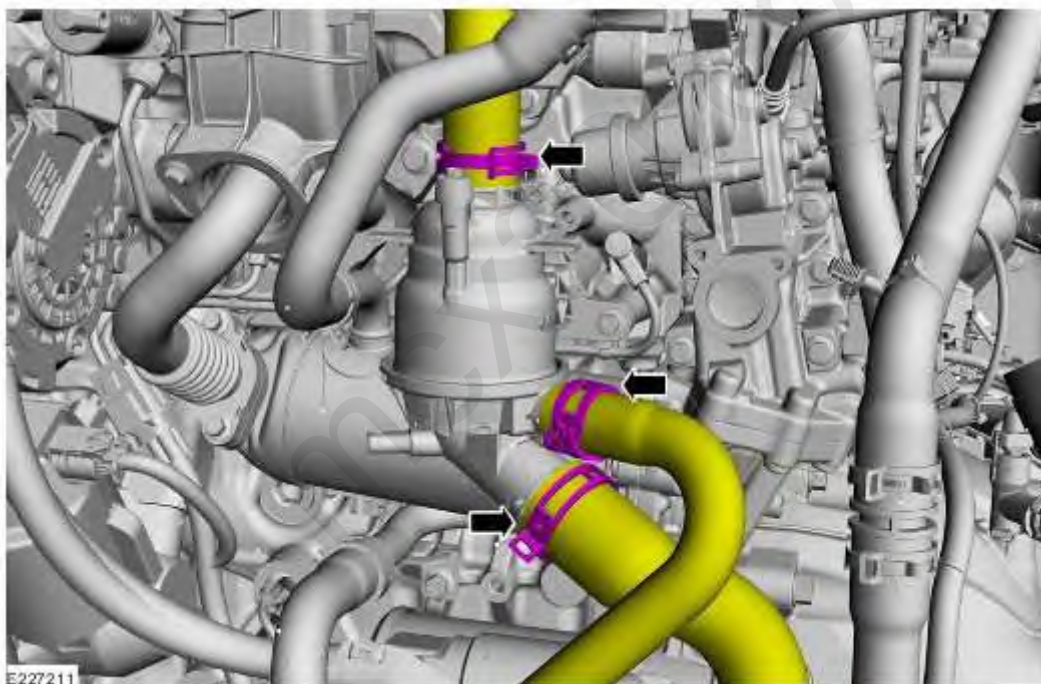

6. Torque: 10 Nm

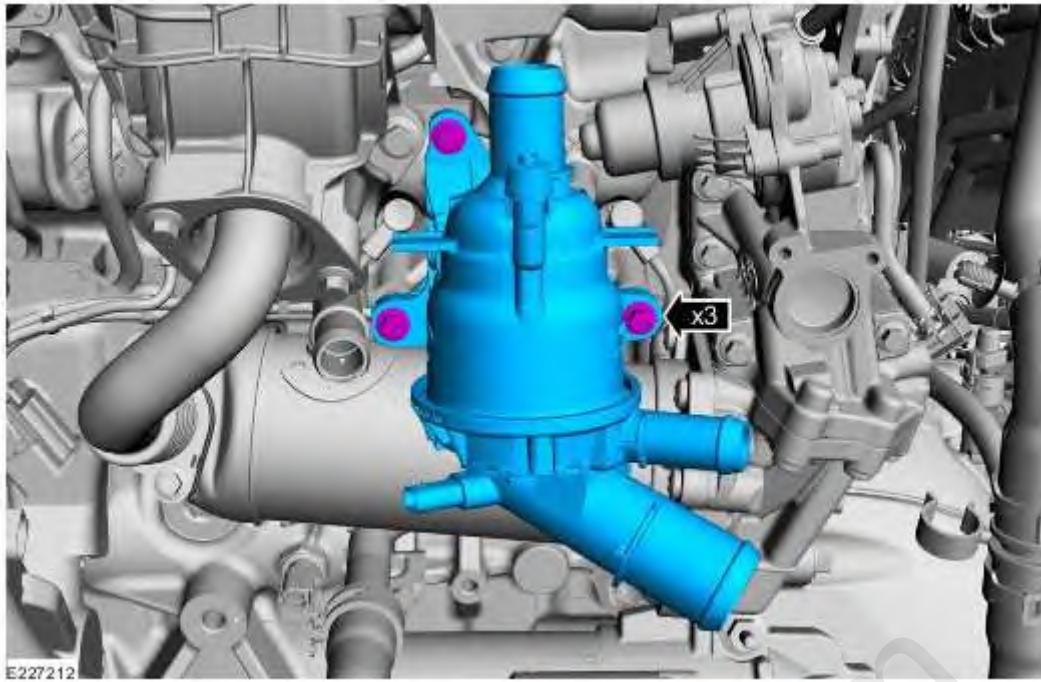


7.

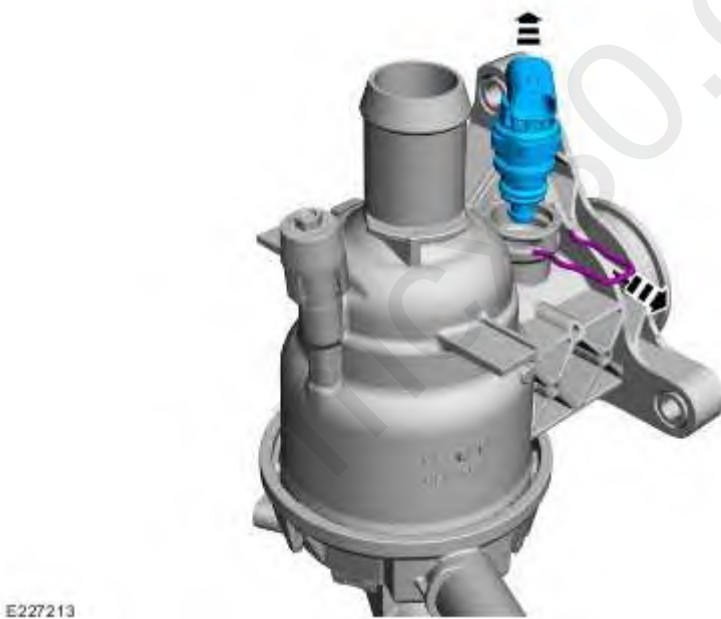

8. Apply a thin coating.

Material: [WSD-M1C227-A \(Grease\)](#)

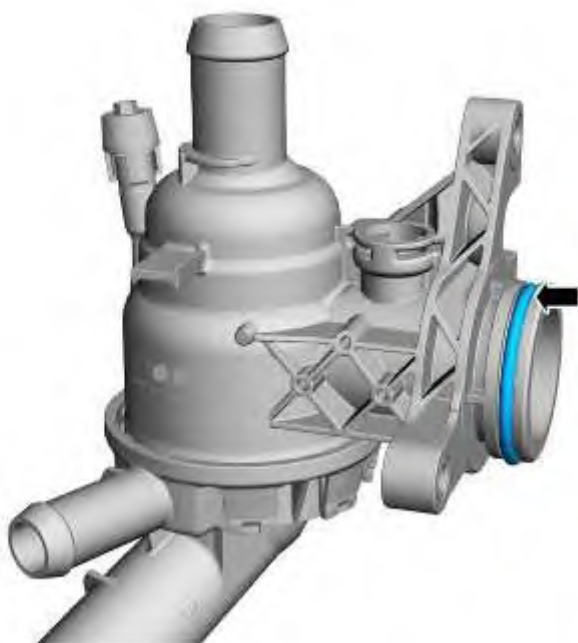

E227214

Installation

1. To install, reverse the removal procedure.