


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
- 2.

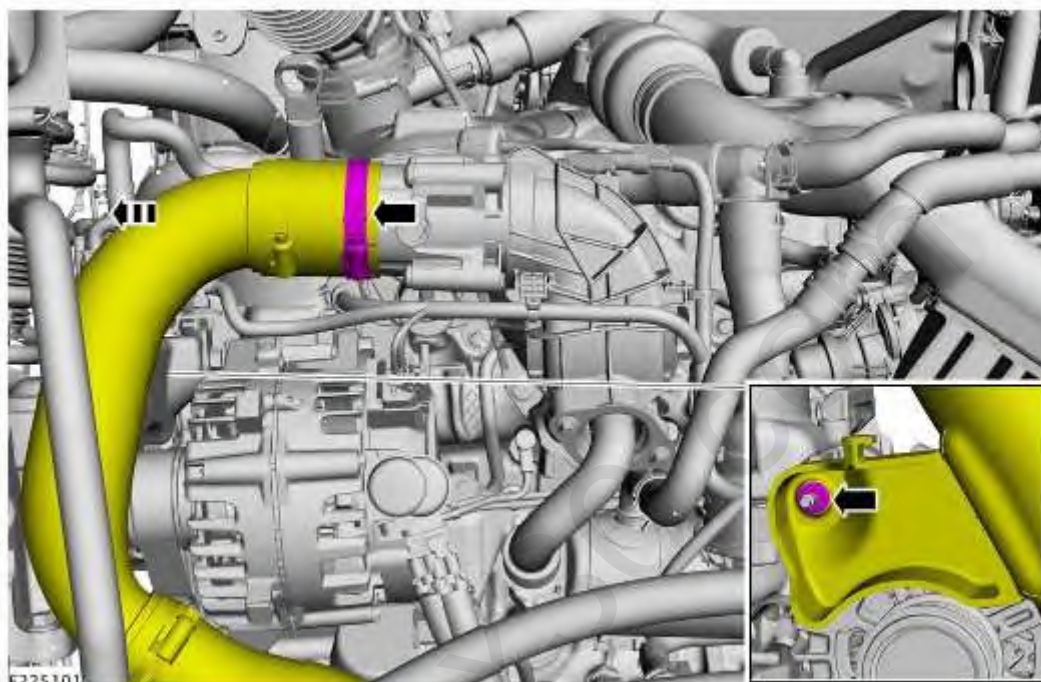


- 3.

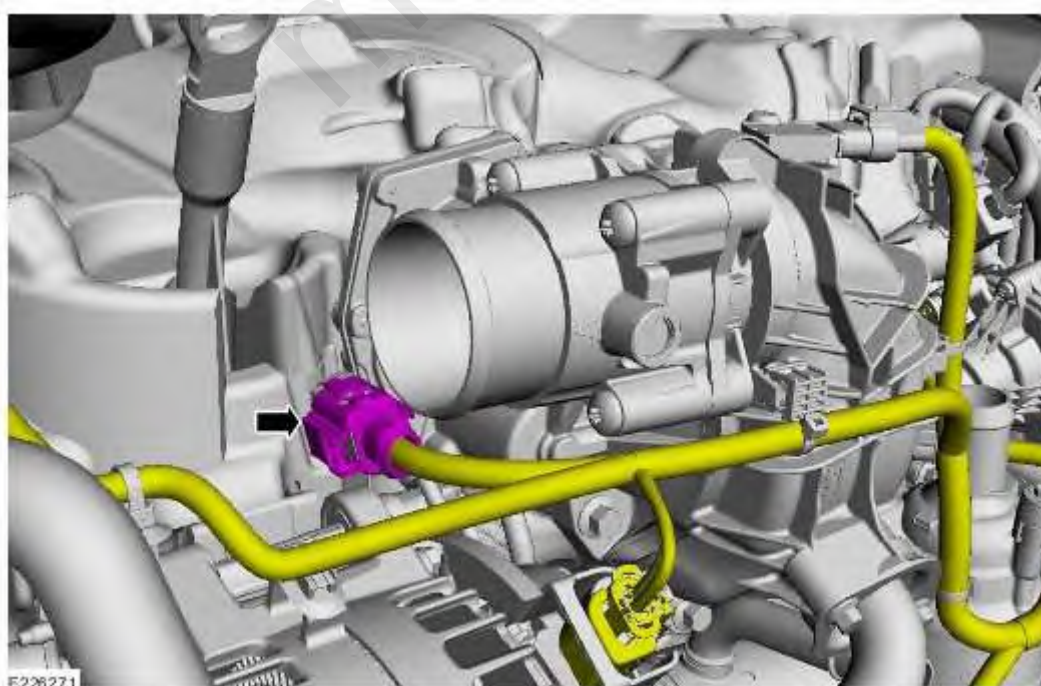

4. Torque: 10 Nm

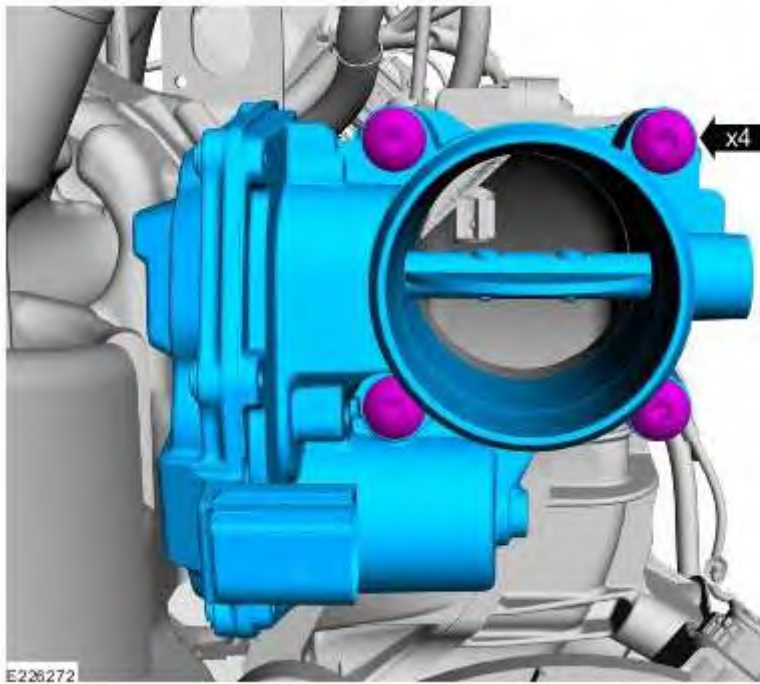

5. NOTE: The O-ring seal is to be reused unless damaged.

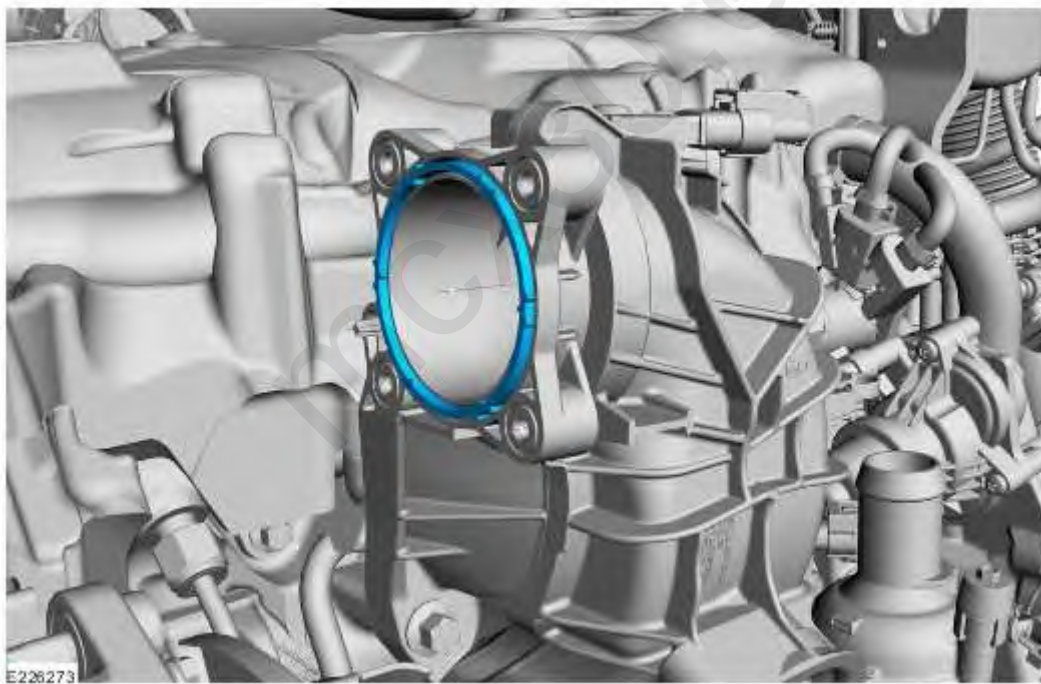

Installation

1. To install, reverse the removal procedure.