

Accessory Drive - 2.0L EcoBlue (77kW/105PS) (YL)/2.0L EcoBlue (96kW/130PS) (YM)/2.0L EcoBlue (125kW/170PS) (YN) - Coolant Pump Belt

 Print

Removal and Installation


Special Tool(s)

	303-1596 Installer, Stretchy Belt
---	--------------------------------------


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Torque: 10 Nm

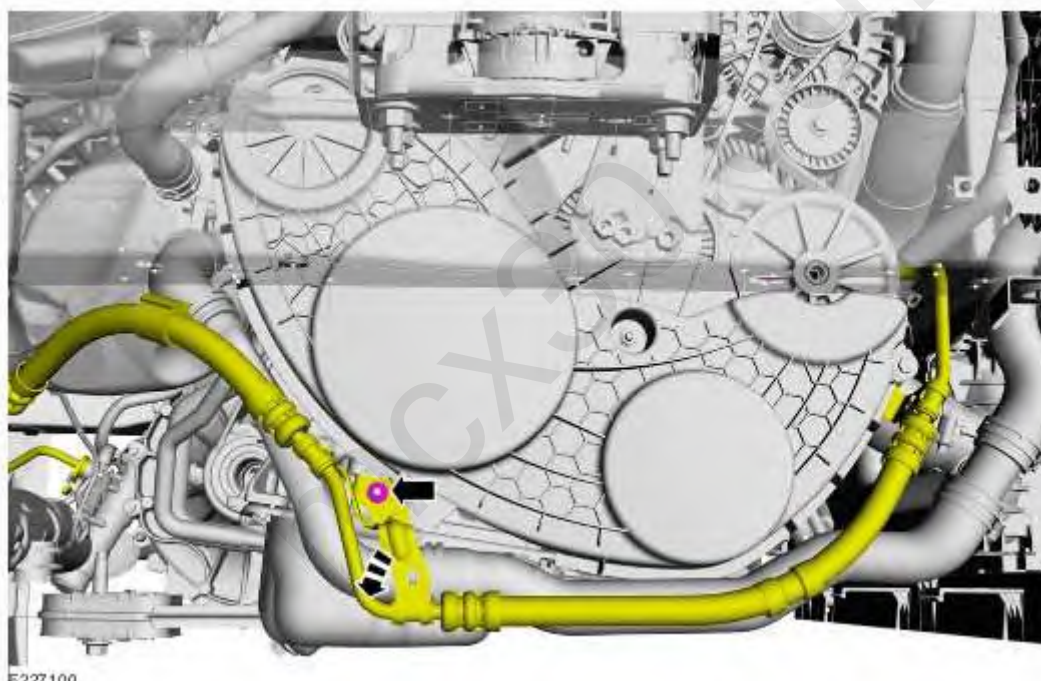

3. Torque:
 - 1: 10 Nm
 - 2: 10 Nm
 - 3: 9 Nm

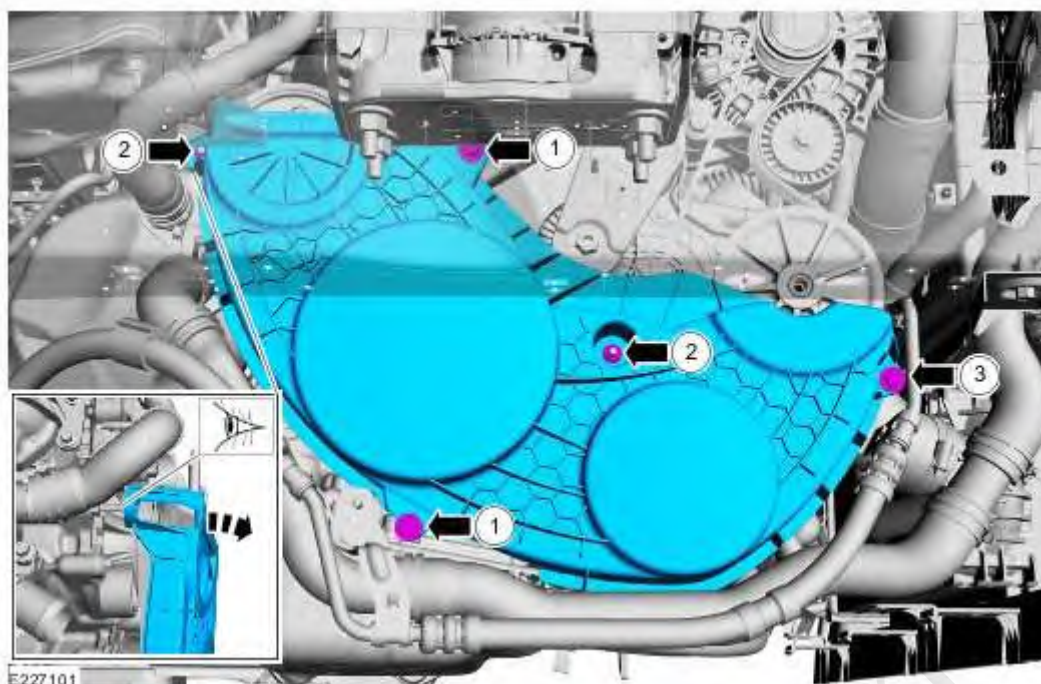


4.

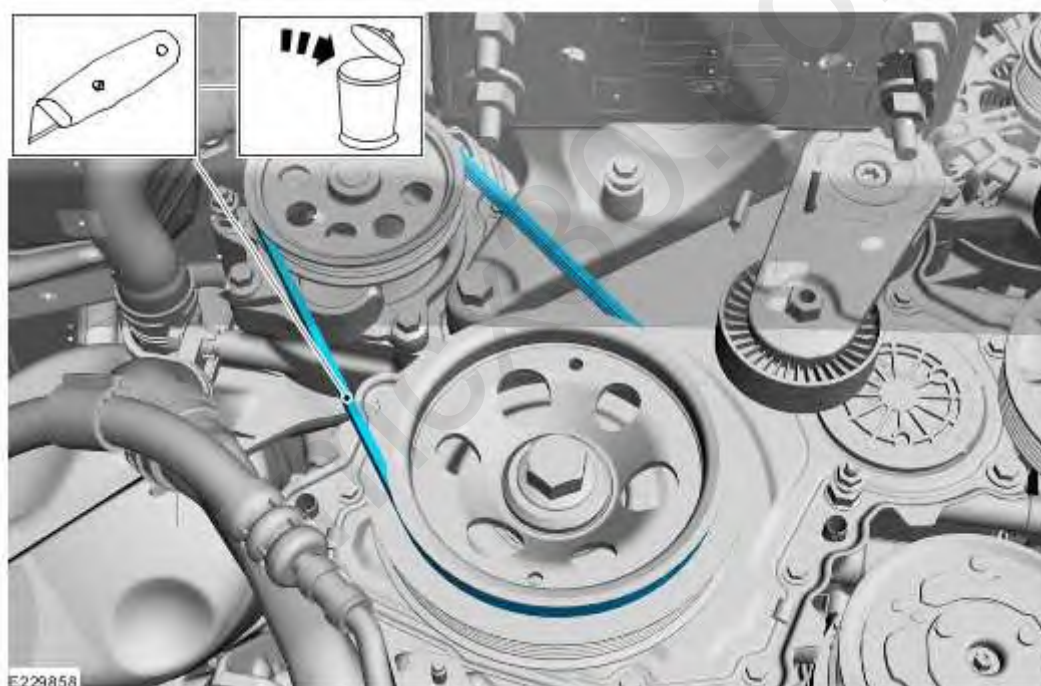


Installation

1. To install, reverse the removal procedure.
2. *Use Suggested Tool:* [303-1596](#). Tool shown or a commercially available equivalent can be used.

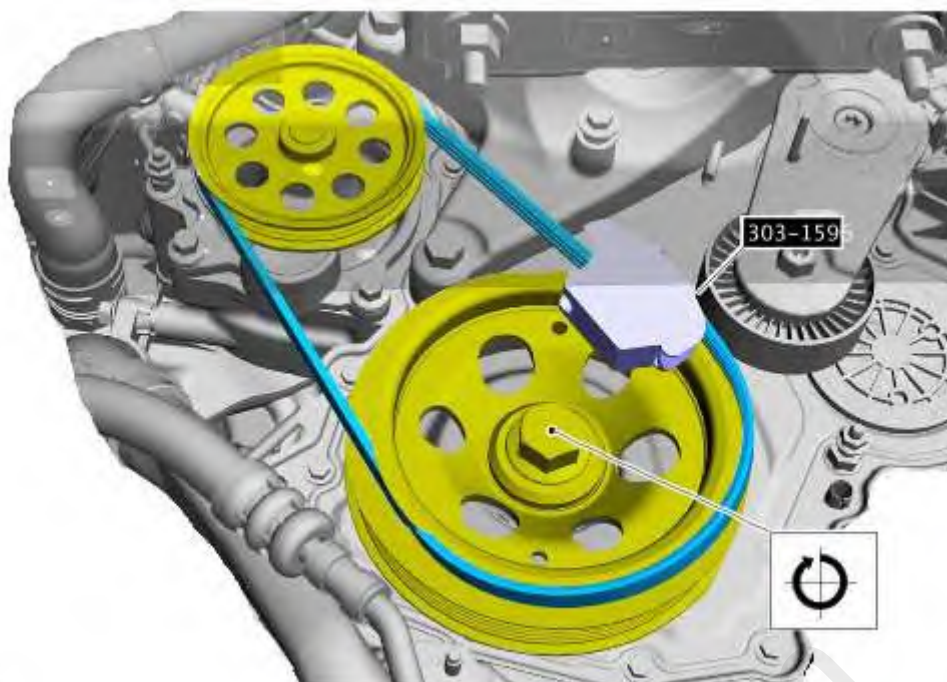

E229859

3.

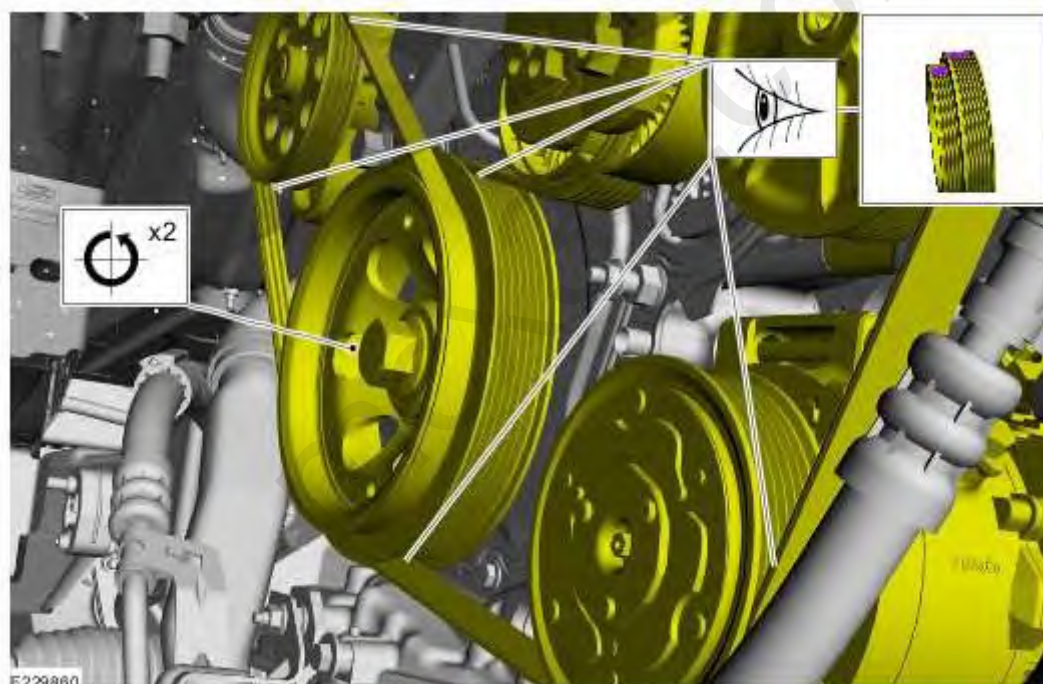

E229860