


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
- 3.

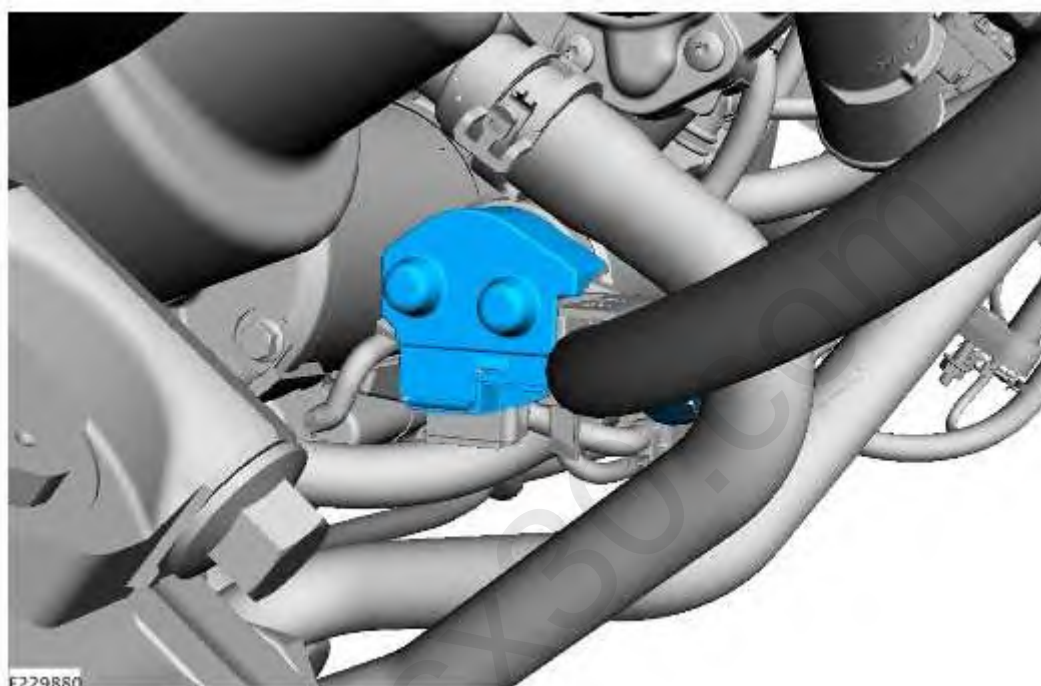

4. Torque:
1: 12 Nm
2: 8 Nm

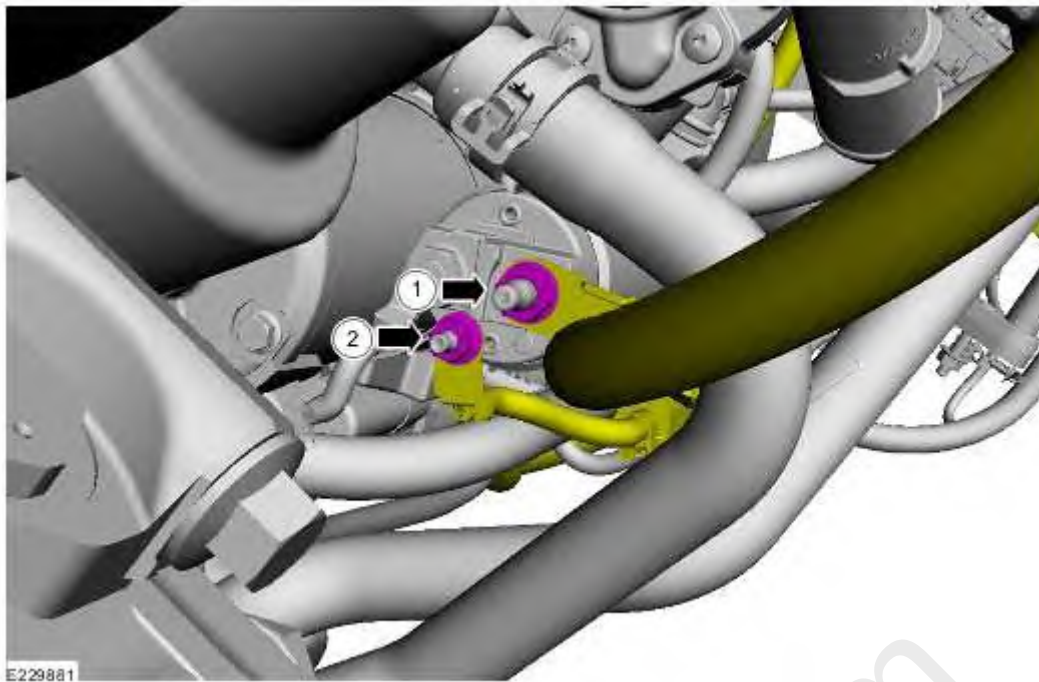

5. Torque: 35 Nm

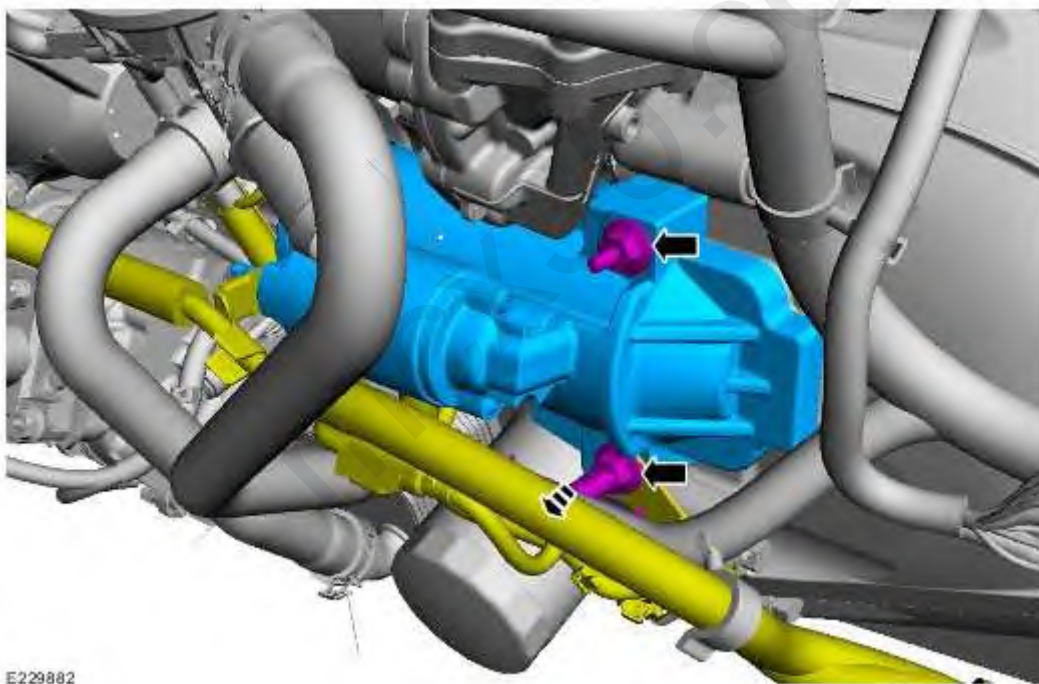

Installation

1. To install, reverse the removal procedure.