



Removal and Installation

Removal


1. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
2. Refer to: [Generator - 2.0L EcoBlue \(77kW/105PS\) \(YL\)/2.0L EcoBlue \(96kW/130PS\) \(YM\)/2.0L EcoBlue \(125kW/170PS\) \(YN\)](#) (414-02 Generator and Regulator, Removal and Installation).
- 3.

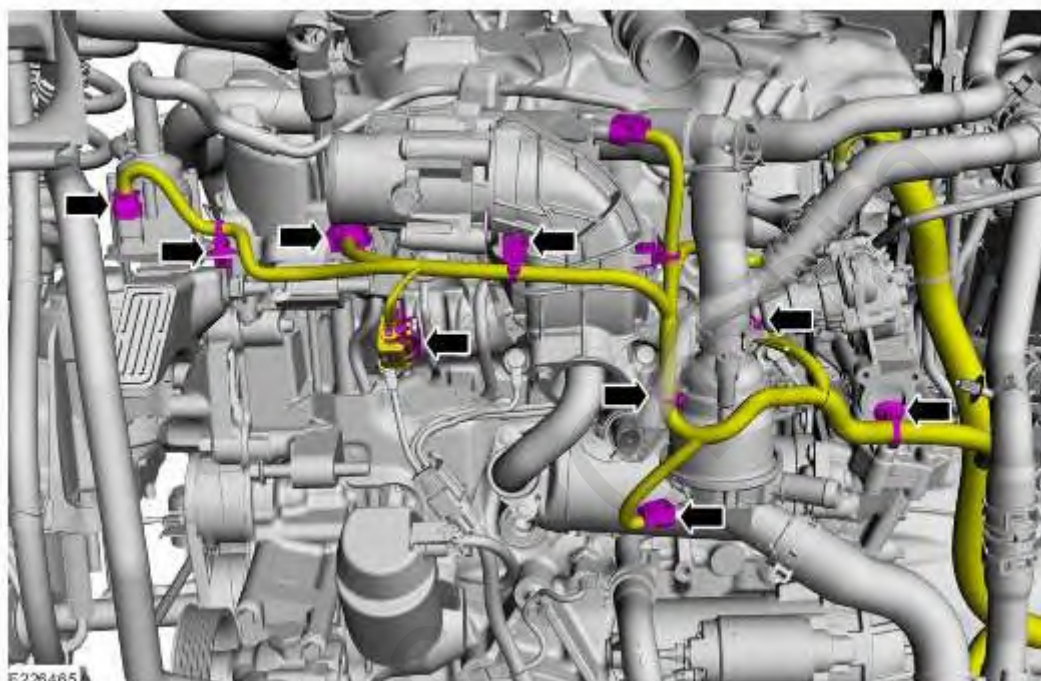

- 4.

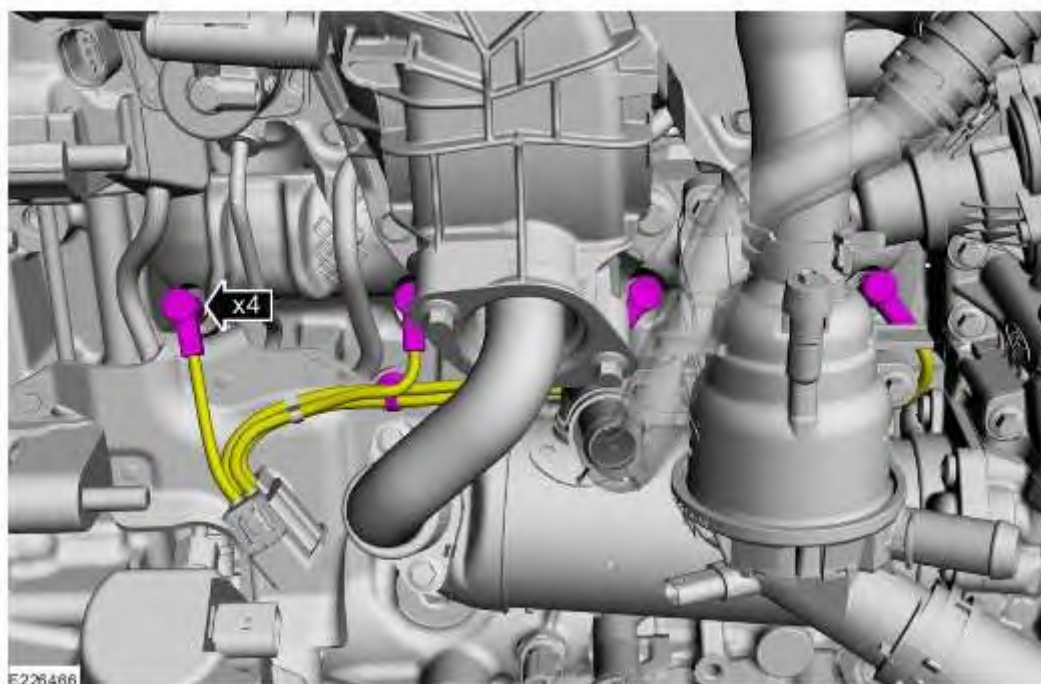

5. Torque: 13 Nm

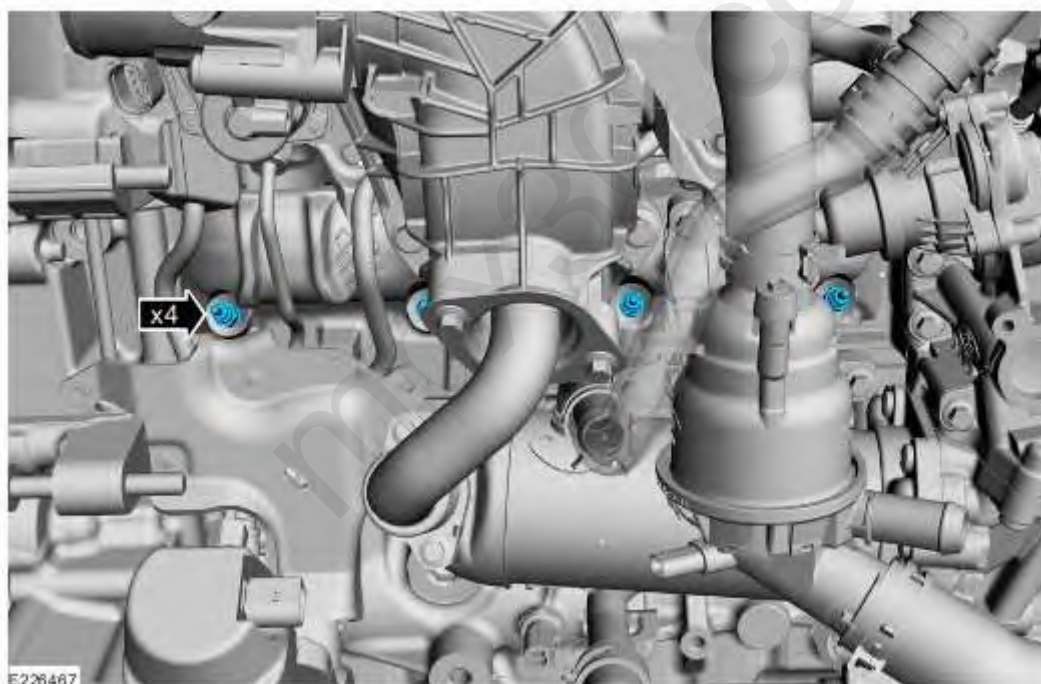

Installation

1. To install, reverse the removal procedure.