

Removal and Installation

General Equipment


Hose Clamp(s)

Hose Clamp Remover/Installer


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
- 2.

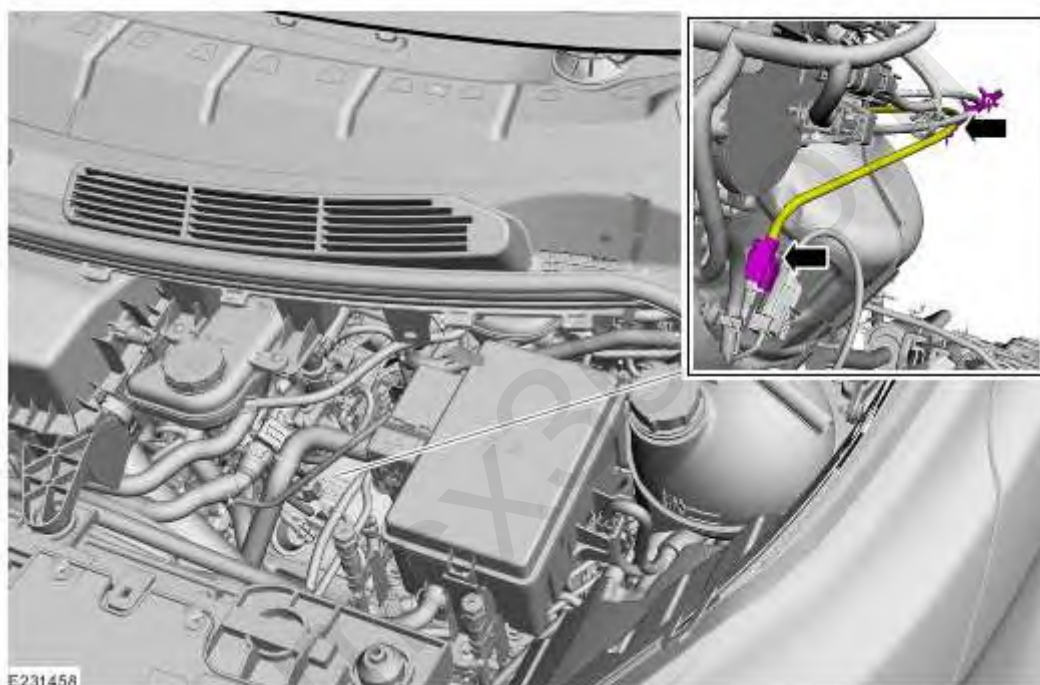


3. *Torque:*
 - 1: 30 Nm
 - 2: 48 Nm

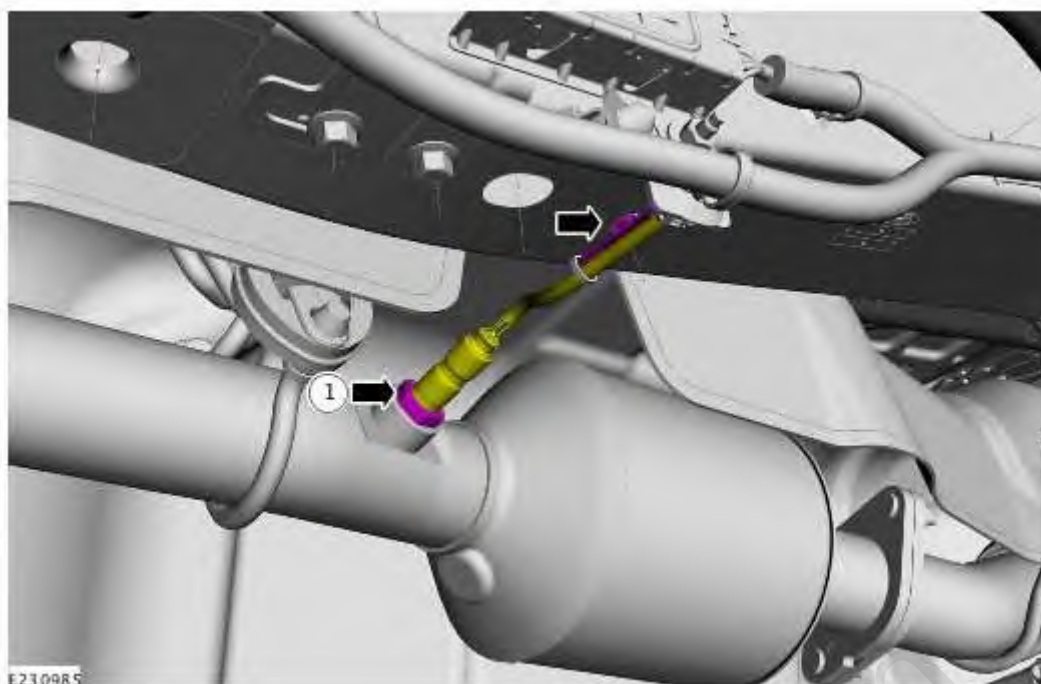


4. Torque: 48 Nm

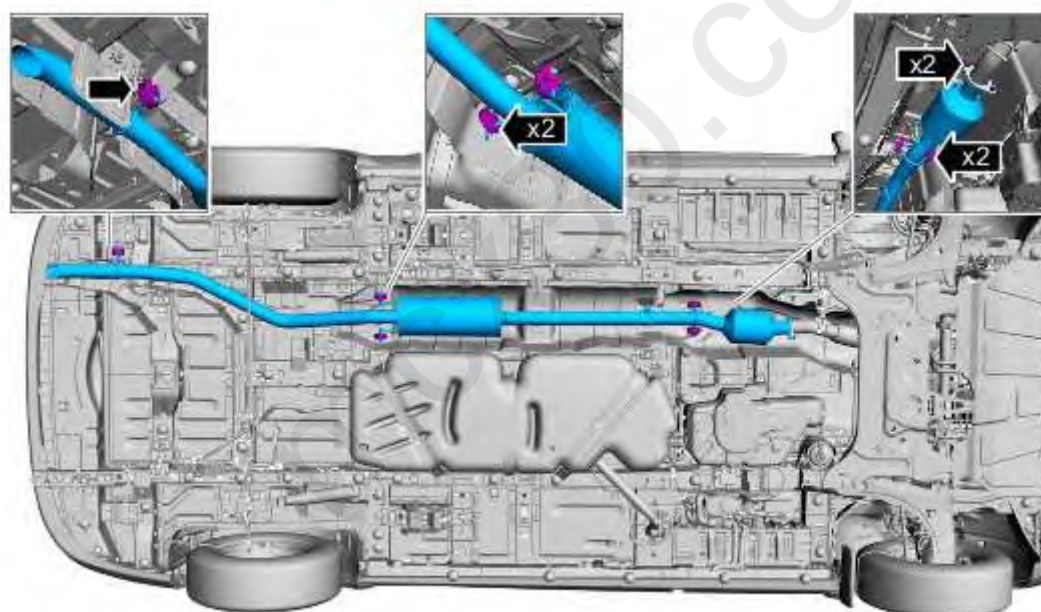

5. Torque:
 1: 10 Nm
 2: 15 Nm

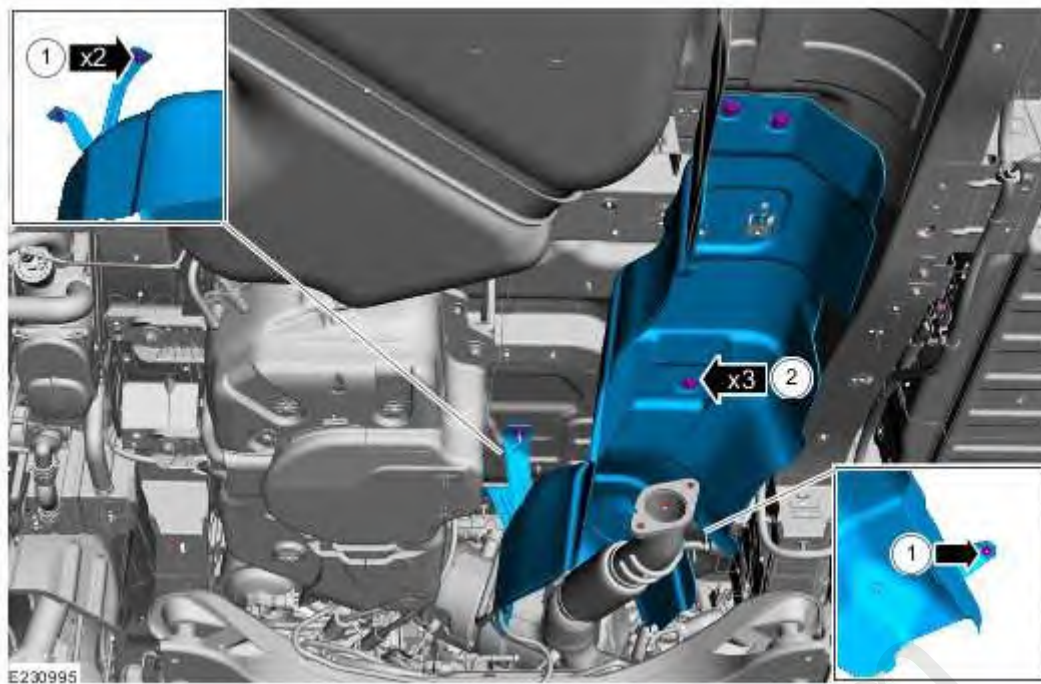


6.

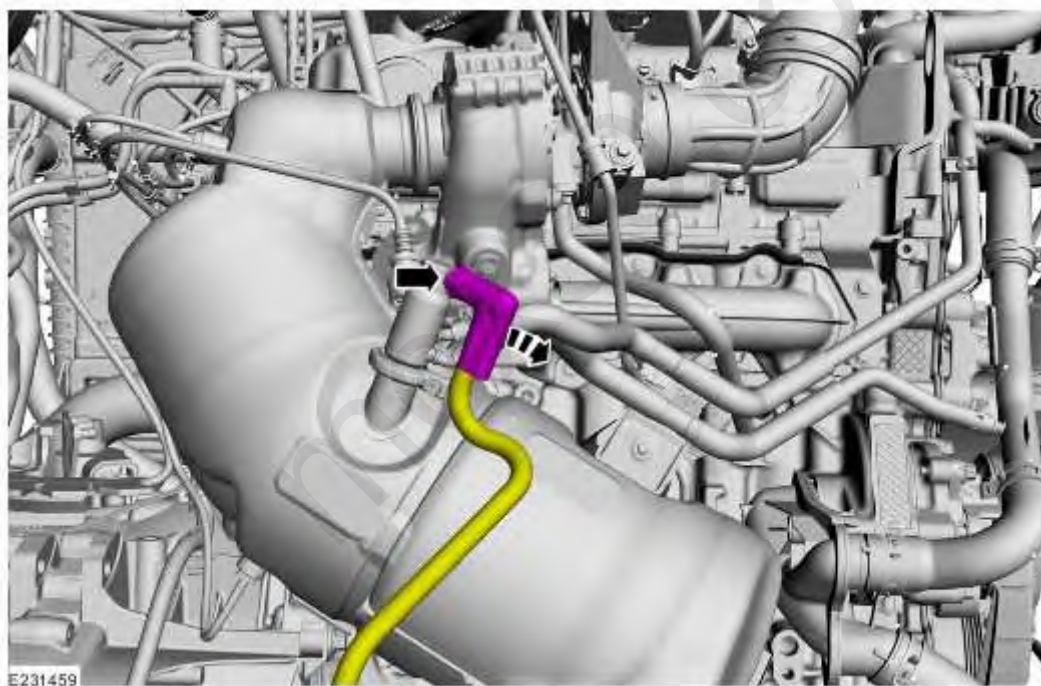


7. **NOTE:** Be prepared to collect escaping fluid.

Use the General Equipments: [Hose Clamp Remover/Installer](#), [Hose Clamp\(s\)](#)
Torque: 15 Nm

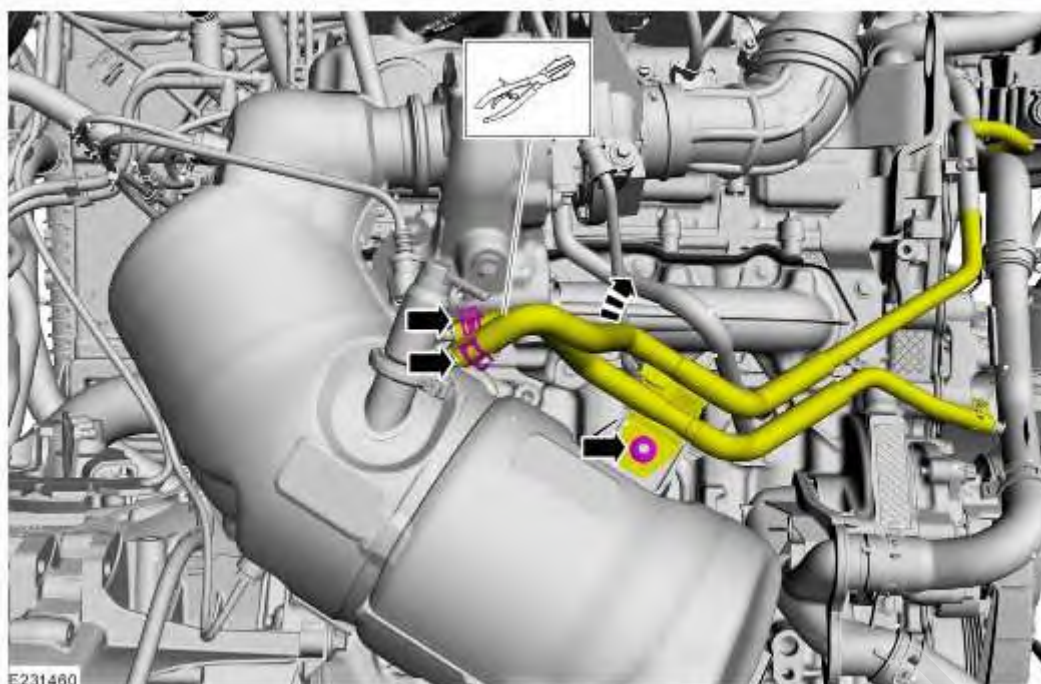

8. Torque: 9 Nm

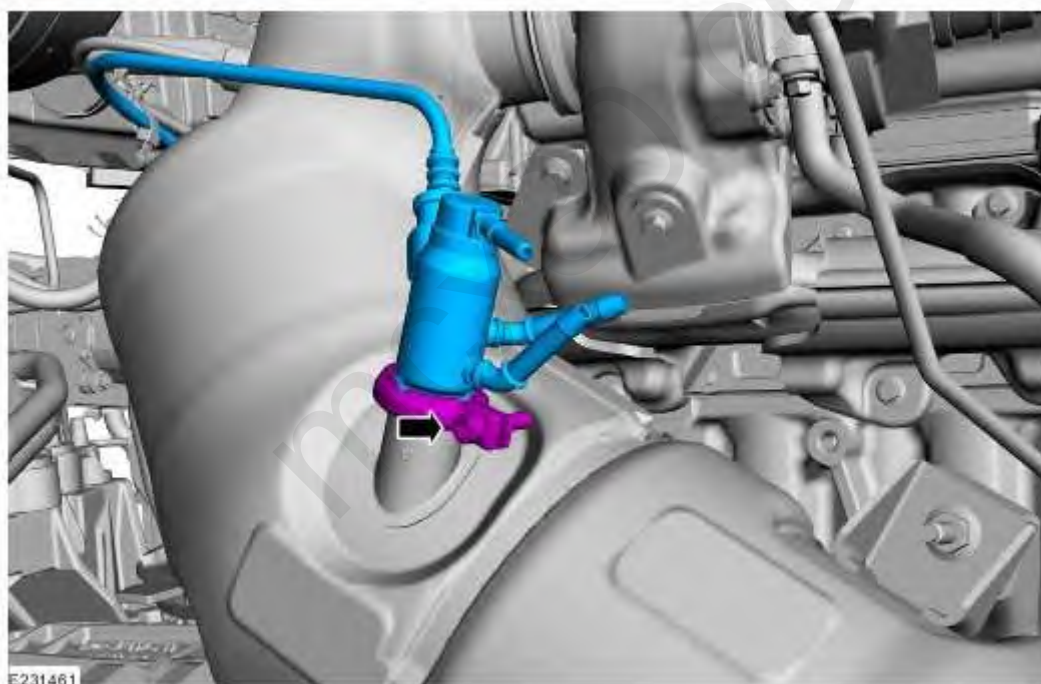

Installation

1. To install, reverse the removal procedure.