


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Torque:
 - 1: 15 Nm
 - 2: 15 Nm
 - 3: 10 Nm

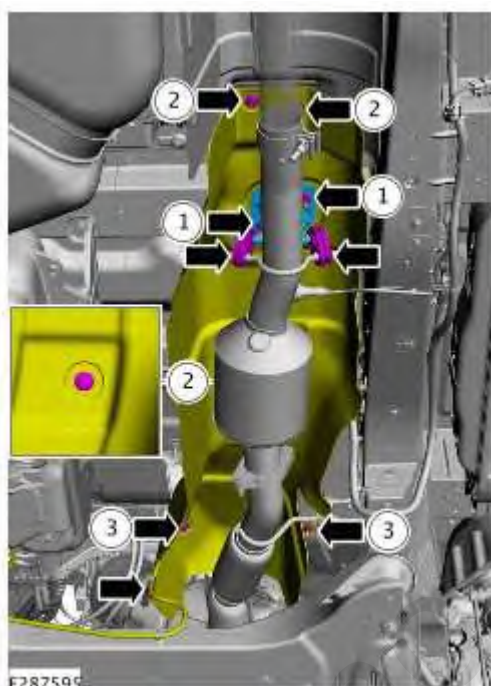


3.

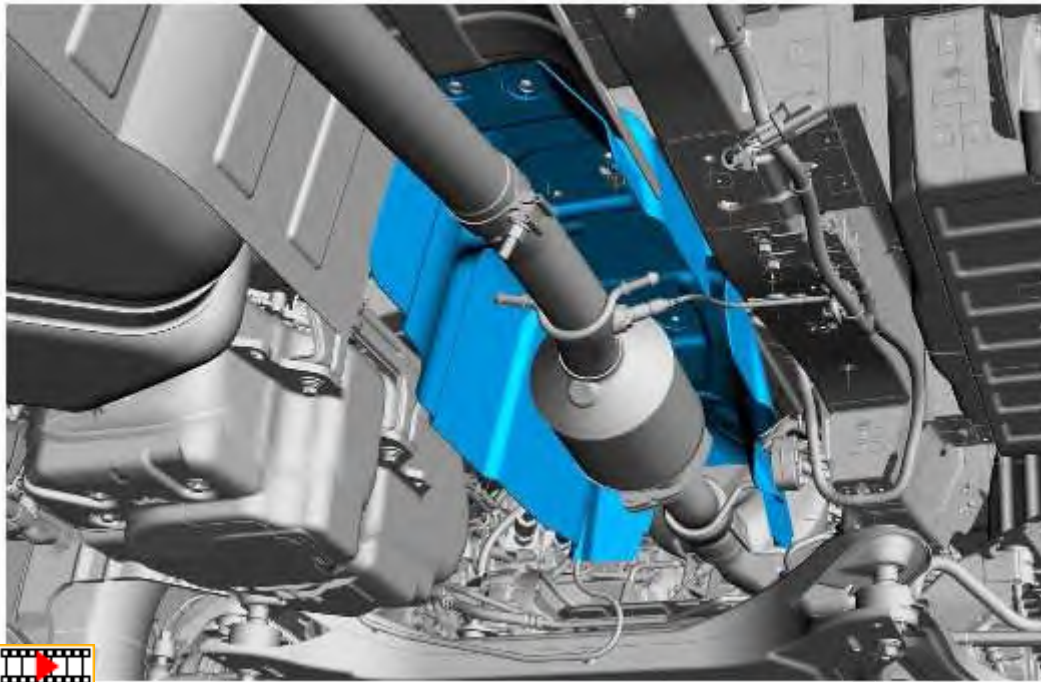


4. NOTE: Be prepared to collect escaping fluid.
NOTE: Use suitable paper to absorb any escaping fluid.

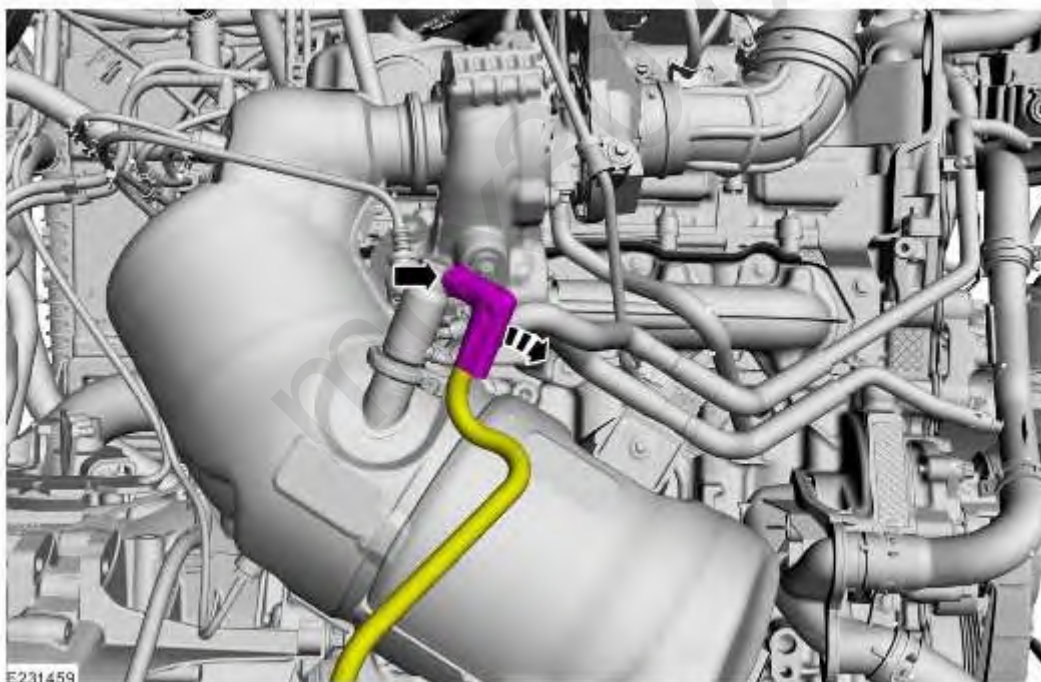

- 5.

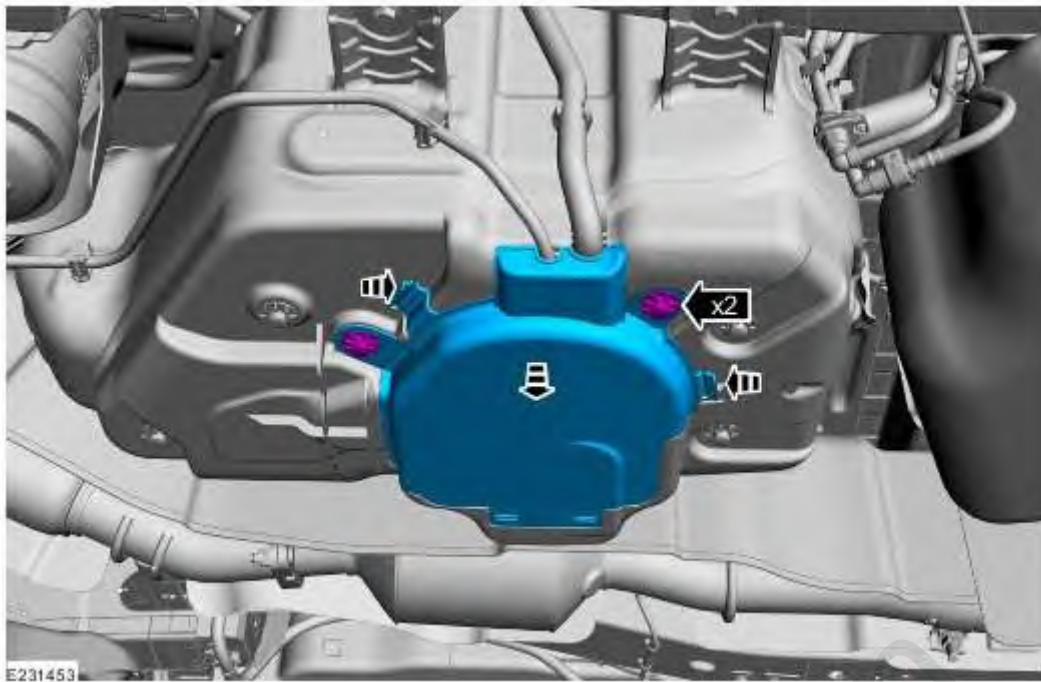

6. NOTE: Be prepared to collect escaping fluid.
NOTE: Use suitable paper to absorb any escaping fluid.

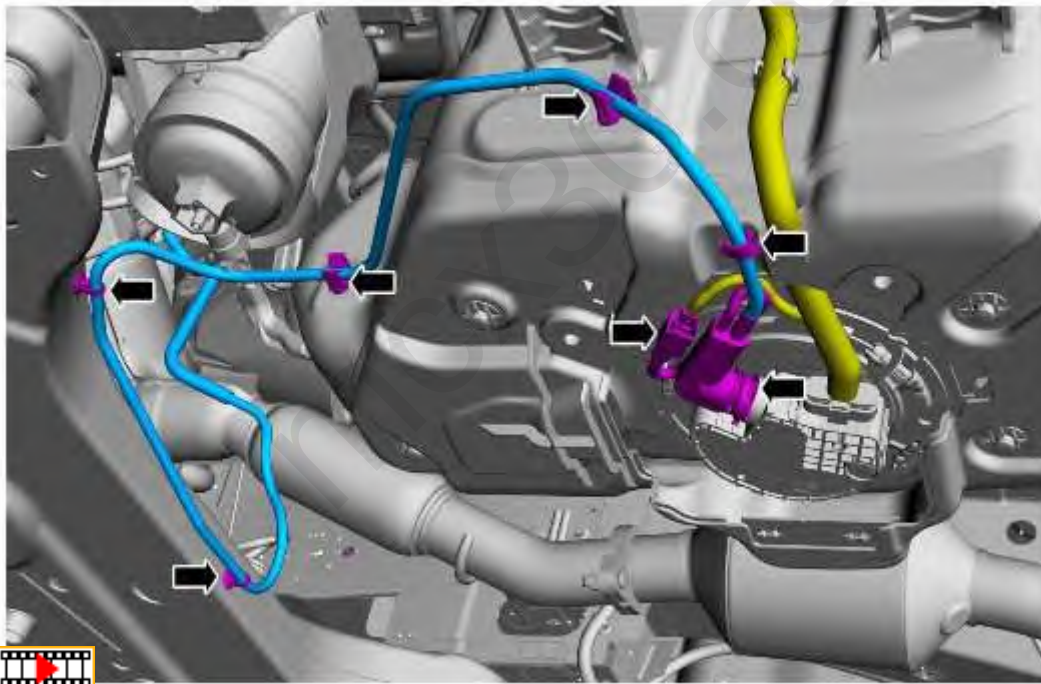

Installation

1. To install, reverse the removal procedure.