

Removal and Installation



General Equipment

Fuel Tank Draining Equipment


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Use the General Equipment: [Fuel Tank Draining Equipment](#)

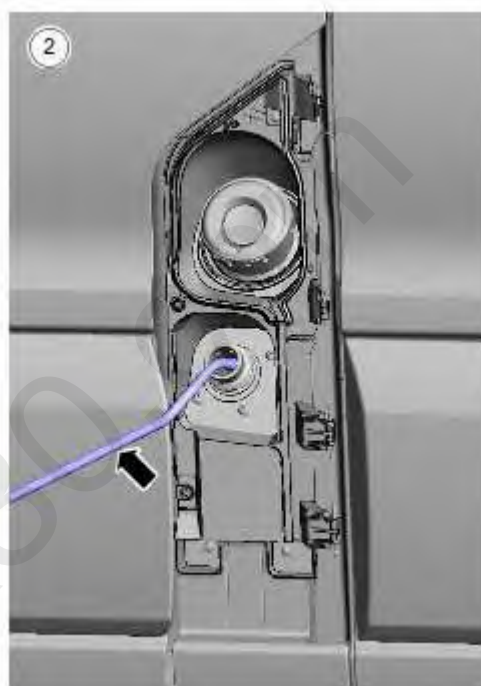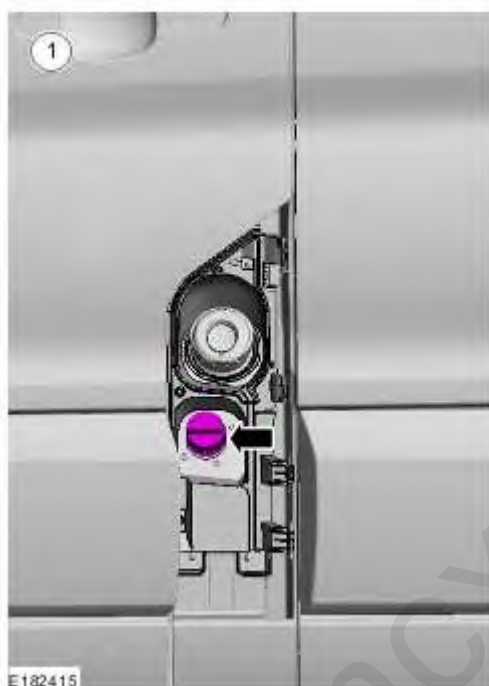

3.

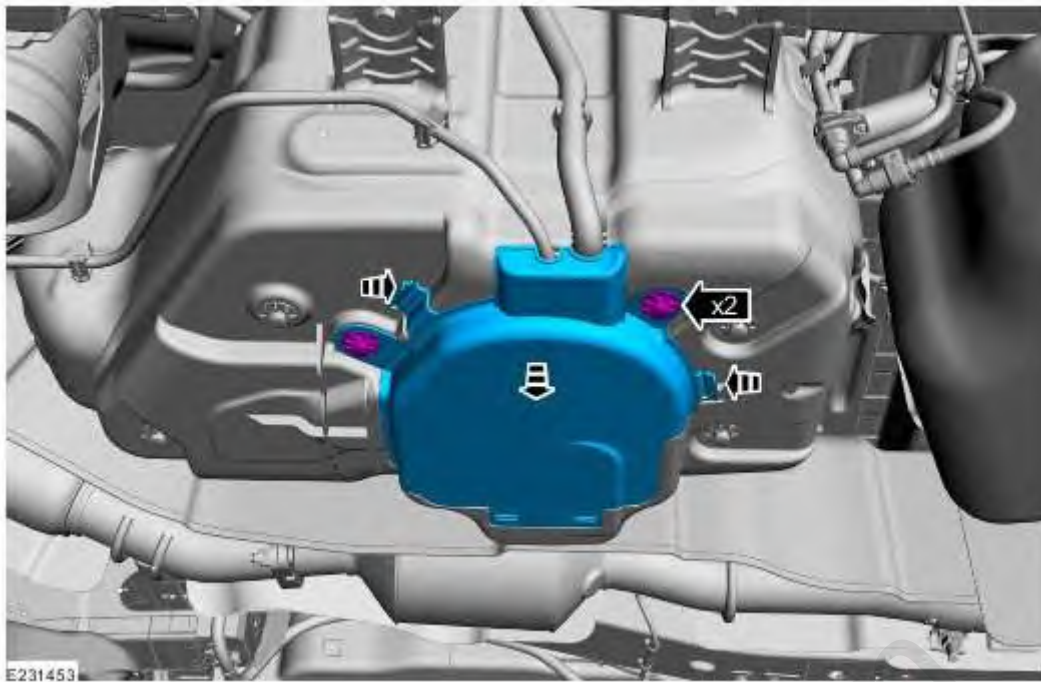


4. NOTICE:



Make sure to follow the instruction in the video.



Take extra care not to damage the component.

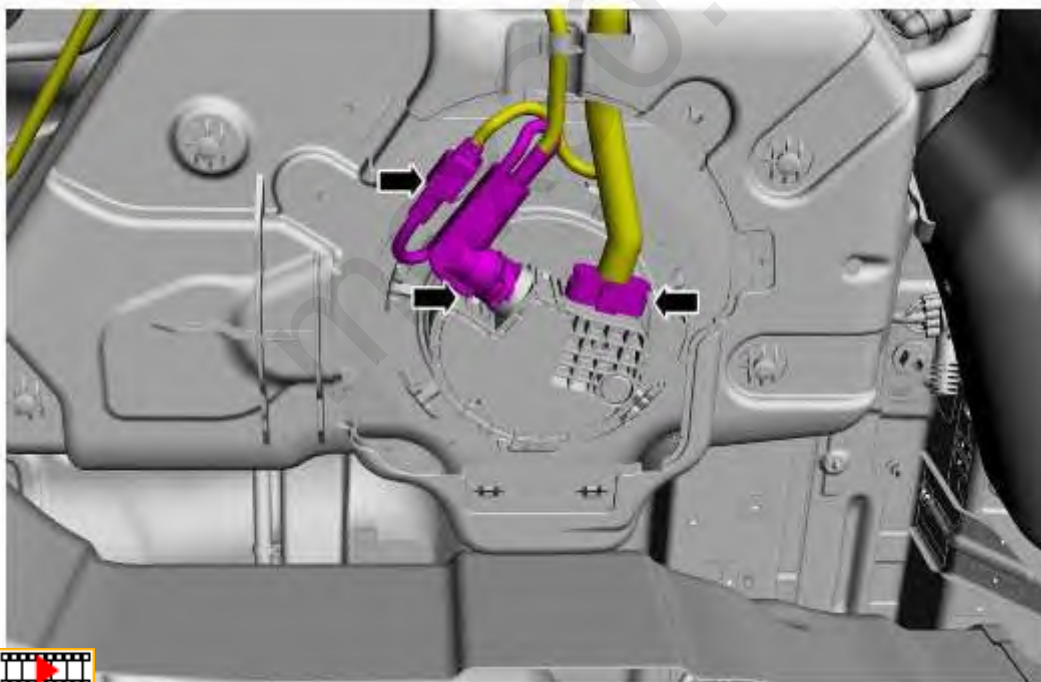

5. NOTE: Be prepared to collect escaping fluid.



Installation

1. To install, reverse the removal procedure.