

Removal and Installation

General Equipment


Fuel Tank Draining Equipment

Transmission Jack


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Use the General Equipment: [Fuel Tank Draining Equipment](#)

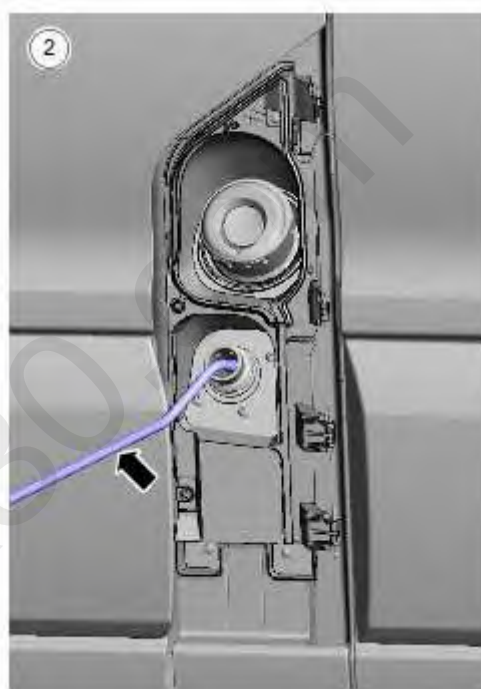


3.

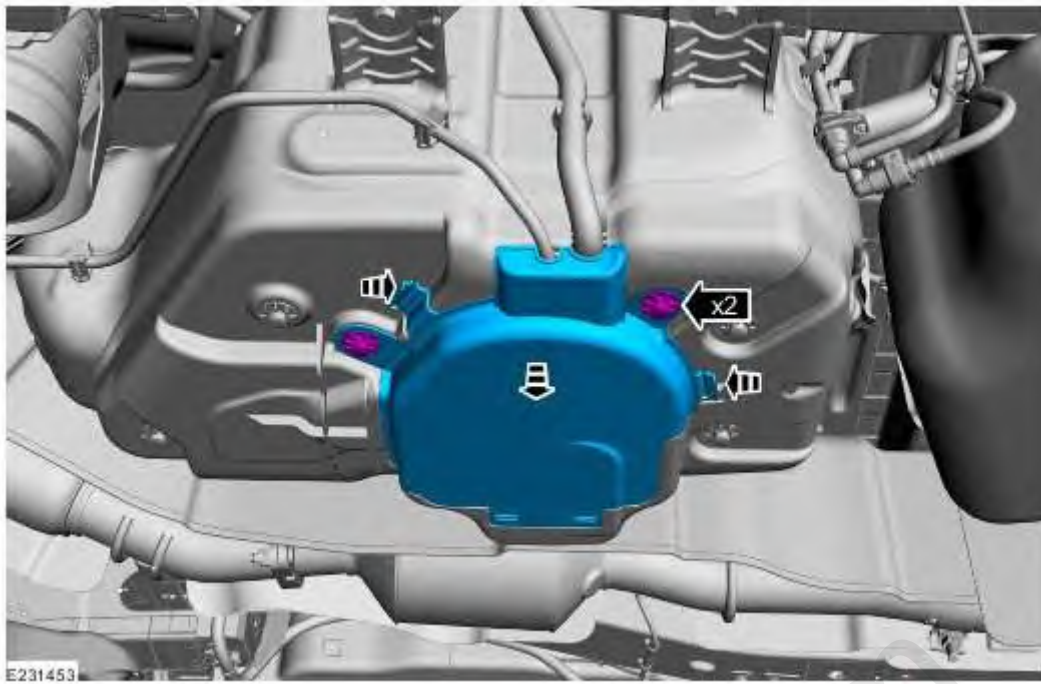

4.

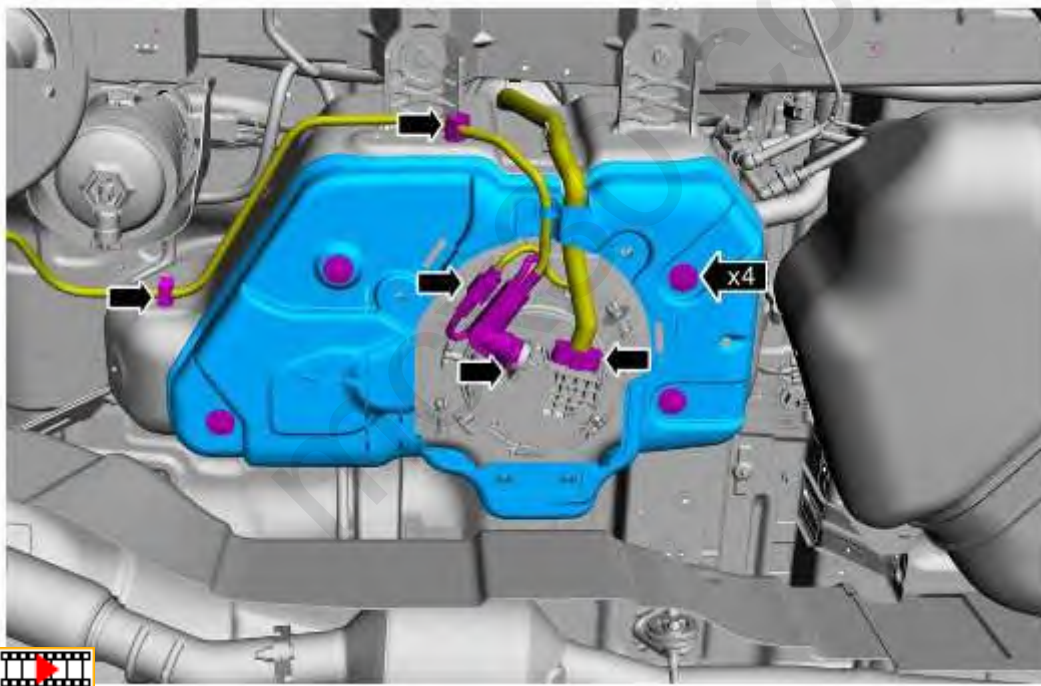


5.

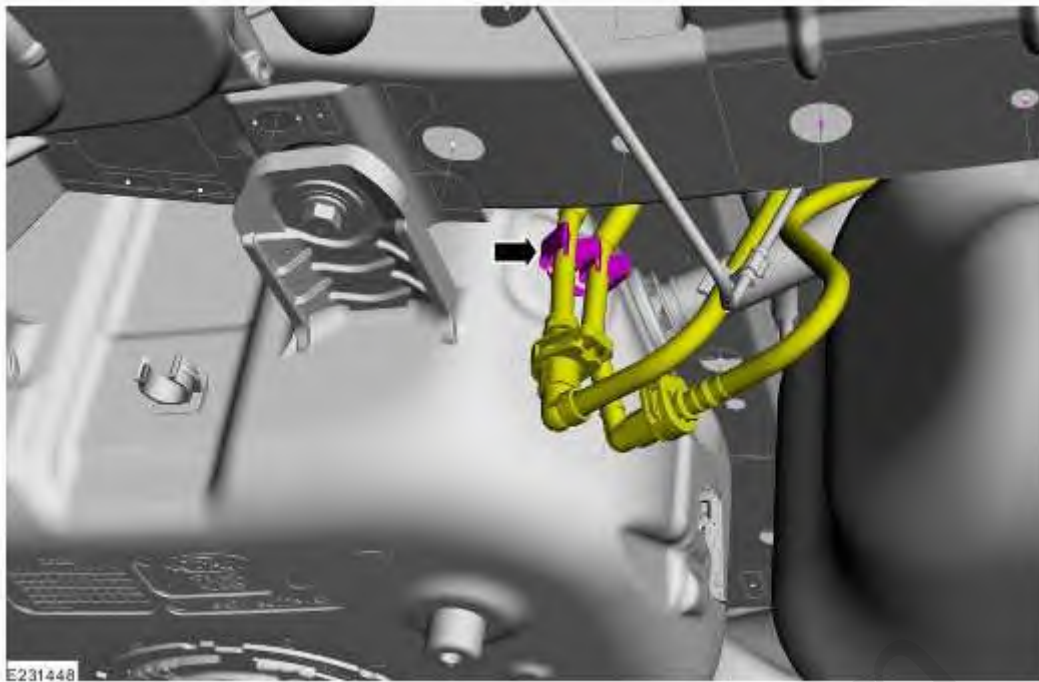


6. **NOTE:** Be prepared to collect escaping fluid.

Torque: 35 Nm

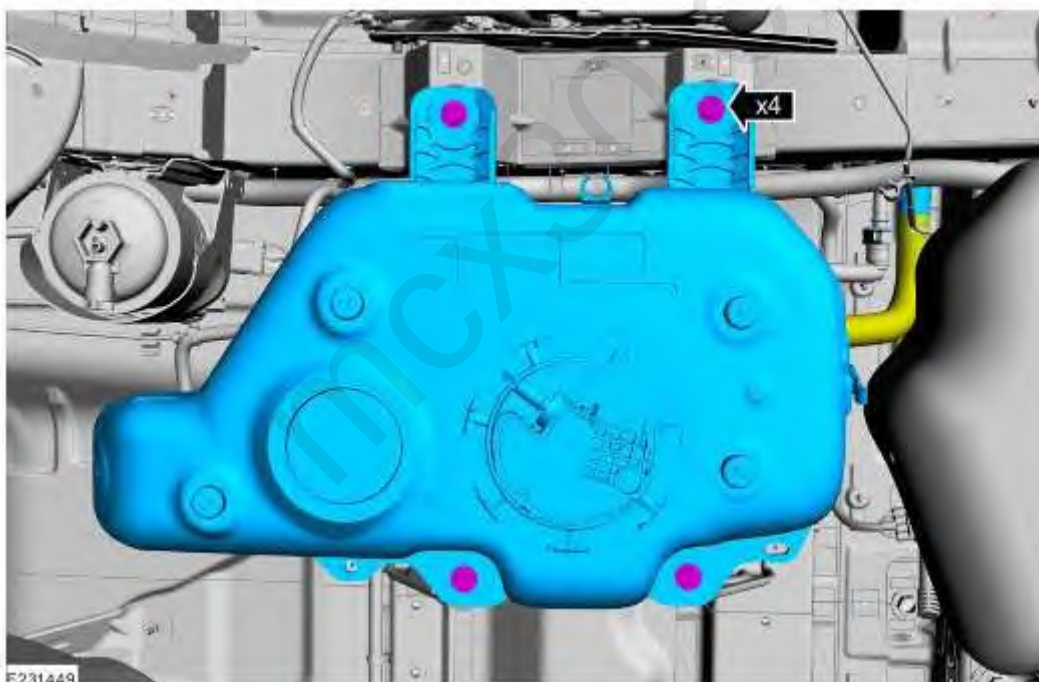

7.  **NOTICE:** Make sure that no strain is placed on the fuel lines and wiring harnesses.

Use the General Equipment: [Transmission Jack](#)

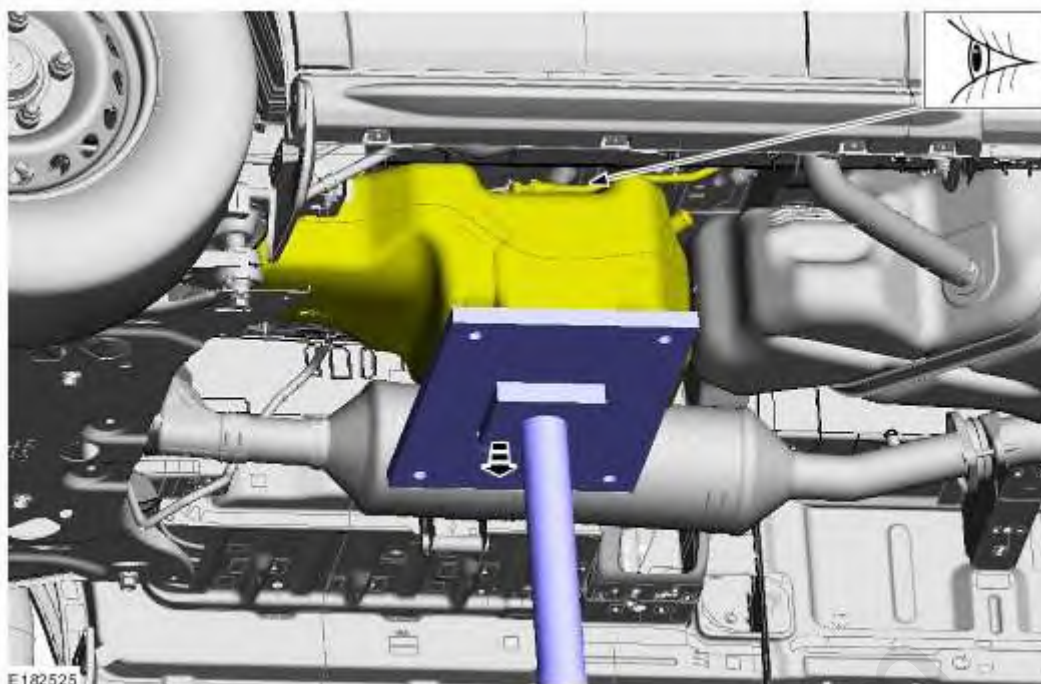

8.



9.



E182526

Installation

1. To install, reverse the removal procedure.