

Removal and Installation

General Equipment

Hose Clamp(s)

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
- 2.




E182423

3. Refer to: [Quick Release Coupling](#) (310-00A Fuel System - General Information, General Procedures).
Use the General Equipment: [Hose Clamp\(s\)](#)

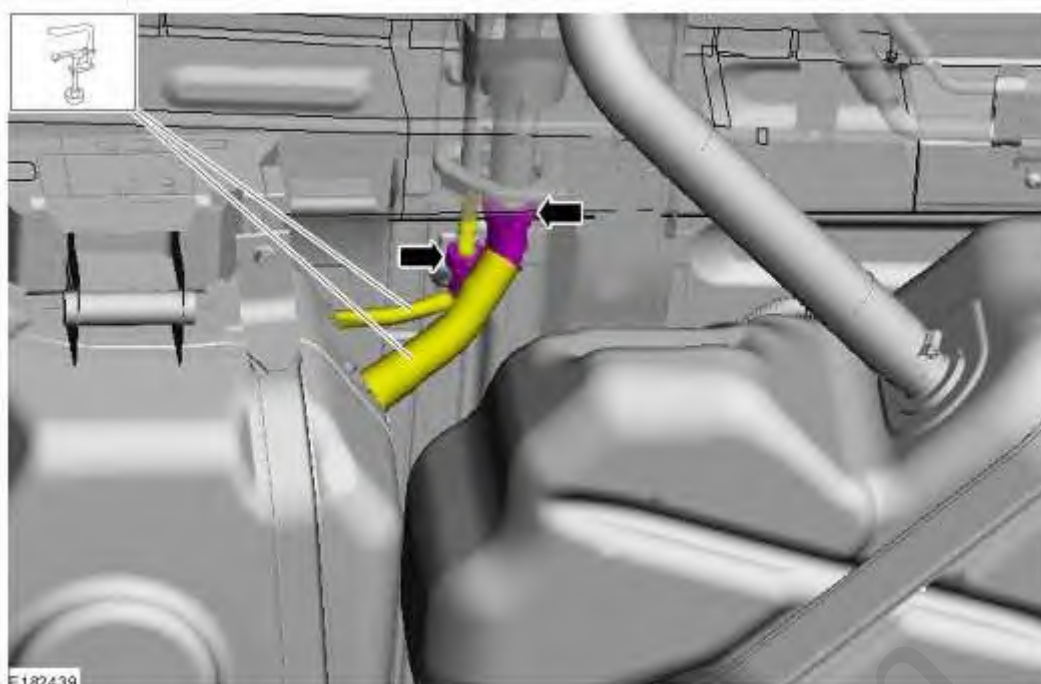

4.

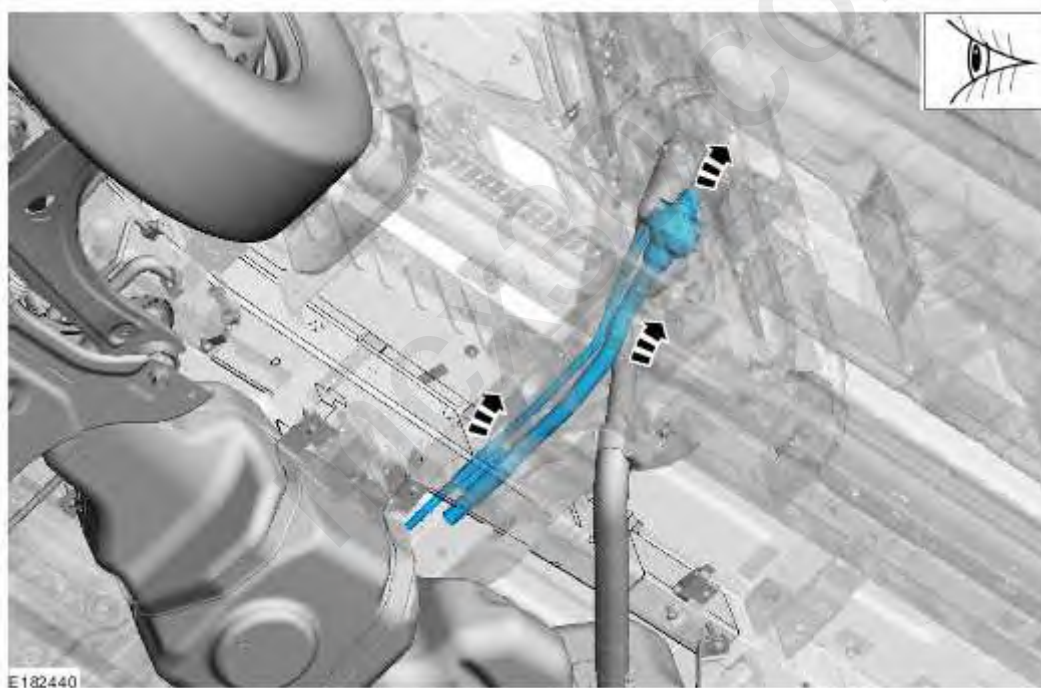

Installation

1. To install, reverse the removal procedure.