


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Torque: 8 Nm

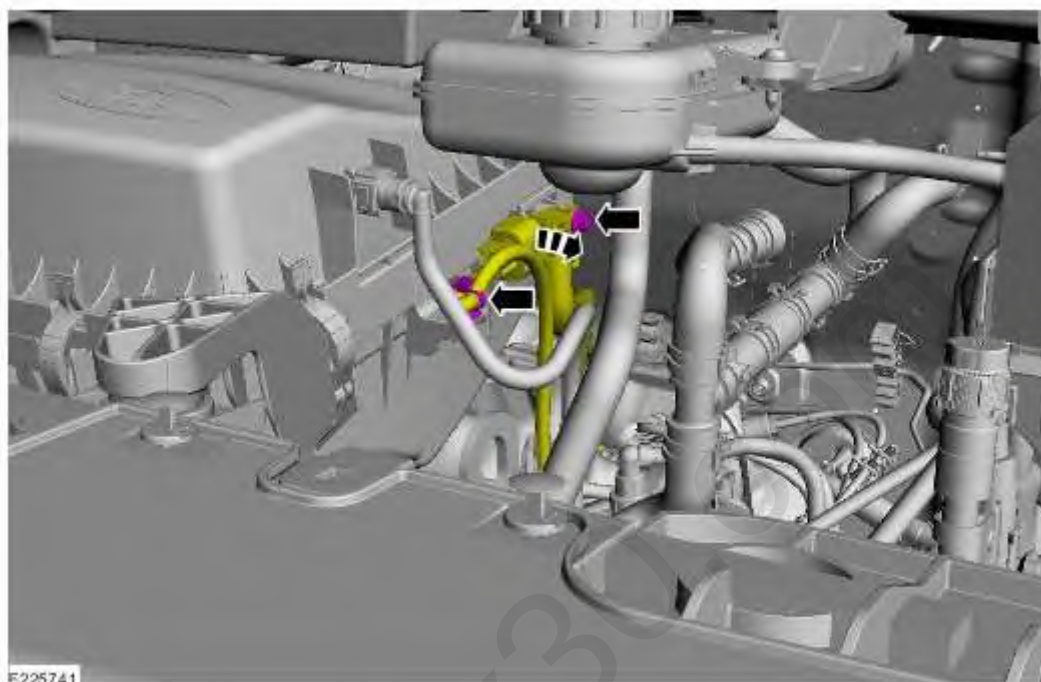


E225741

- 2.

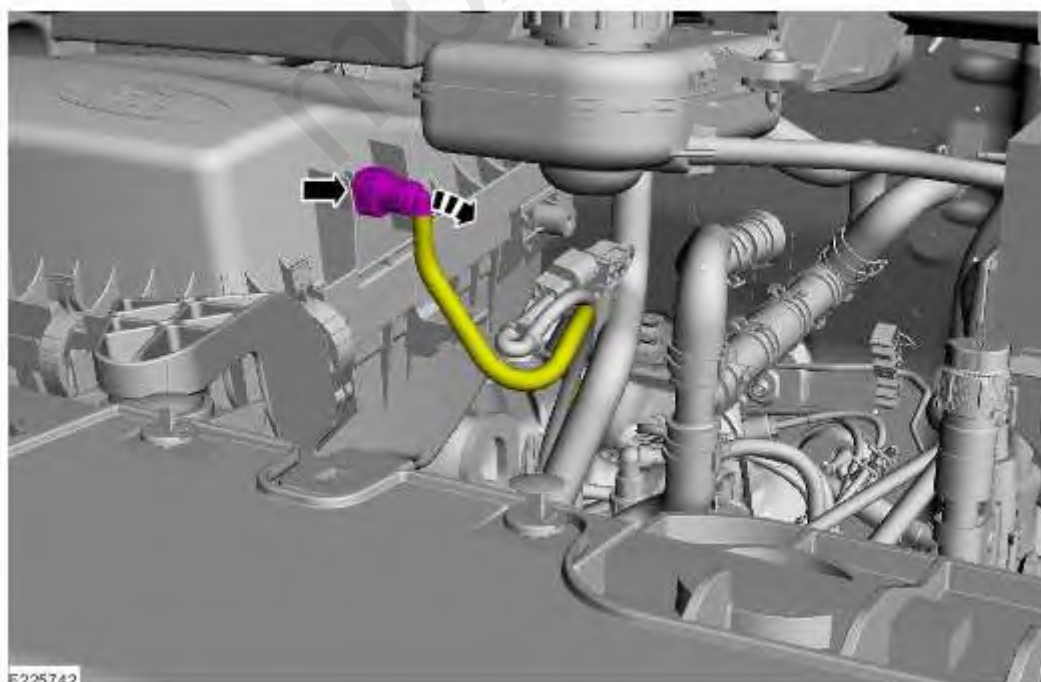


E225742

- 3.

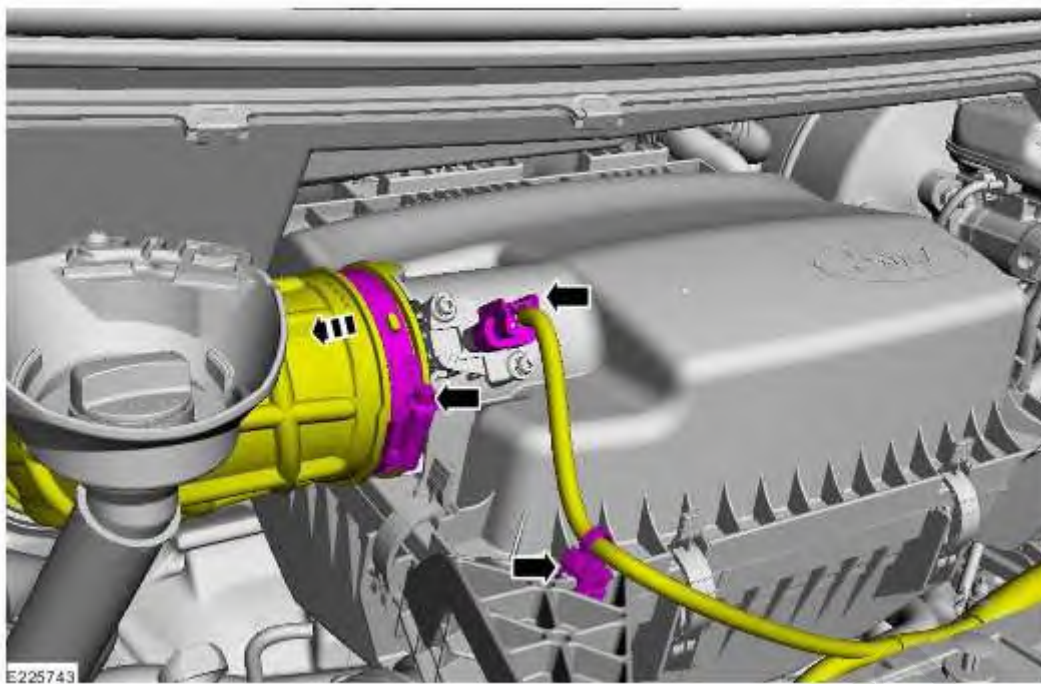

4.

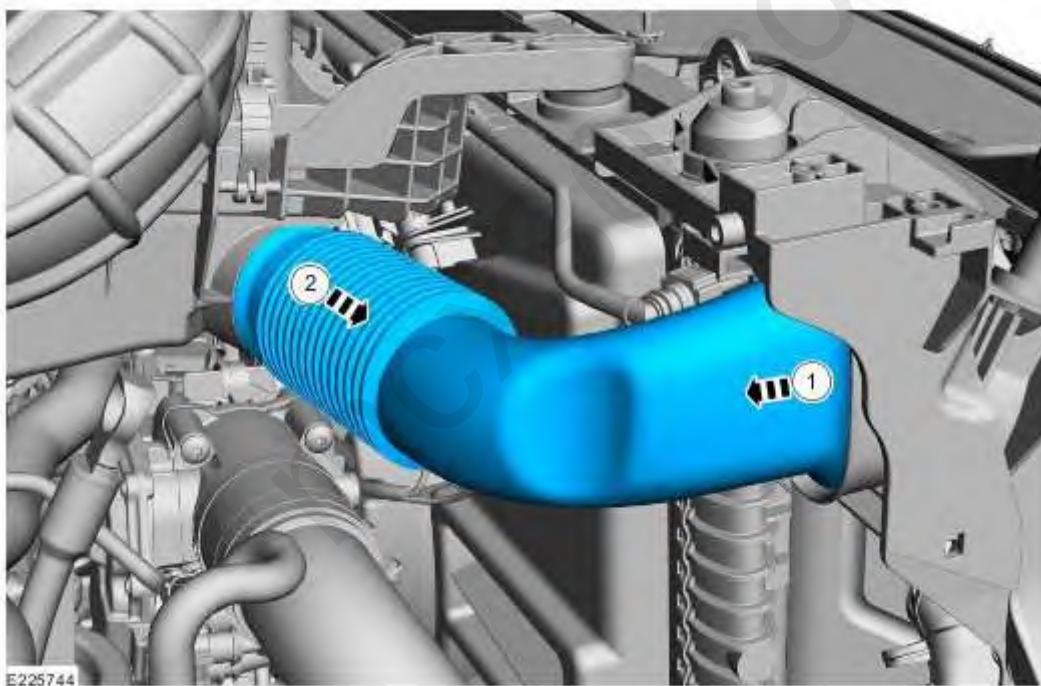

5.



E225745

Installation

1. To install, reverse the removal procedure.