


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
- 2.

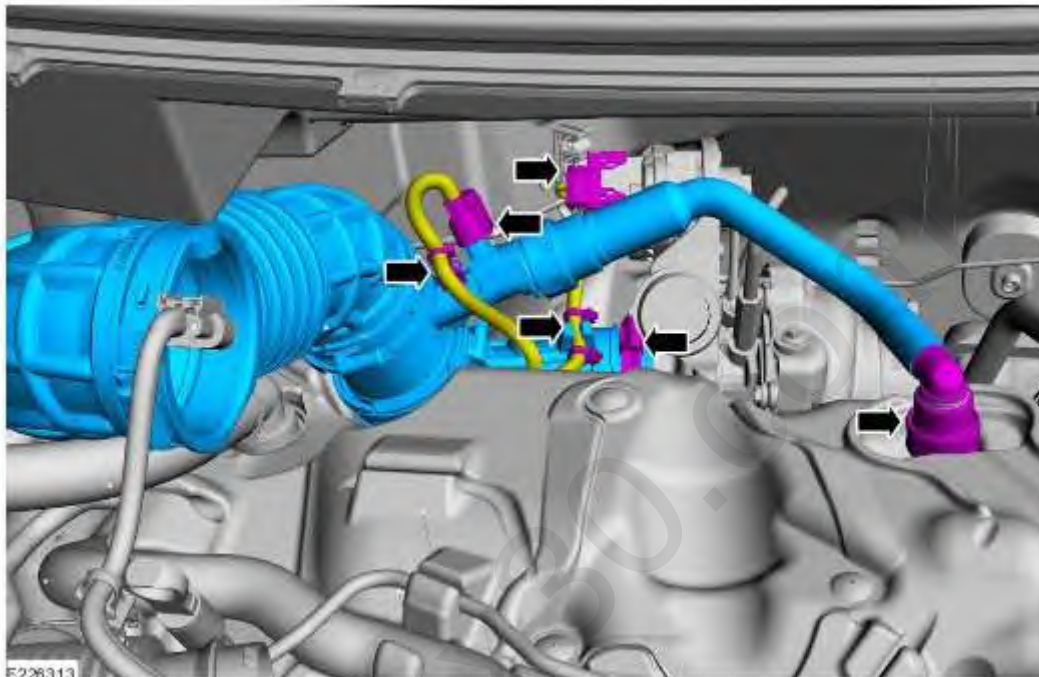


3. Torque: 10 Nm

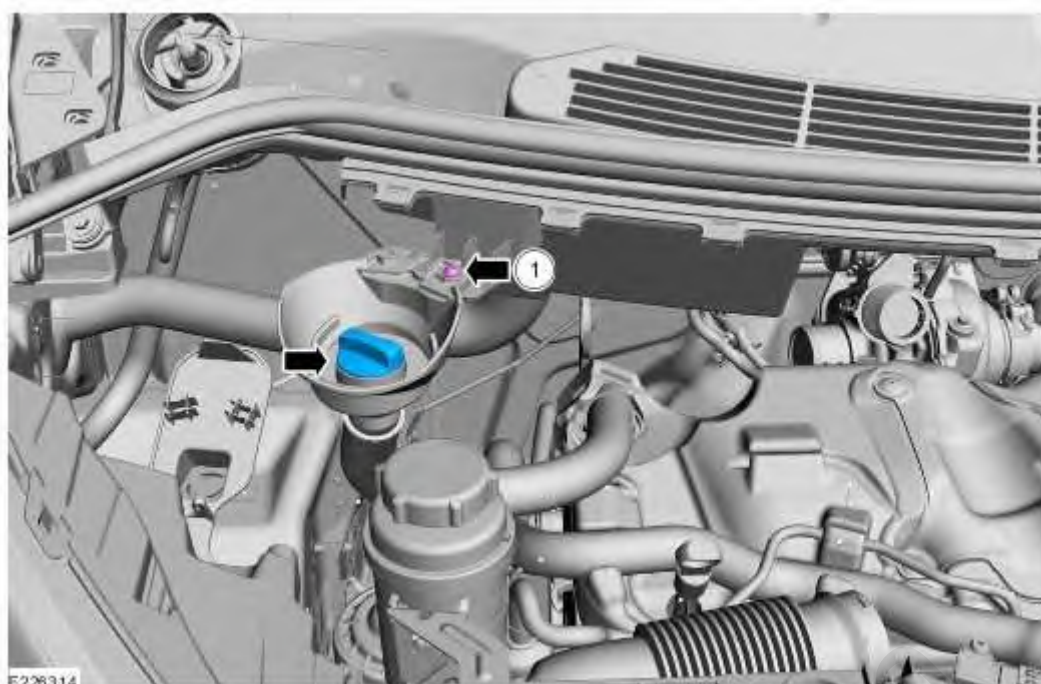


4.




5.

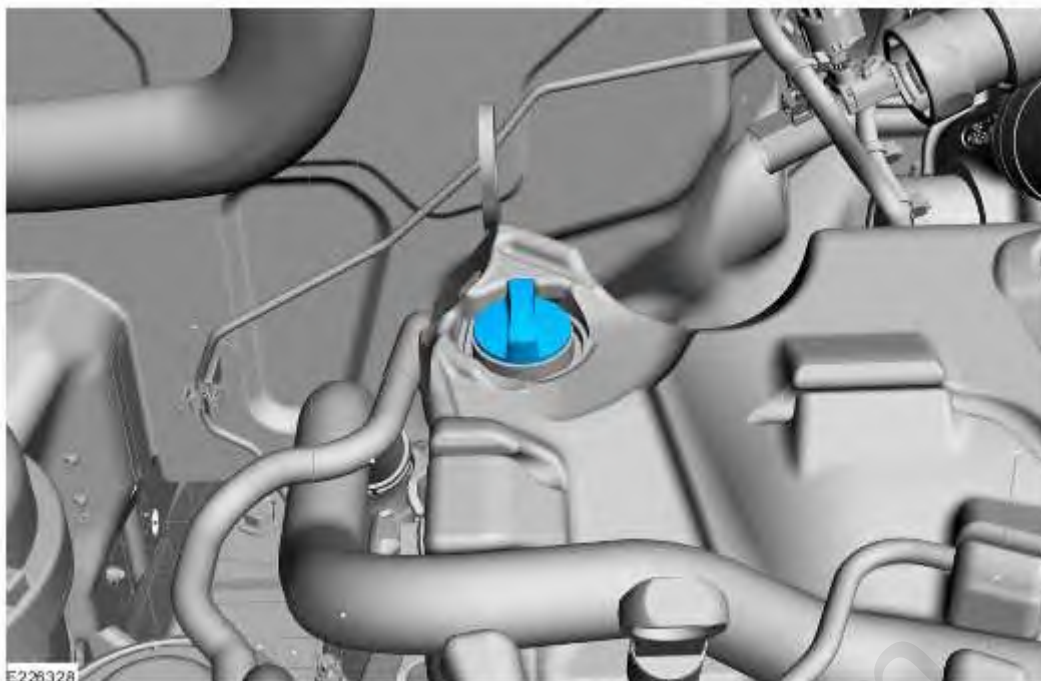

6.

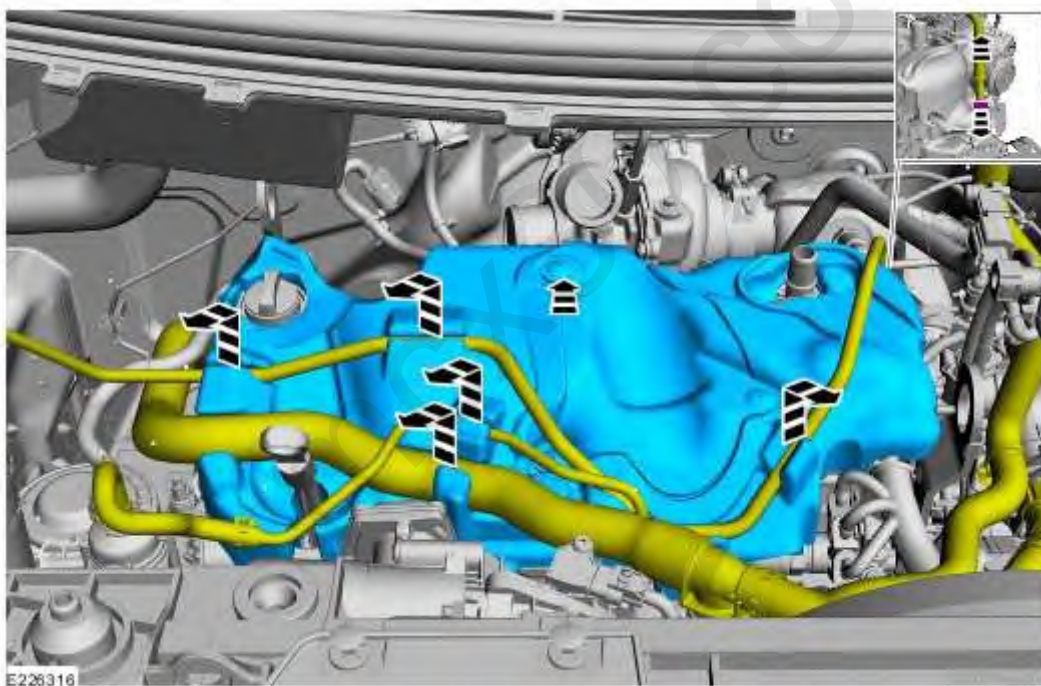

7. Torque: 8 Nm

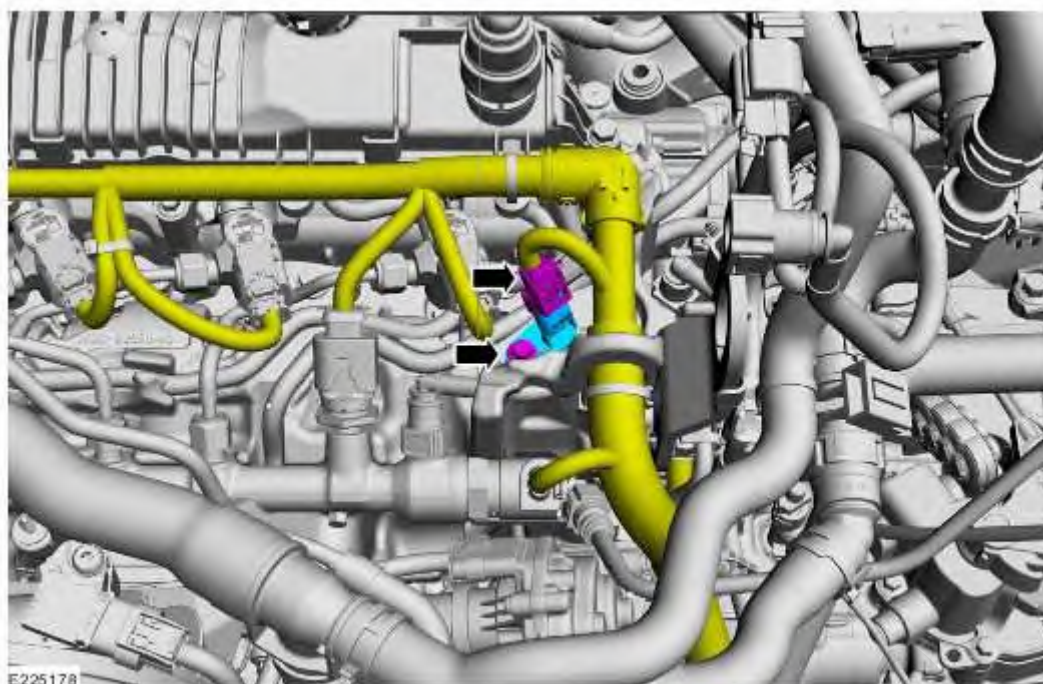

Installation

1. To install, reverse the removal procedure.