

Removal and Installation

General Equipment

Fluid Container

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. **NOTE:** Be prepared to collect escaping fluid.
NOTE: Use suitable paper to absorb any escaping fluid.

Use the General Equipment: [Fluid Container](#)

Torque:

1 10 Nm

2 10 Nm

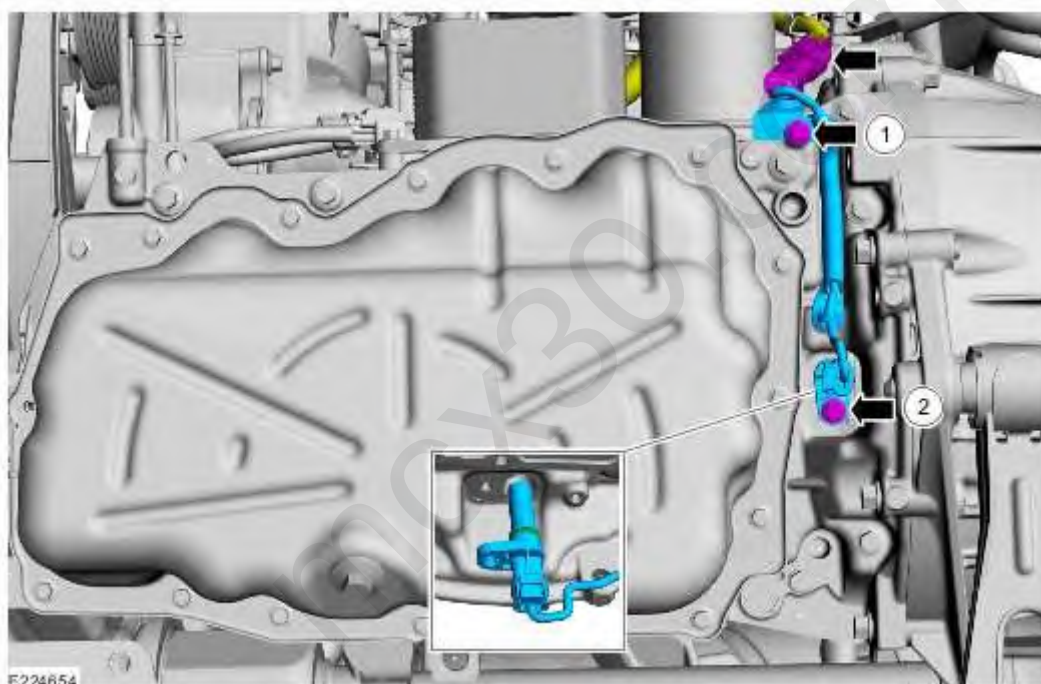

Installation

1. To install, reverse the removal procedure.