


## Removal and Installation


### Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Engine Cooling System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
- 3.

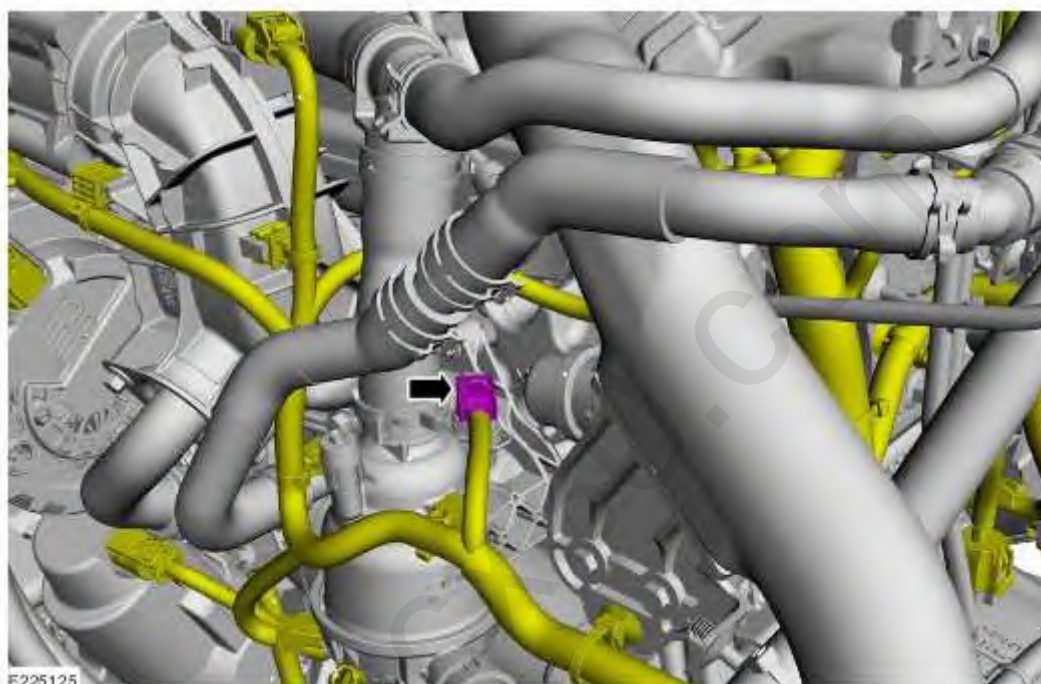

4. NOTE: Be prepared to collect escaping fluid.

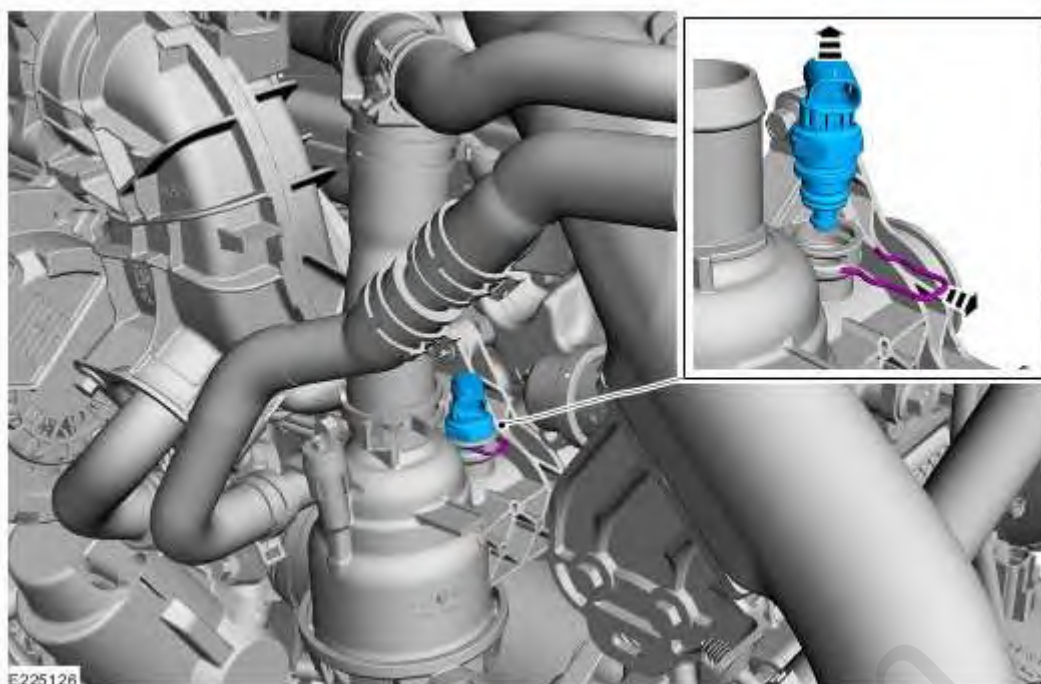

### Installation

1. To install, reverse the removal procedure.