


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Starter Motor](#) (303-06A Starting System, Removal and Installation).
2. Torque: 10 Nm

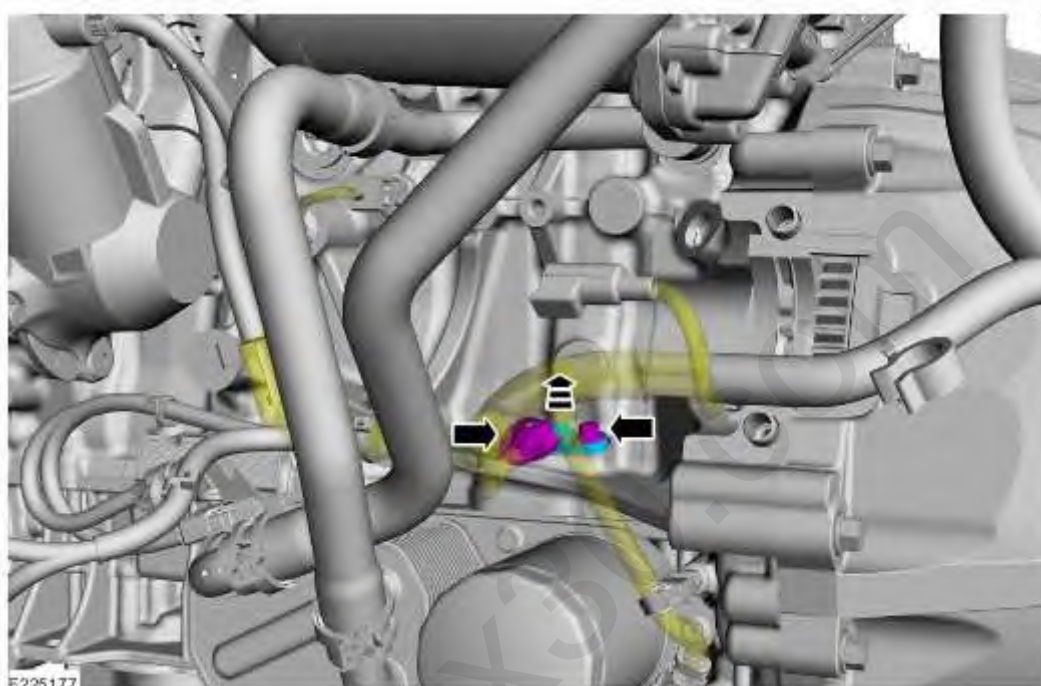

Installation

1. To install, reverse the removal procedure.