


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Generator - 2.0L EcoBlue \(77kW/105PS\) \(YL\)/2.0L EcoBlue \(96kW/130PS\) \(YM\)/2.0L EcoBlue \(125kW/170PS\) \(YN\)](#) (414-02 Generator and Regulator, Removal and Installation).
2. NOTE: Be prepared to collect escaping fluid.

Torque: 20 Nm

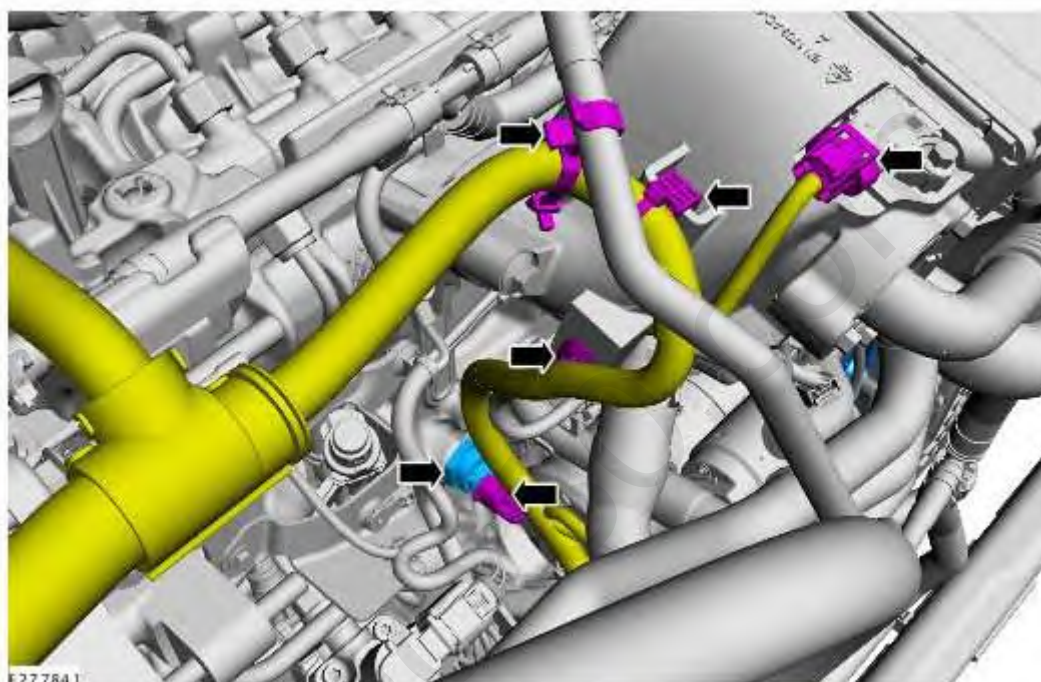

Installation

1. To install, reverse the removal procedure.