


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Fuel Rail](#) (303-04A Fuel Charging and Controls, Removal and Installation).
3. NOTE: Be prepared to collect escaping fluids.

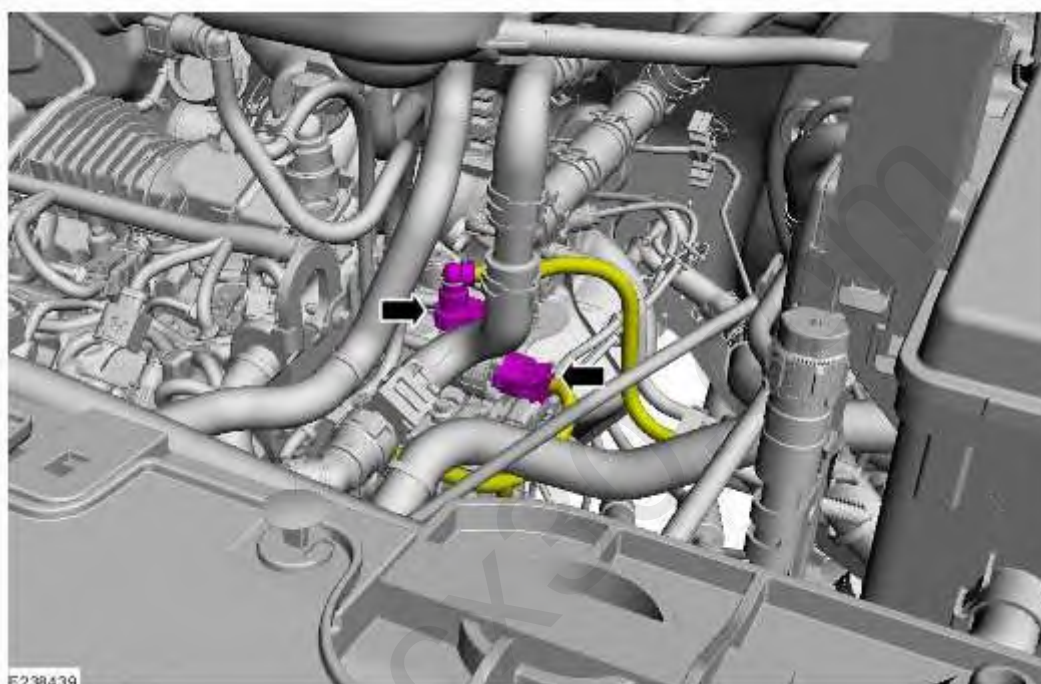

4. Torque: 10 Nm

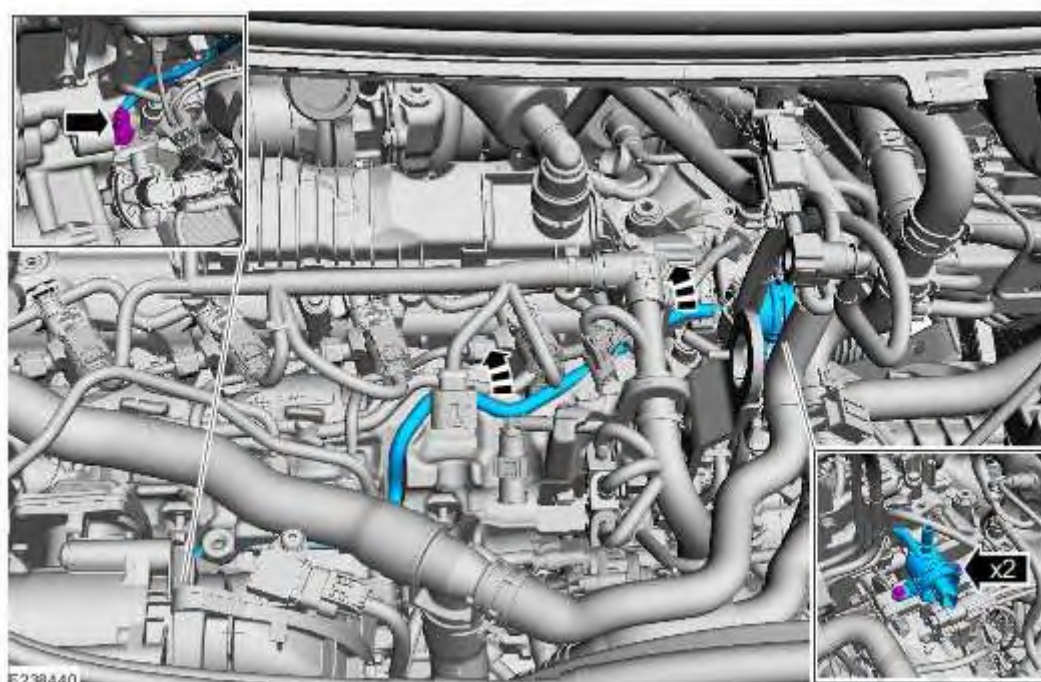

Installation

1. To install, reverse the removal procedure.