


## Removal and Installation

### Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. *Torque:*
  - 1: 48 Nm
  - 2: 10 Nm

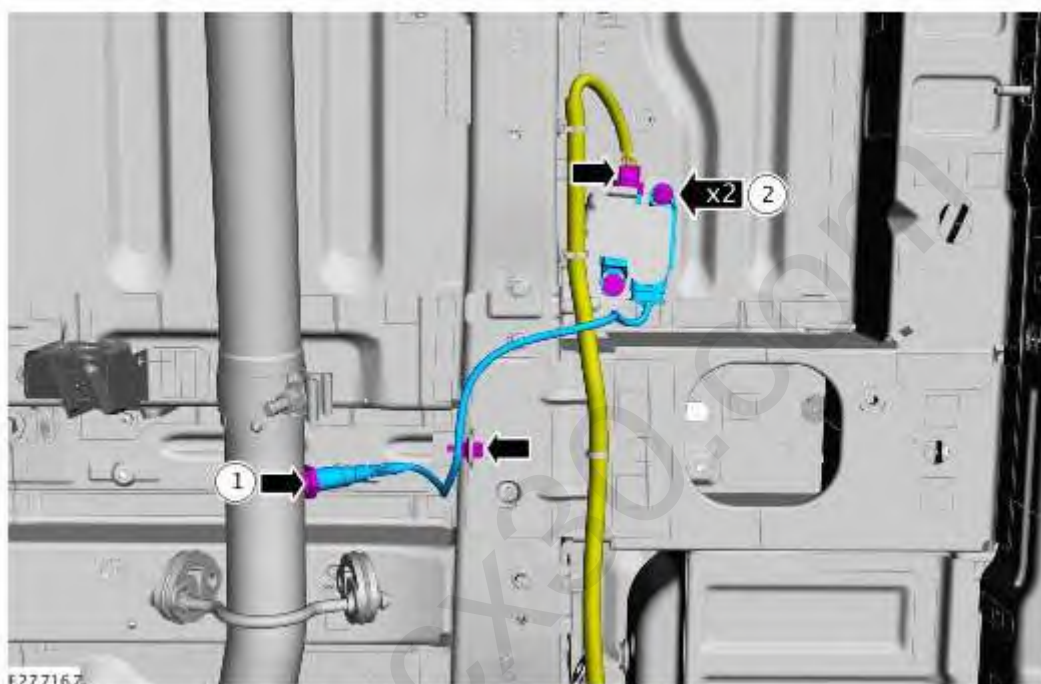

### Installation

1. To install, reverse the removal procedure.