

Removal and Installation

General Equipment

3.5 mm Drill Bit


Center Punch

Removal

1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
2. Left-hand side only.


Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).

3.

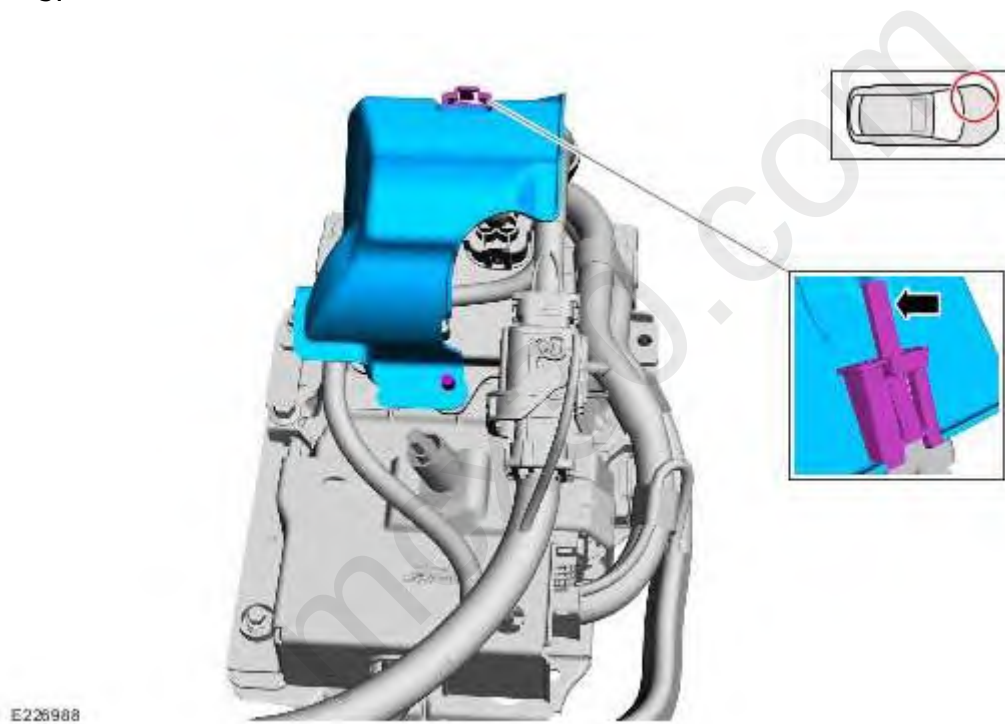


4. If equipped.

Use the General Equipments: [Center Punch](#), [3.5 mm Drill Bit](#)

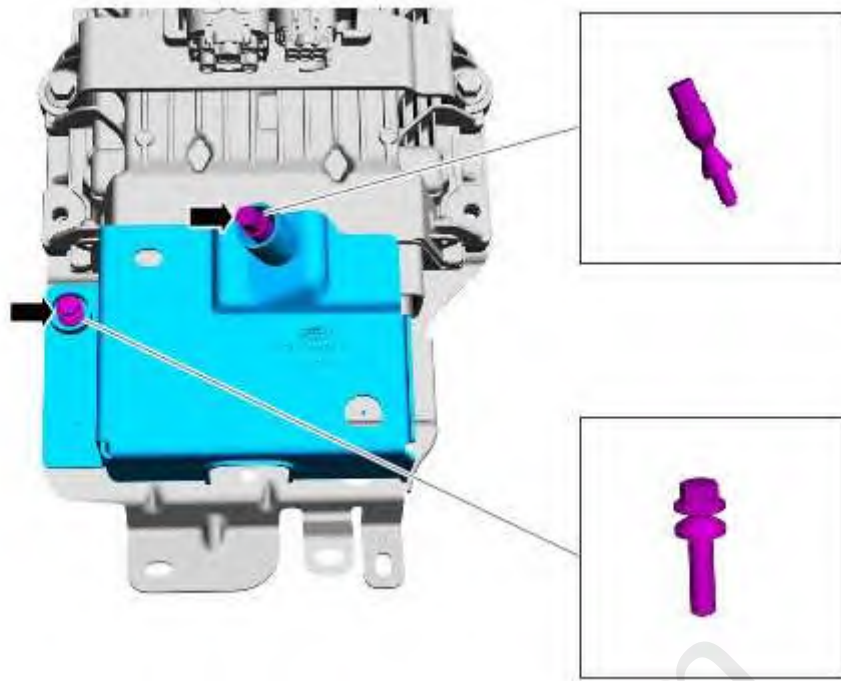


E171101

5.

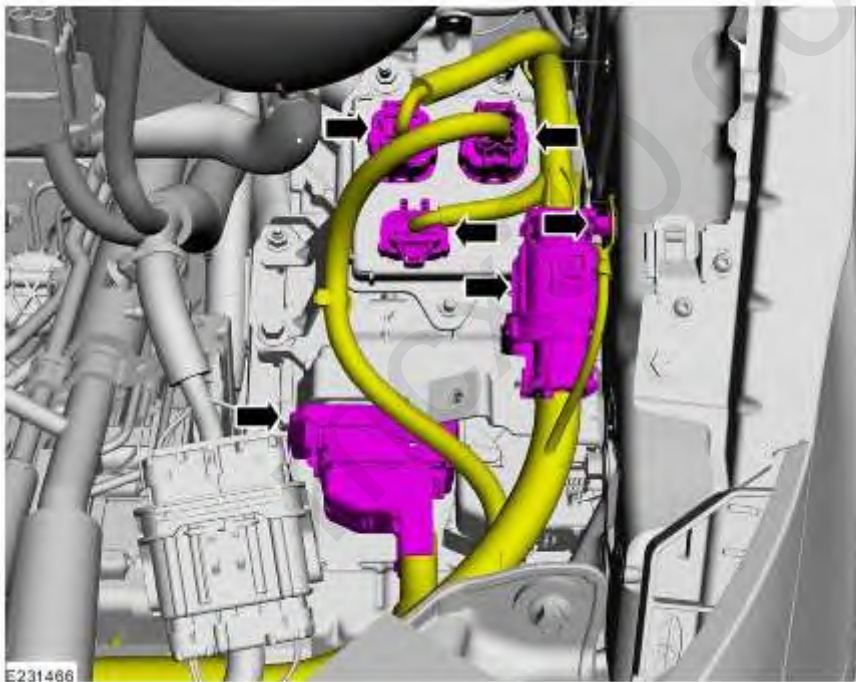


E231466


6.

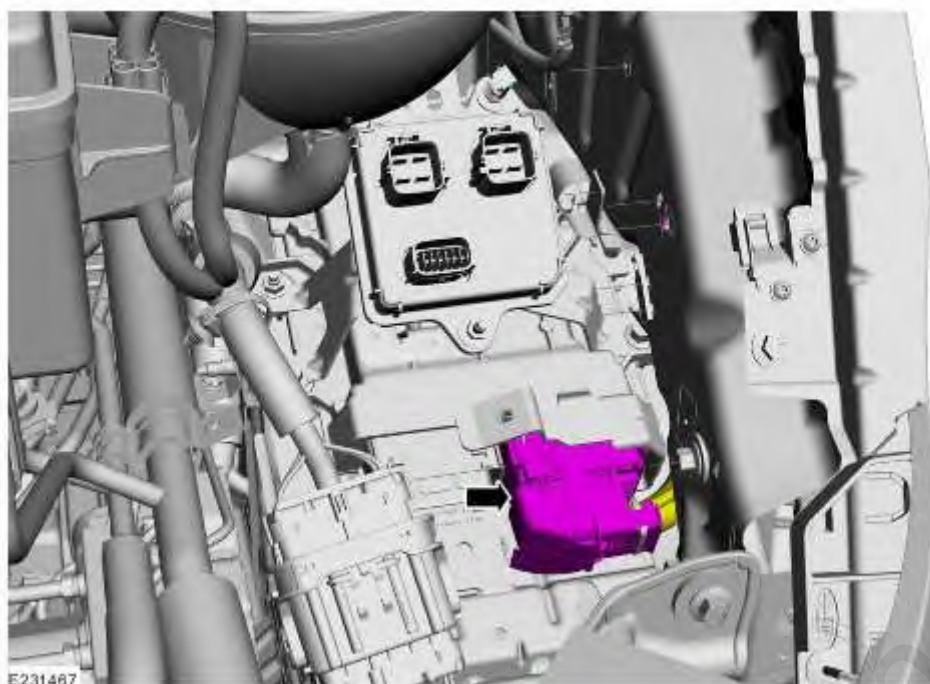

7.

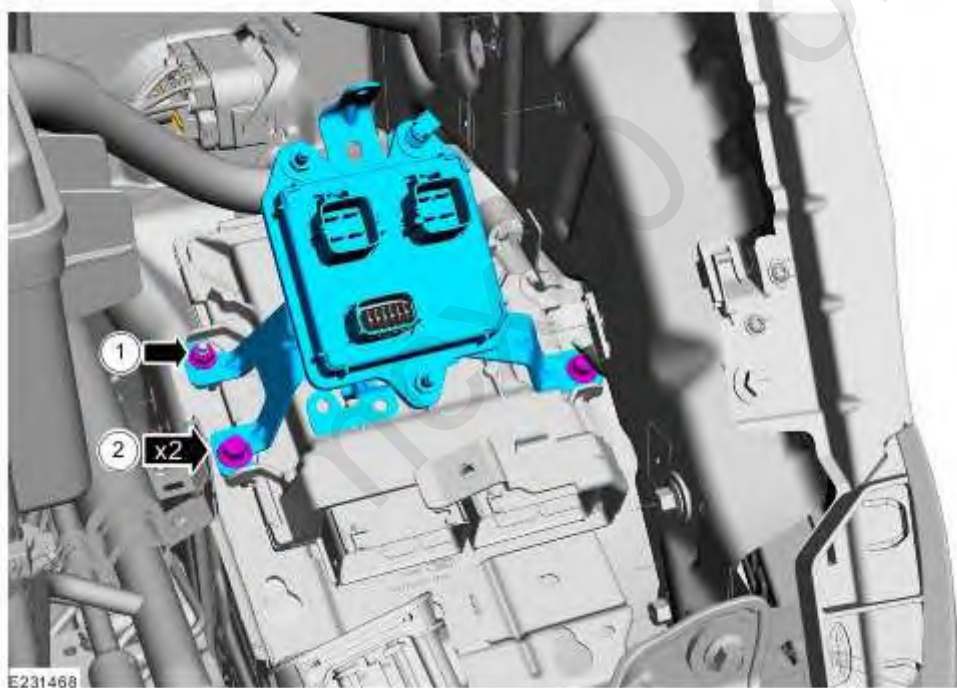


8.

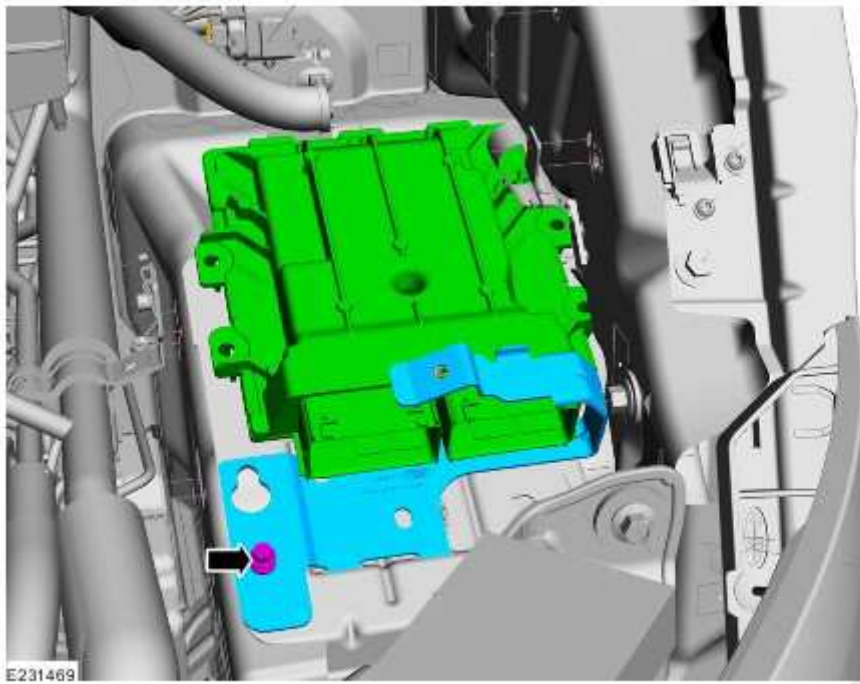


Installation


1.

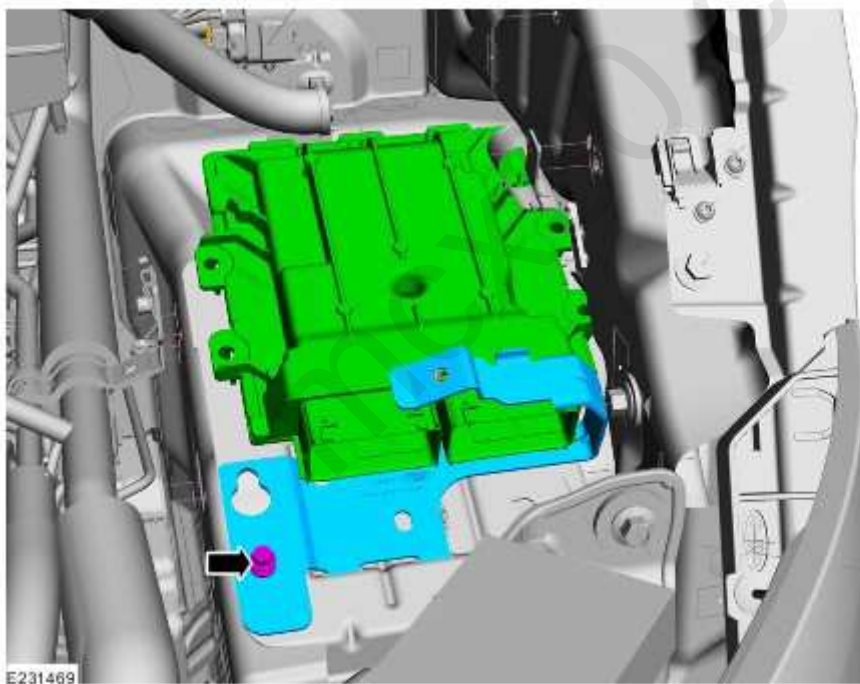


2. Torque: 10 Nm

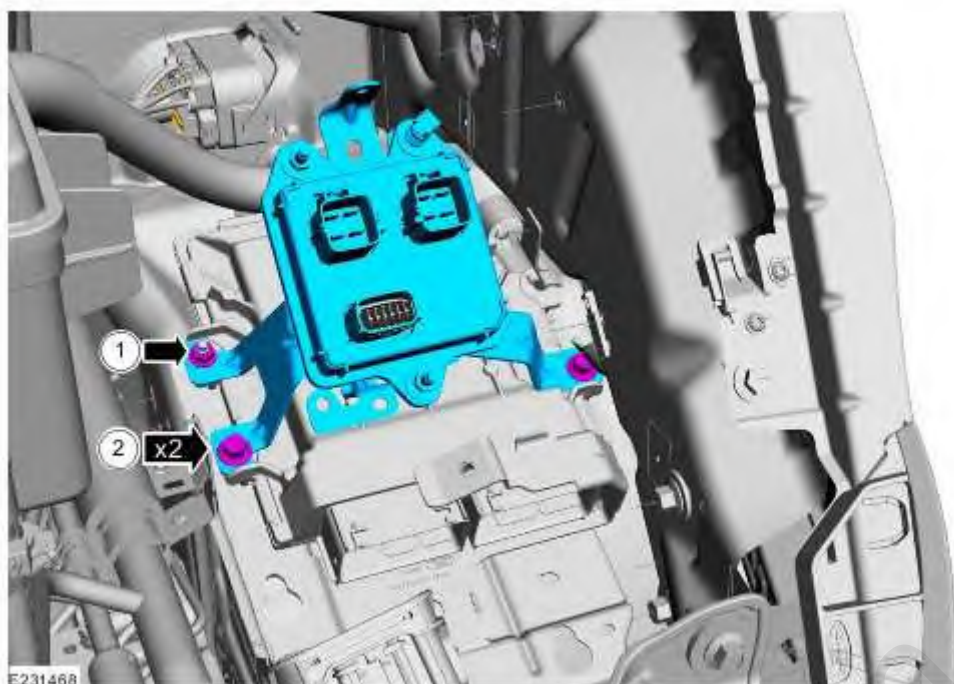


3.

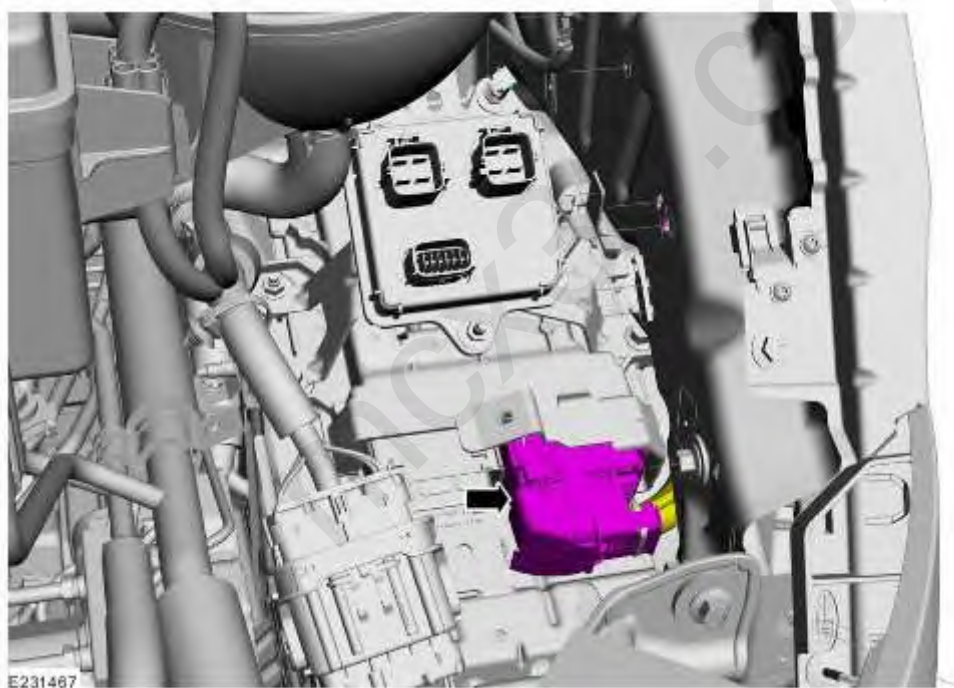

4. Torque: 10 Nm


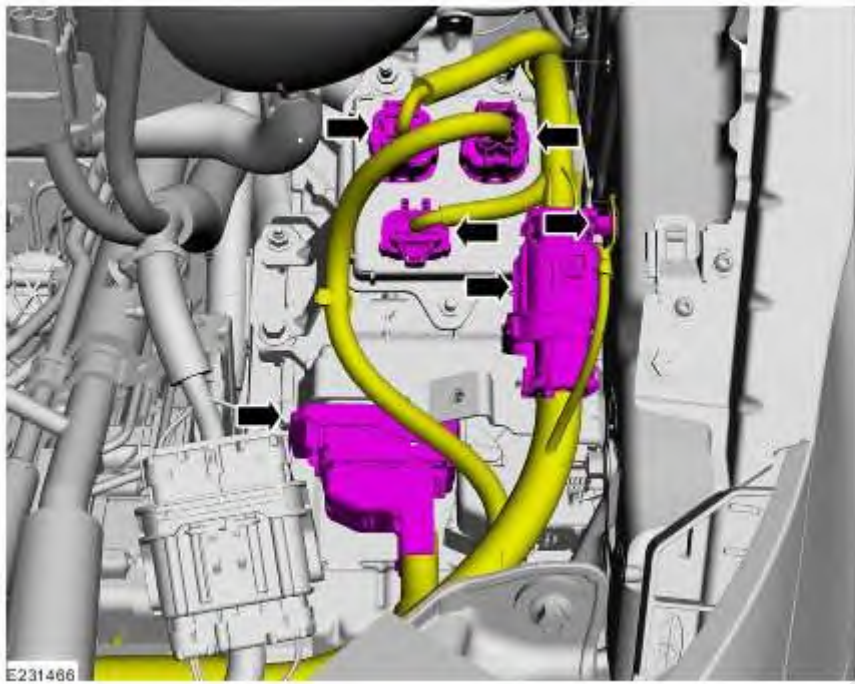


5. Tighten the shear bolt until the head is sheared off.

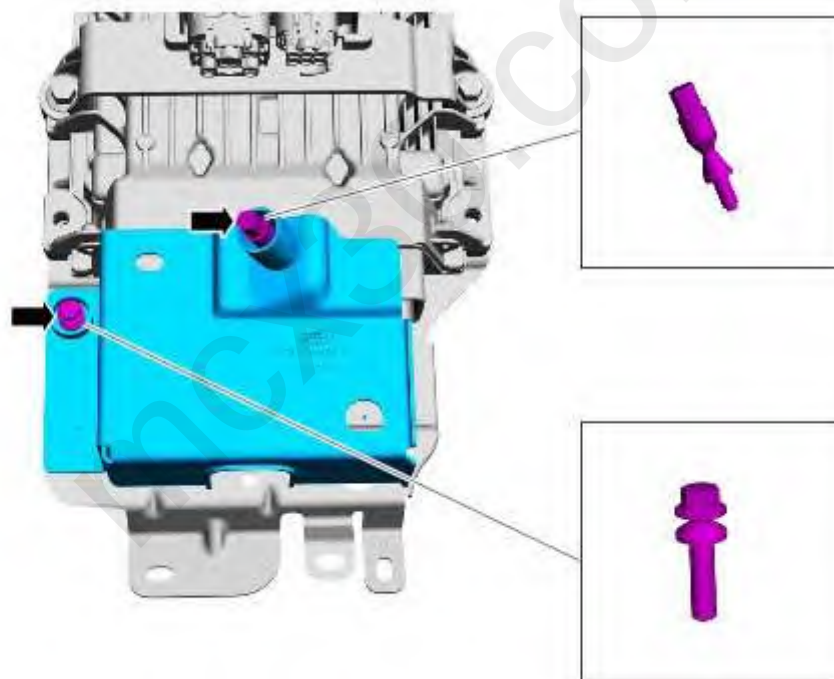

6.

E226988

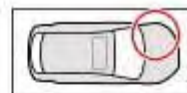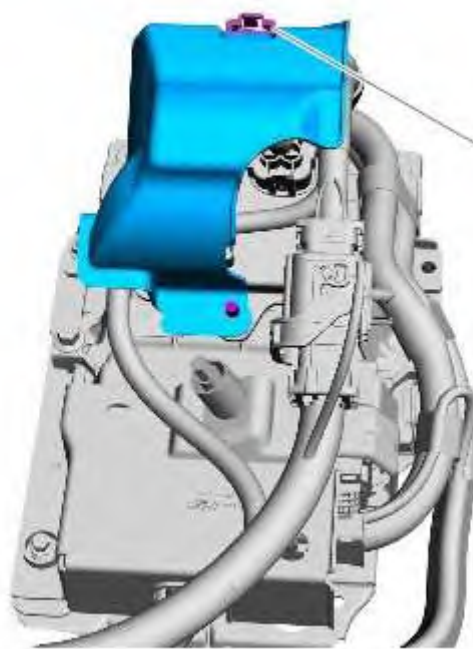

7. Left-hand side only.

Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).

8. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).