


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. *Torque:* 35 Nm

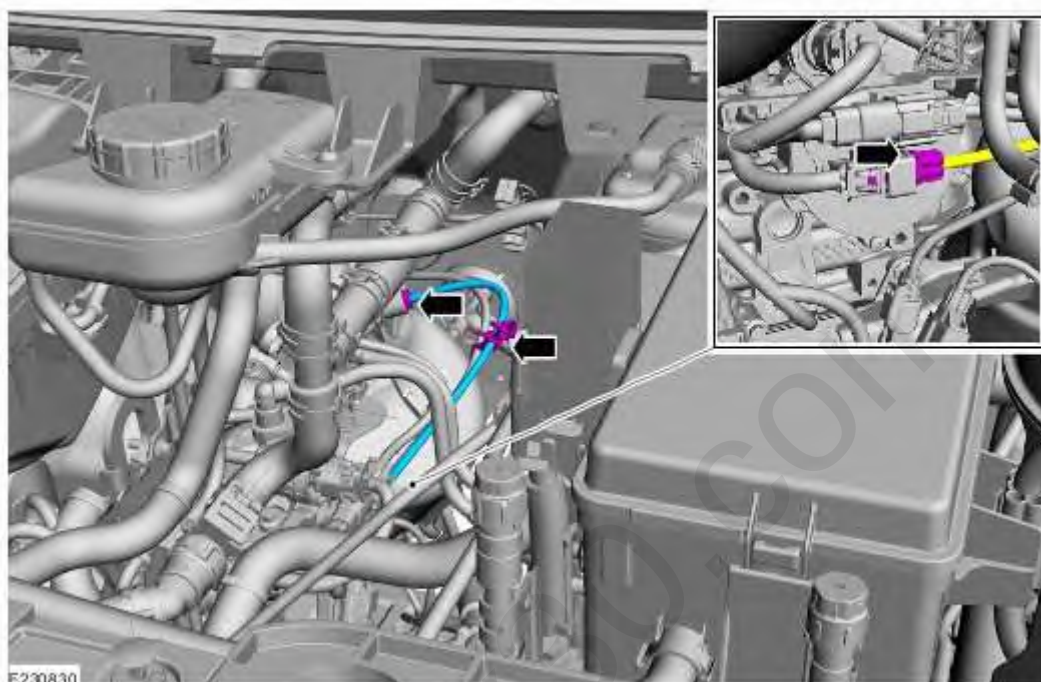

Installation

1. To install, reverse the removal procedure.