

Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. 


 **WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
- 3.

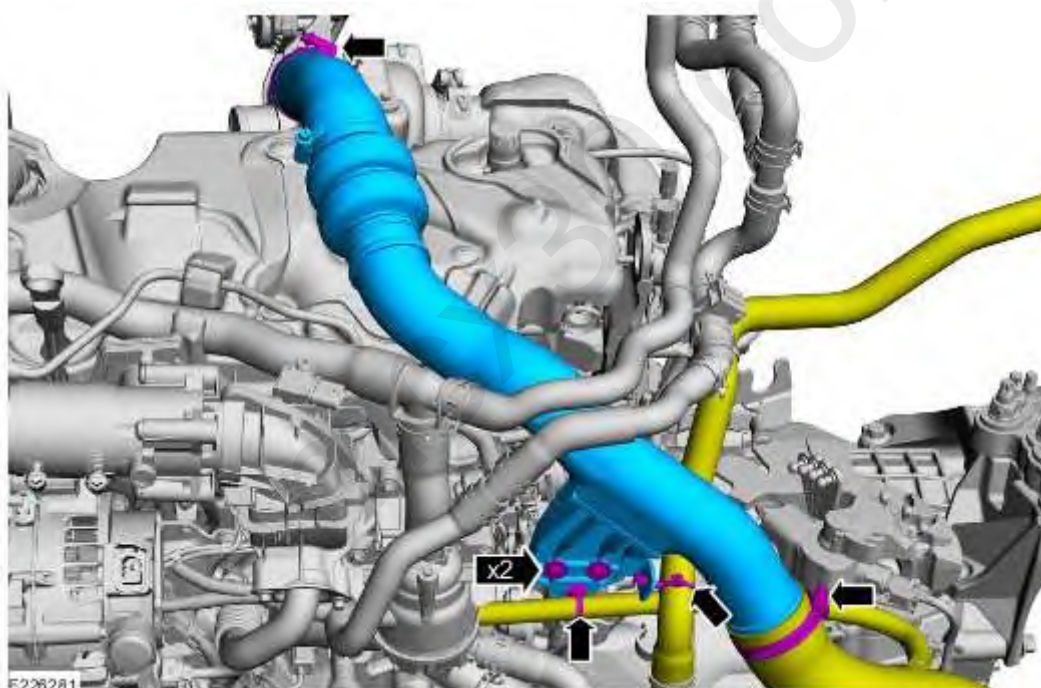


- 4.

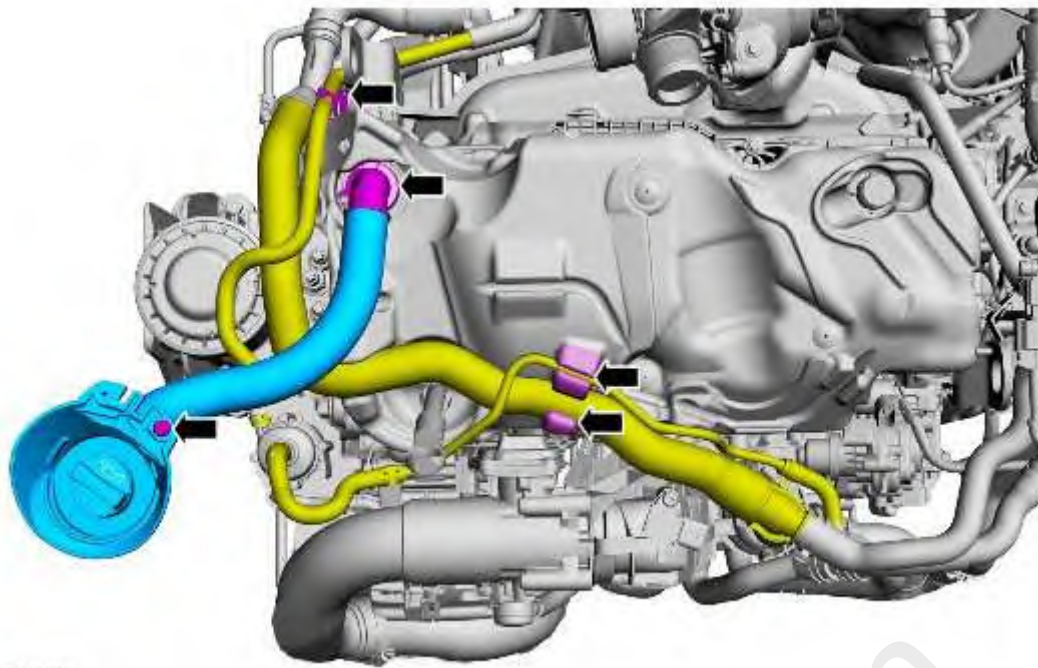


E226283

5.

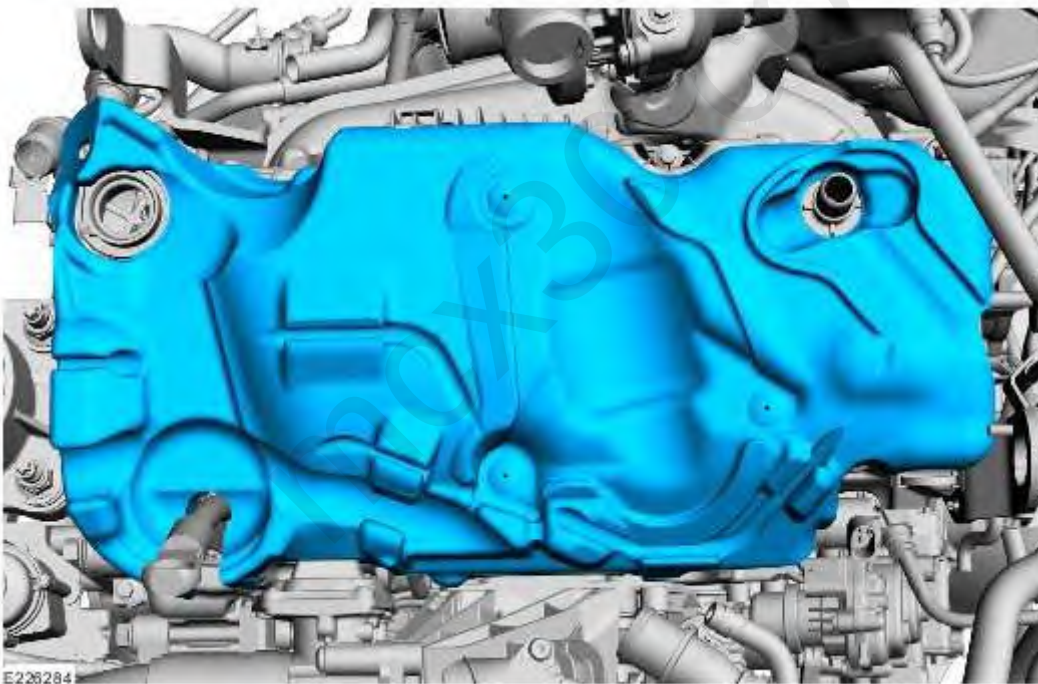


E226284

6.  NOTICE: Make sure that the area around the component is clean and free of foreign material.

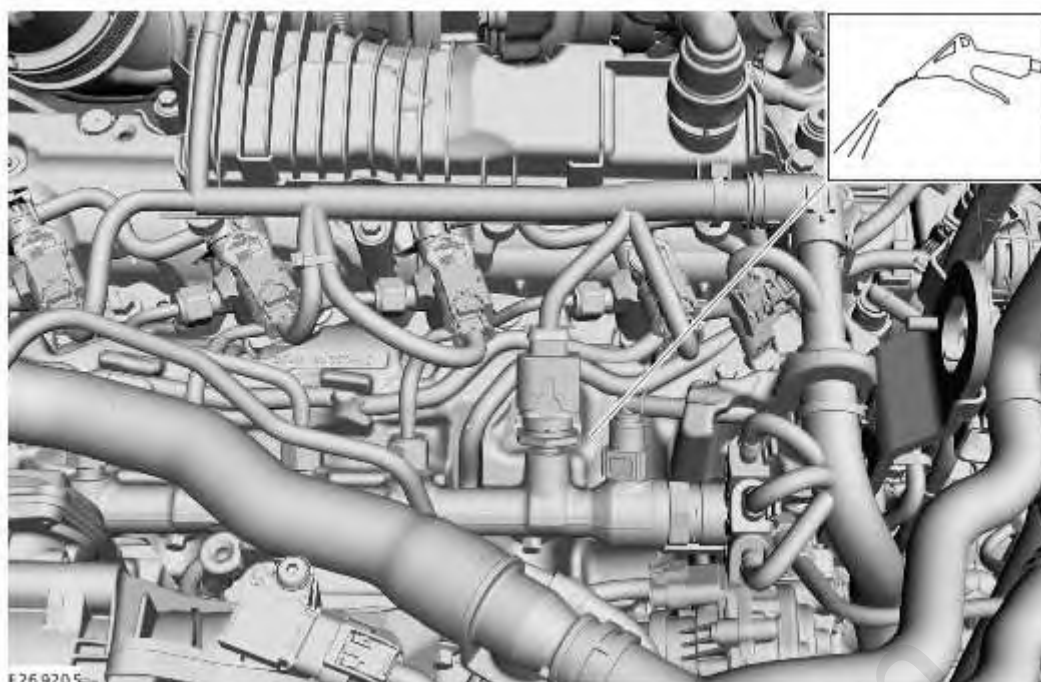


7.

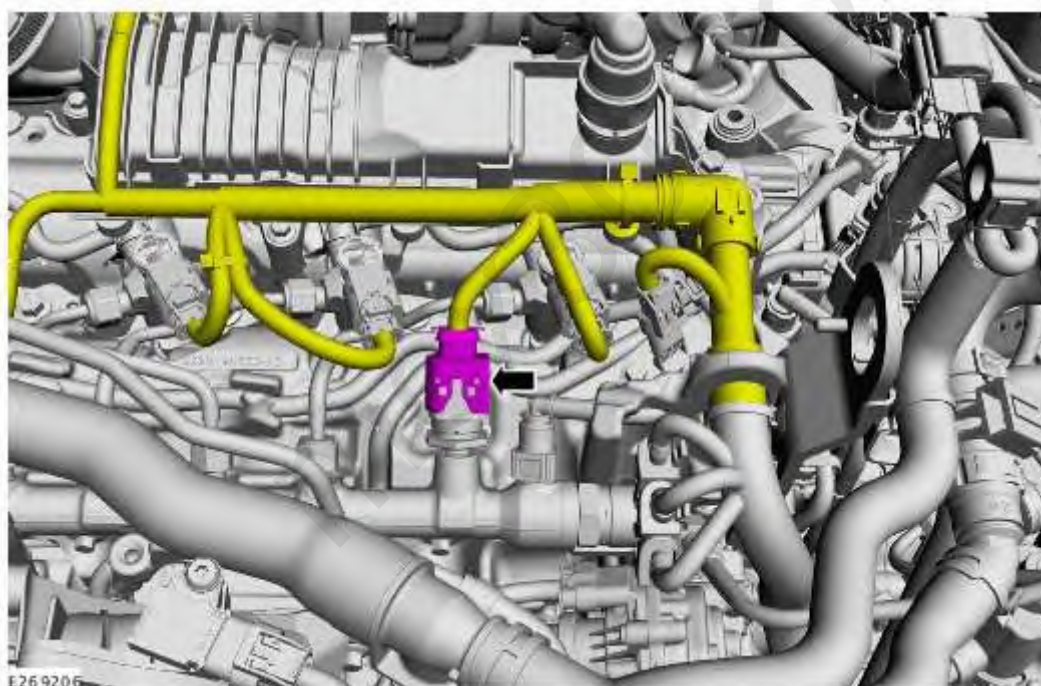

8.  **NOTICE:** Extreme cleanliness must be exercised when handling the component.

Torque: 30 Nm

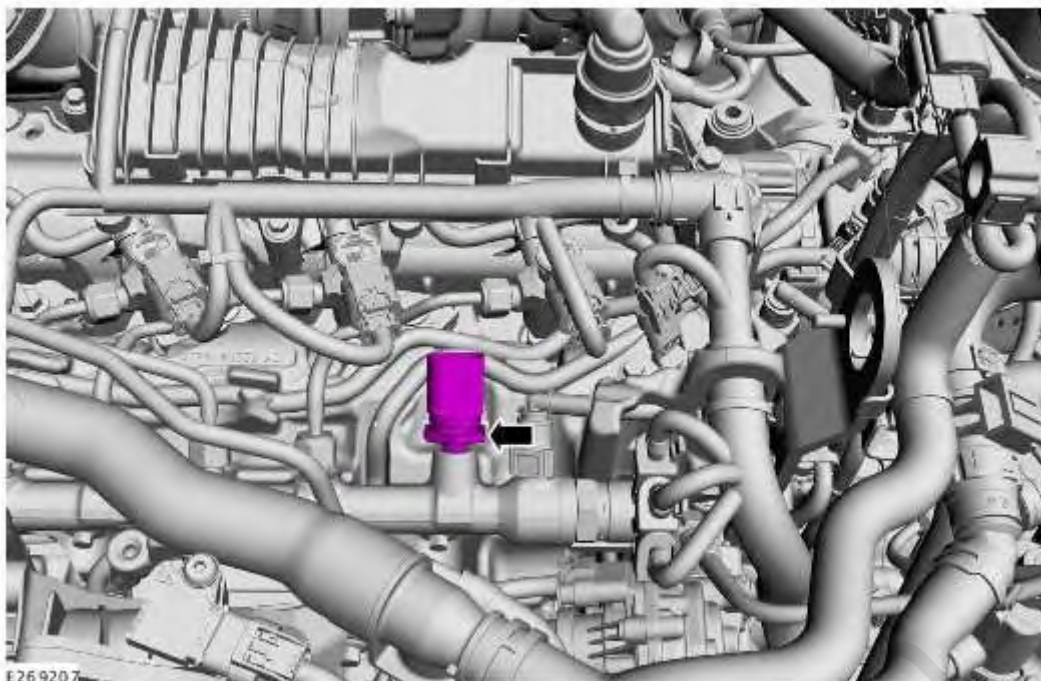

Installation

1. To install, reverse the removal procedure.