


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
2. *Torque: 8 Nm*

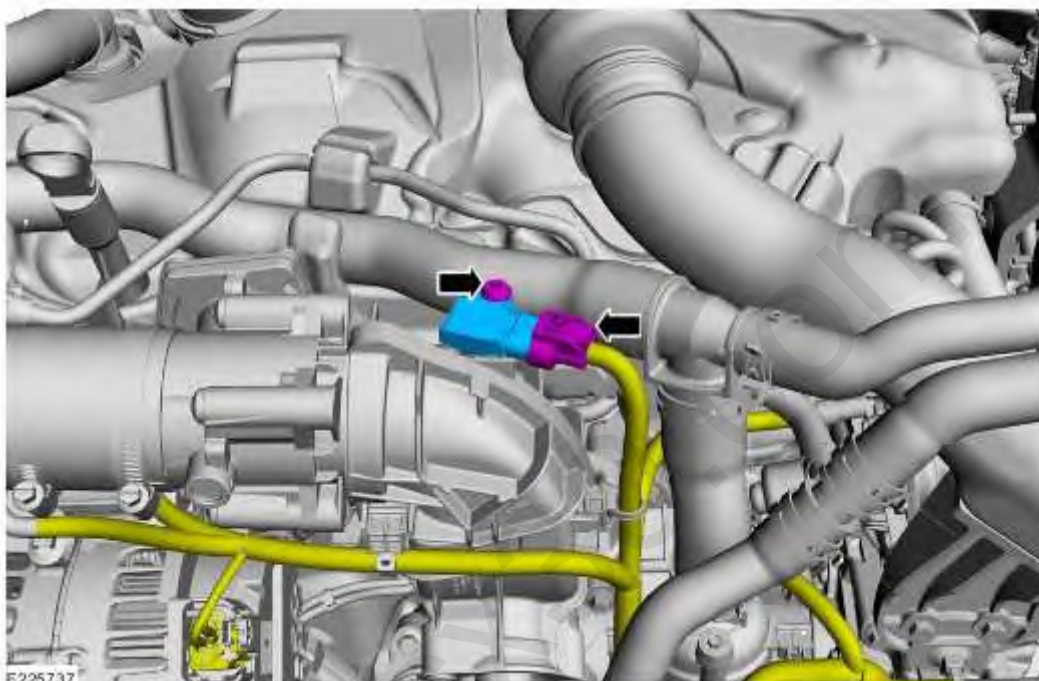

Installation

1. To install, reverse the removal procedure.