

General Procedures

General Equipment


Ford Diagnostic Equipment

Materials

Name	Specification
Automatic Transmission Fluid	MERCON® LV WSS-M2C938-A


Draining

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove engine undershield - If equipped.
3. **NOTE:** Be prepared to collect escaping fluid.

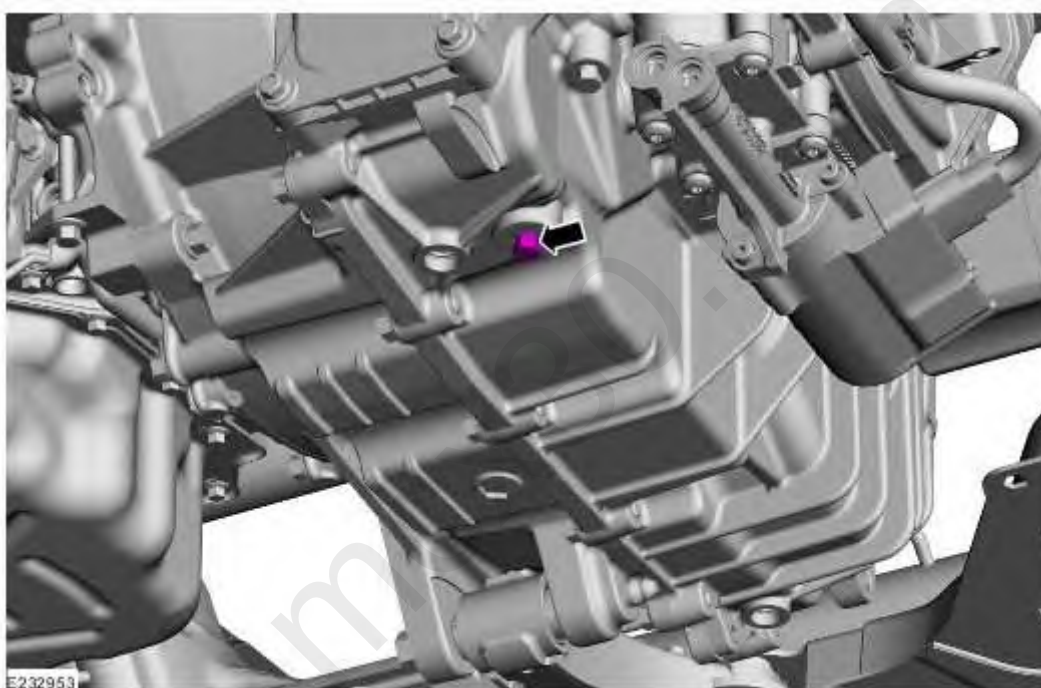

Filling


1. **Torque:** 12 Nm

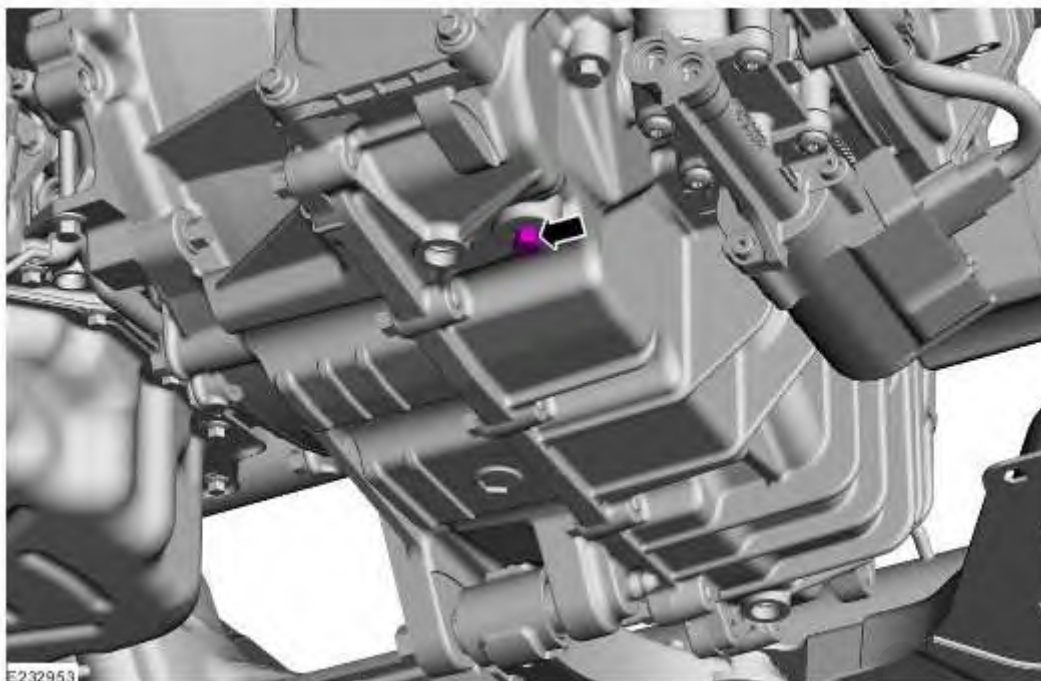


2. Install engine undershield - If equipped.
3. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
- 4.



5. Refer to: [Specifications](#) (307-01 Automatic Transmission, Specifications).
Material: [MERCON® LV](#) ; [WSS-M2C938-A](#) (Automatic Transmission Fluid)

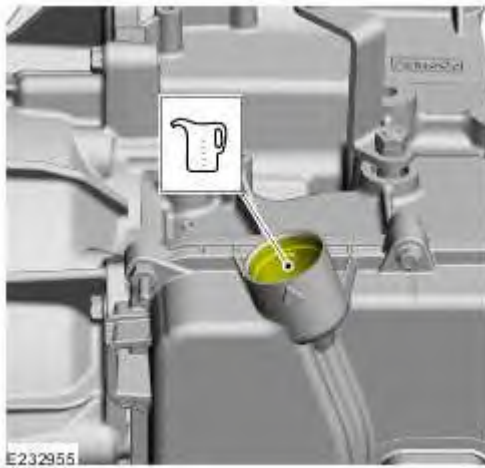


6. Start and run the engine at idle.
7. Fully apply the brake pedal and parking brake.
- 8.

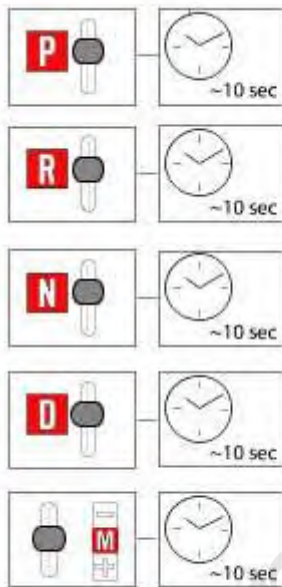

E232956



9. Use the General Equipment: [Ford Diagnostic Equipment](#)

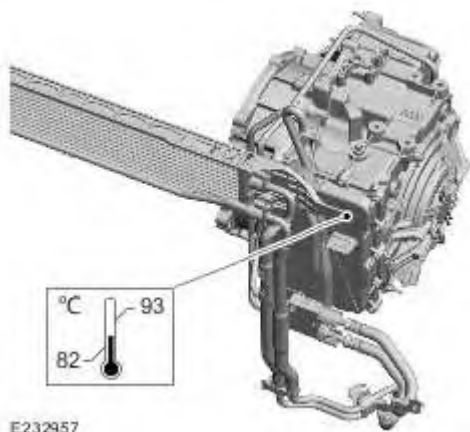


10.



E162476

11.

1. Material: [MERCON® LV ; WSS-M2C938-A \(Automatic Transmission Fluid\)](#)

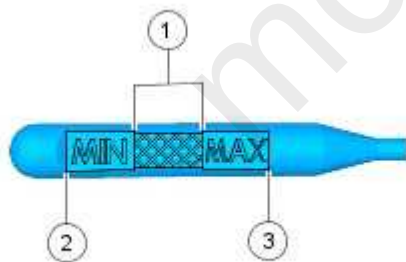

E150605

12.



13.

