

Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Main Control Valve Body](#) (307-01 Automatic Transmission, Removal and Installation).
2. *Torque:* 12 Nm



Installation

1. To install, reverse the removal procedure.